


# MODEL G2904 3/4 HP ELECTRIC MOTOR INSTRUCTIONS

For questions or help with this product contact Tech Support at (570) 546-9663 or techsupport@grizzly.com

### **Model G2904 Specifications**

Power	34 HP
Cycle	60 Hz
Voltage	110V/220V
Prewired	110V
Amps	9.6A/4.8A
Speed	3450 RPM
Phase	Single-Phase
Class	E

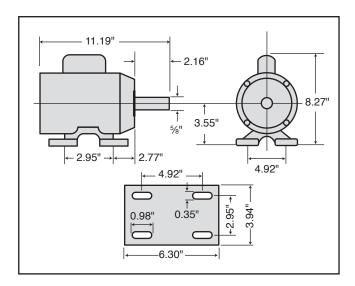




## **AWARNING**

Electrocution or fire could result if this motor is not grounded correctly or if your wire connections do not comply with local and state codes. Ensure compliance by checking with a qualified electrician!

#### **Replaceable Parts**

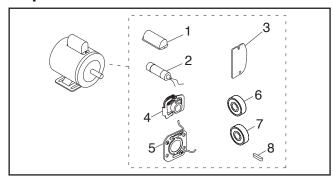


#### **REF PART # DESCRIPTION**

1	P2904001	S CAPACITOR COVER
2	P2904002	S CAPACITOR 200M 125V 1-3/8 X 2-3/8
3	P2904003	WIRING COVER PLATE
4	P2904004	CENTRIFUGAL SWITCH 5/8-3450
5	P2904005	CONTACT PLATE
6	P2904006	BALL BEARING 6202ZZ
7	P2904007	BALL BEARING 6203ZZ
8	P2904008	KEY 3/16 X 3/16 X 1-1/4

## **Making Wire Connections**

 If you are unsure how to attach wires to terminals, DO NOT continue. Contact an electrician for assistance. Connecting wires improperly may cause them to come loose or contact other wires, which can cause electrocution, fire, or a short.





## **AWARNING**

Disconnect power when replacing motor. Failure to do this may result in serious personal injury.

COPYRIGHT © JULY, 2012 BY GRIZZLY INDUSTRIAL, INC., REVISED FEBRUARY, 2025 (LW) NO PORTION OF THIS INSTRUCTION SHEET MAY BE REPRODUCED IN ANY SHAPE OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC. (FOR MODELS MFD. SINCE 02/25) #KN15080 PRINTED IN TAIWAN

## **G2904 Wiring Diagram**

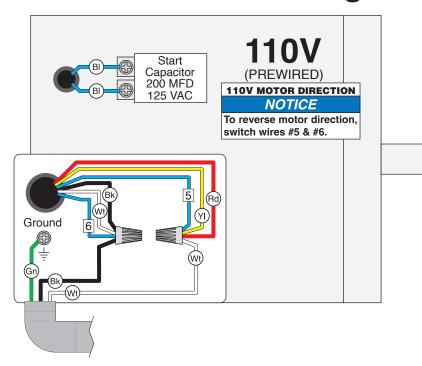

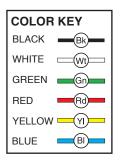

#### **NOTICE**

The motor wiring shown here is current at the time of printing, but it may not match your motor. Always use the wiring diagram inside the motor junction box.



