

MAINTENANCE

General

Regular periodic maintenance on your Model H3120 Palm Sander will ensure its optimum performance. Make a habit of inspecting your sander each time you use it. Check for the following conditions and repair or replace when necessary:

1. Loose fasteners.
2. Worn switch.
3. Worn or damaged cords and plugs.
4. Worn or damaged sanding pad.
5. Any other condition that could hamper the safe operation of this machine.

Keeping Tool Clean

Your Model H3120 Palm Sander will give you years of trouble free service if you keep it clean and free of built-up dust or grime. Ensure that no air passages get blocked. If they do, blow them out with compressed air. **WARNING: Wear safety glasses when cleaning tool with compressed air.**

Plastic parts can easily be cleaned with a damp cloth, but never use water to clean any electrical parts. Solvents should also be avoided on plastic because of the possibility of damage.

If possible, use a scraper to remove glue or sap from your work; these elements may hinder the effectiveness of the abrasive sheets and cause unnecessary build-up of grime on the sander.

Repair and Service

All quality tools will eventually wear from normal use. Since this sander is encased in an insulated plastic cover, leave repair and service issues to a qualified service technician. This includes brush replacement, lubrication or any other internal operation.

⚠ WARNING

Disassembly and improper reassembly of this device can result in electrical shock danger. Always have this device serviced by a qualified electrical repair technician. Serious injury will result.

For replacement parts, find the part you are looking for below and phone (570) 546-9663.

<u>REF</u>	<u>PART#</u>	<u>DESCRIPTION</u>
1	PH312001	MOTOR BRUSH
2	PH312002	SWITCH
3	PH312003	HOOK & LOOP PAD
4	PH312004	DUST BAG
5	PH312005	VACUUM ADAPTER
6	PH312006	CARRYING CASE

