BULLETS.COM™

MODEL T10730
48" BIRCH
RELOADING BENCH
INSTRUCTIONS

Introduction

Made of sturdy birch, this bench is ideal for reloading and general gunsmith work.

Component Inventory Qty

A. Leg Tops (Part # PT10730001)..... 2
B. Bench Top (Part # PT10730002)..... 1
C. Rear Rail (Part # PT10730003)..... 1
D. Front Rail w/Logo (Part # PT10730004)..... 1
E. Leg Braces (Part # PT10730005)..... 2
F. Leg Posts (Part # PT10730006)..... 4

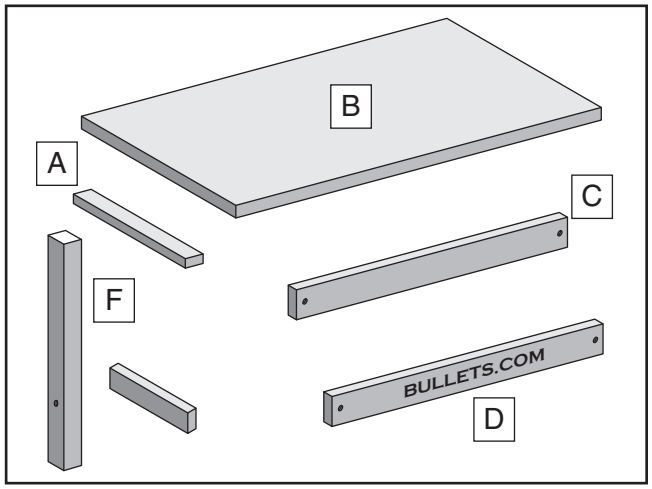

Hardware Inventory Qty

G. Low-Head Wood Screws ¼" x 2" (Part # PT10730007) 4
H. Low-Head Cap Screws 5/16"-18 x 3½" (Part # PT10730008) 4
I. Barrel Nuts 5/16"-18 (Part # PT10730009).... 4
J. Flat Washers 5/16" (Part # PT10730010) ... 12
K. Hex Wrench 4mm (Part # PT10730011)..... 1
L. Hex Wrench 5mm (Part # PT10730012)..... 1
M. Wooden Dowels 5/16" x 1¼" (Part # PT10730013) 8
N. Low-Head Cap Screws 5/16"-18 x 1½" (Part # PT10730014)..... 4
O. Phillips Head Wood Screws #6 x 1½" (Part # PT10730015) 4

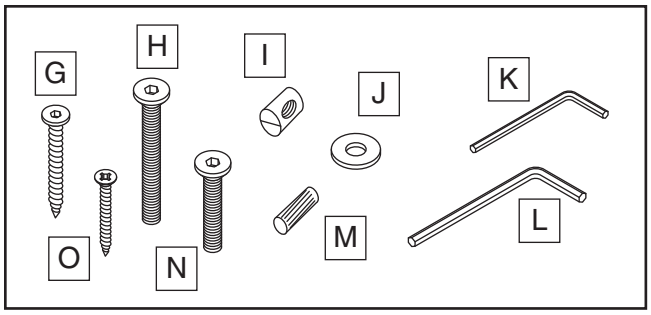

Safety & Correct Use

- Do not apply an unbalanced load on the bench that could result in tipping.
- Keep unsupervised children away from bench.
- Do not stand or climb on bench.
- Do not use bench outdoors or in wet or damp locations.
- Do not leave items containing water, oil, paint, or solvents on bench.
- Do not weld on bench.
- Clean bench with warm soapy water and wipe dry.

COPYRIGHT © OCTOBER, 2013 BY GRIZZLY INDUSTRIAL, INC.
NO PORTION OF THIS MANUAL MAY BE REPRODUCED IN ANY SHAPE OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.
#TS16035 PRINTED IN CHINA V1.10.13

Assembly

Items Needed **Qty**
High-Quality Wood Glue 1

1. Apply wood glue on dowels and attach leg braces to leg posts, so angled screw holes face bottom of leg posts.

2. Secure each brace with (2) #6 x 1½" wood screws through angled holes and into leg posts.

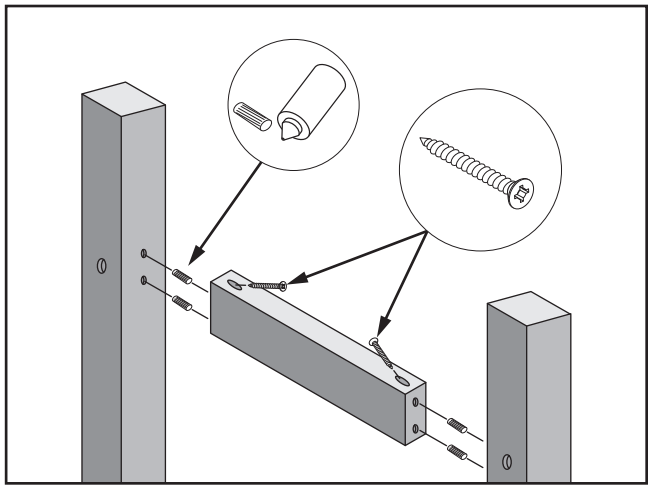

3. Attach a leg top to each leg assembly with (2) 5/16"-18 x 1½" low-head cap screws and (2) 5/16" flat washers, as shown below.

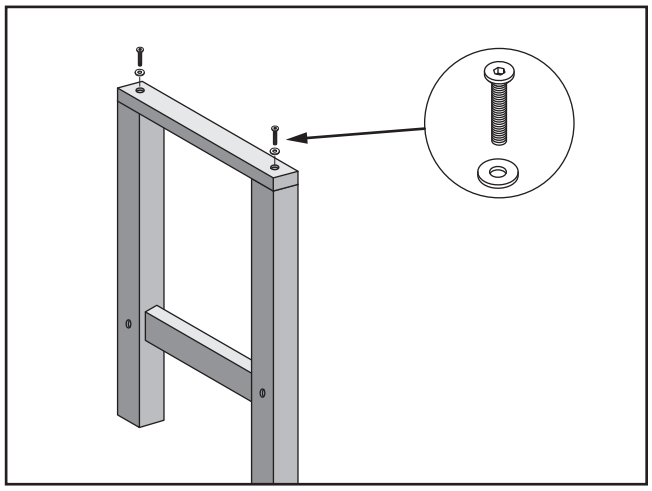

4. Place bench top upside-down on flat, protected surface.

5. Position leg assemblies, as shown below, so screw holes align with bench top, then secure with (4) ¼" x 2 low-head wood screws and (4) 5/16" flat washers.

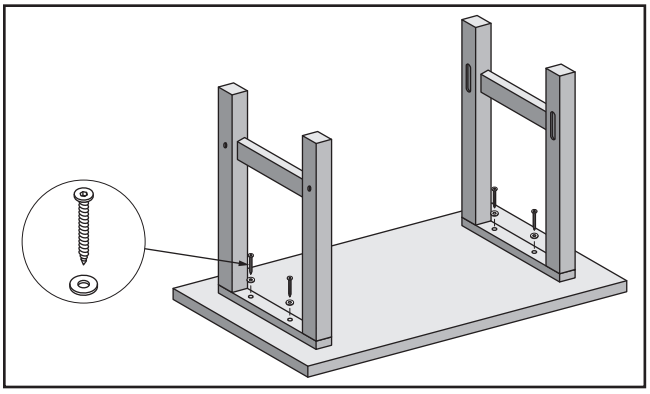

6. Insert barrel nuts into rail holes so threaded holes in nuts align with holes at end of rails.

7. With help from another person to steady rails, attach rails at each leg post by threading (1) 5/16"-18 x 3½" low-head cap screw with (1) 5/16" flat washer through leg post and into (1) barrel nut, as shown below.

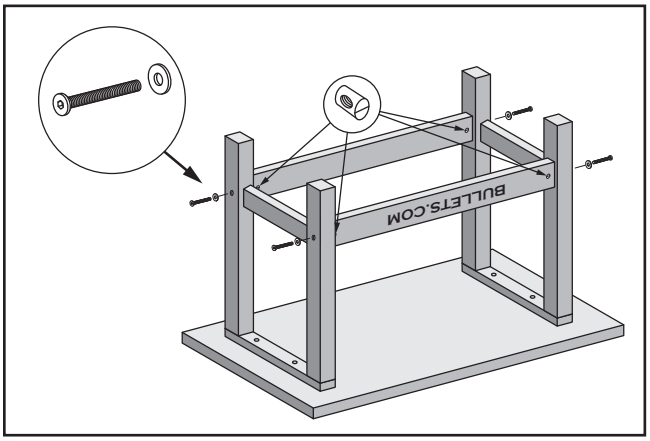
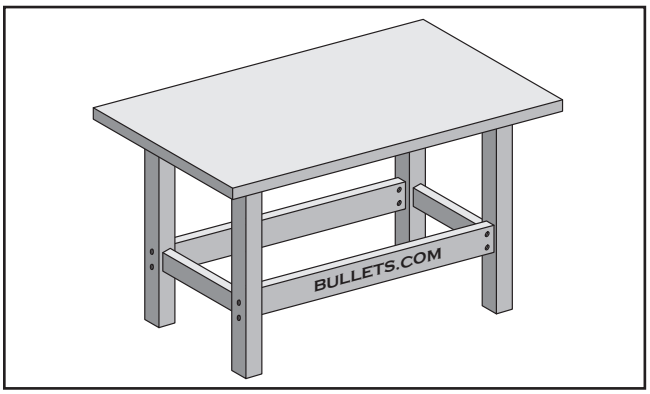
8. With help from another person, turn bench upright.