

READ THIS FIRST



For questions or help with this product contact Tech Support at (570) 546-9663 or techsupport@grizzly.com

Model G0771Z

IMPORTANT UPDATE

For Machines Mfd. Since 07/24
and Owner's Manual Revised 07/24


The following changes were recently made since the owner's manual was printed:

- Parts have changed.
- **Converting Voltage to 240V** has been revised.
- **Wiring Diagram** has been revised.

Aside from this information, all other content in the owner's manual applies and **MUST** be read and understood for your own safety. **IMPORTANT: Keep this update with the owner's manual for future reference.**

For questions or help, contact our Tech Support at (570) 546-9663 or techsupport@grizzly.com.

Revised Parts

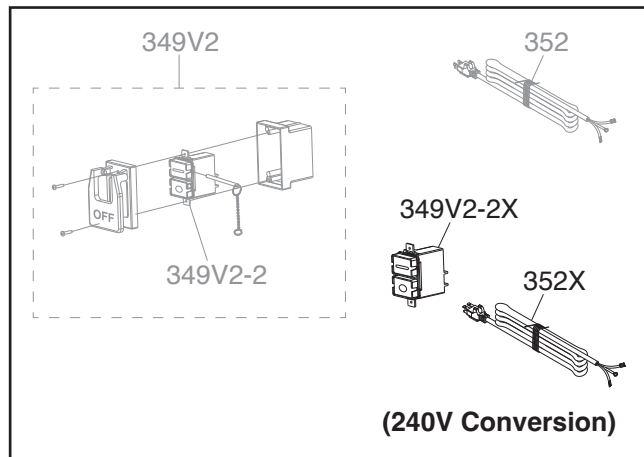


REF	PART #	DESCRIPTION
349V2-2X	P0771Z349V2-2X	SWITCH KEDU KJD17B/240V
352X	P0771Z352X	POWER CORD 14G 3W 78" 6-15P



COPYRIGHT © SEPTEMBER, 2024 BY GRIZZLY INDUSTRIAL, INC.
**WARNING: NO PORTION OF THIS MANUAL MAY BE REPRODUCED IN ANY SHAPE
OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.**
#KS23373 PRINTED IN TAIWAN

Converting Voltage to 240V

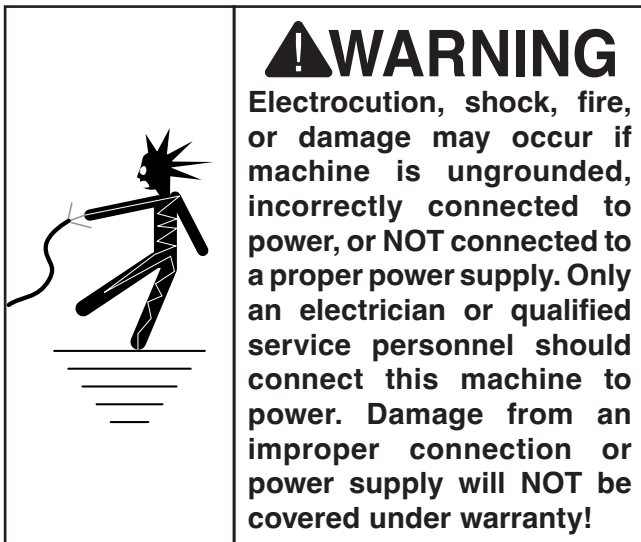

The voltage conversion MUST be performed by an electrician or qualified service personnel.

The voltage conversion procedure consists of replacing the power cord, replacing the ON/OFF switch, replacing the circuit breaker, and rewiring the motor. Wiring diagrams are provided on **Pages 3–4** of this update for your reference.

IMPORTANT: If the diagram included on the motor conflicts with those on **Pages 3–4**, the motor may have changed since this update was printed. Use the diagram included on the motor instead.

Items Needed	Qty
Phillips Head Screwdriver #2	1
Open-End Wrench 11mm	1
Wire Nut (14 AWG x 3)	1
Electrical Tape	As Needed
Wire Cutters/Stripper	1
Power Cord 240V w/6-15P (P0771Z352X)	1
ON/OFF Switch 240V (P0771Z349V2-2X)	1
Circuit Breaker 20A (P0771Z029V4-11X)	1

To convert machine to 240V:

1. DISCONNECT MACHINE FROM POWER!

2. Remove 120V power cord and replace with 240V power cord.

Note: NEMA standard 6-15 plug wiring is provided on **Page 4**.

3. Open ON/OFF switch box and replace pre-installed 120V switch with 240V switch, then close switch box.
4. Open motor junction box, then remove (2) wire nuts and circuit breaker indicated in **Figure 7**.

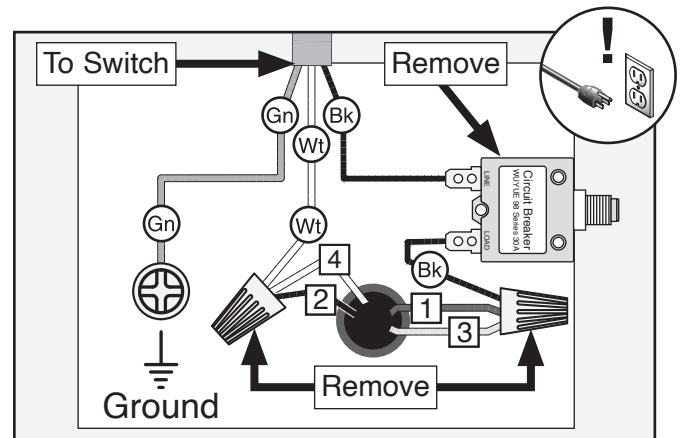


Figure 7. Inside motor junction box.

5. Install new circuit breaker, then connect wires as shown in **Figure 8**. Twist wire nuts onto their respective wires and wrap them with electrical tape so they will not come loose.

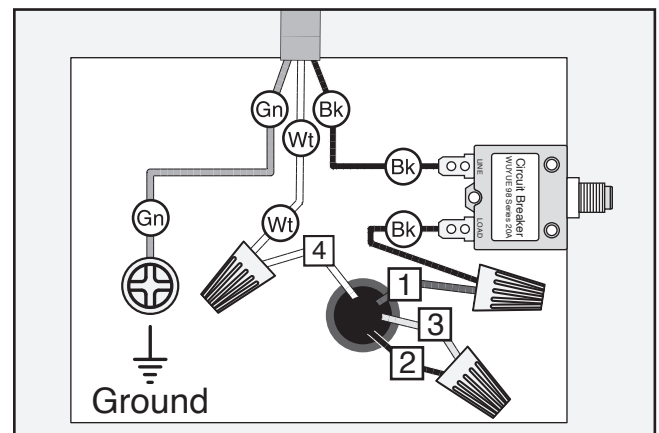



Figure 8. Motor rewired to 240V.

6. Close and secure motor junction box.




(Replaces Wiring Diagram on Page 72 of Manual)

Wiring Diagram (120V)

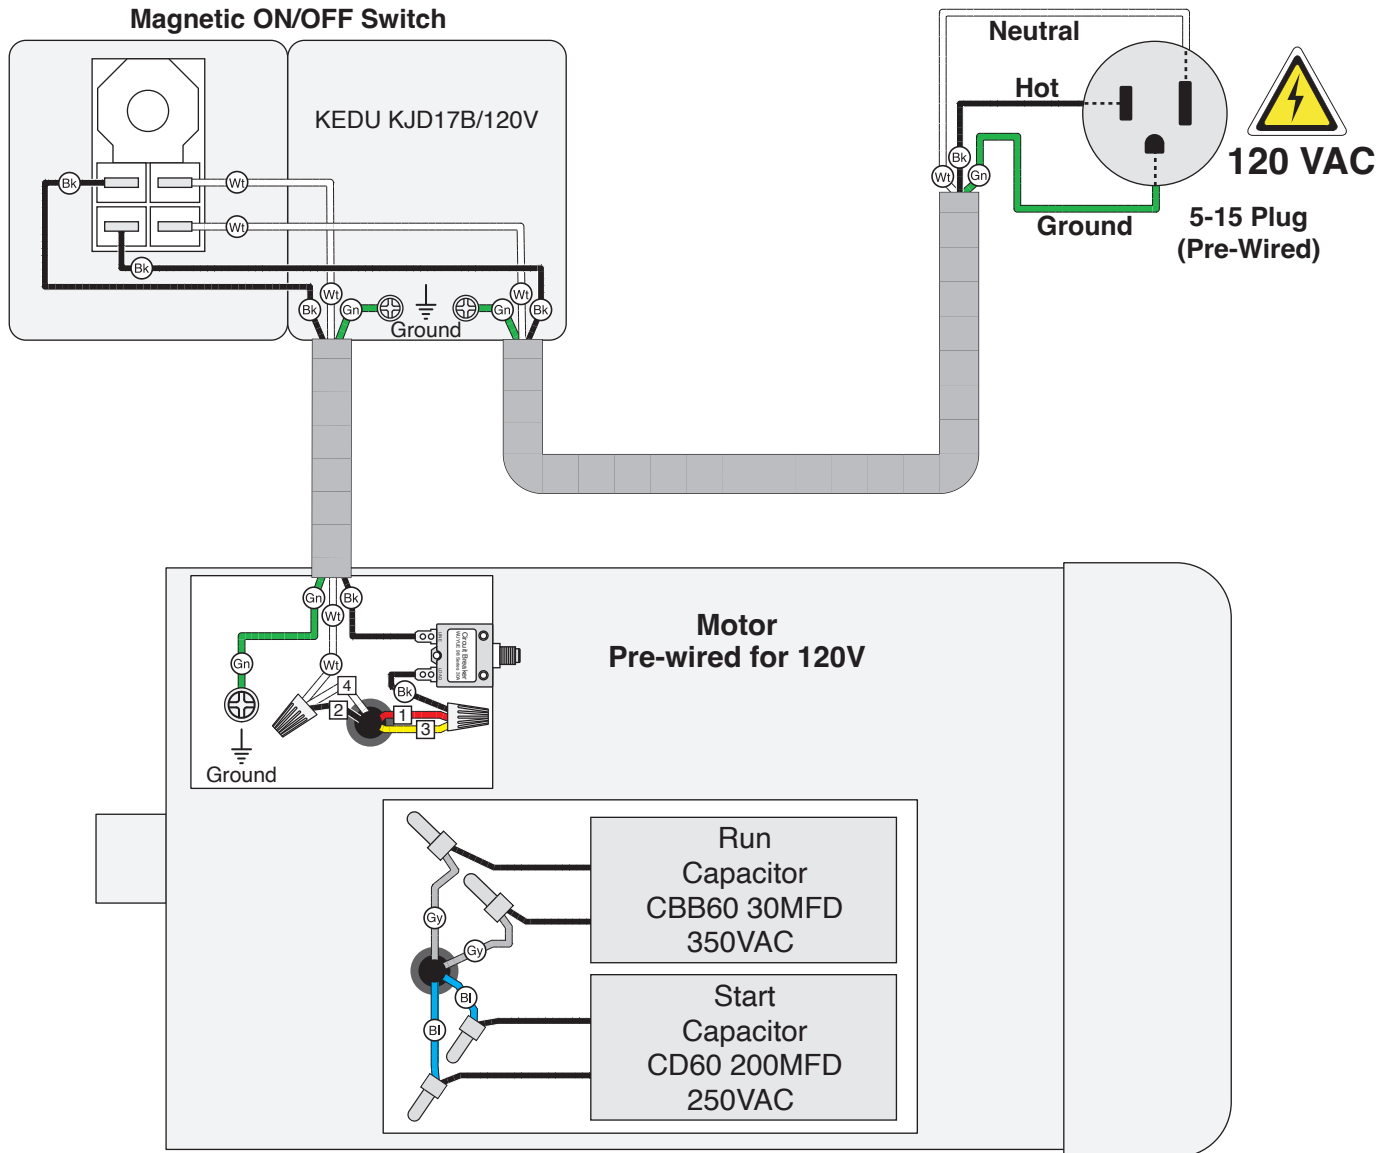

Wiring Diagram (240V)

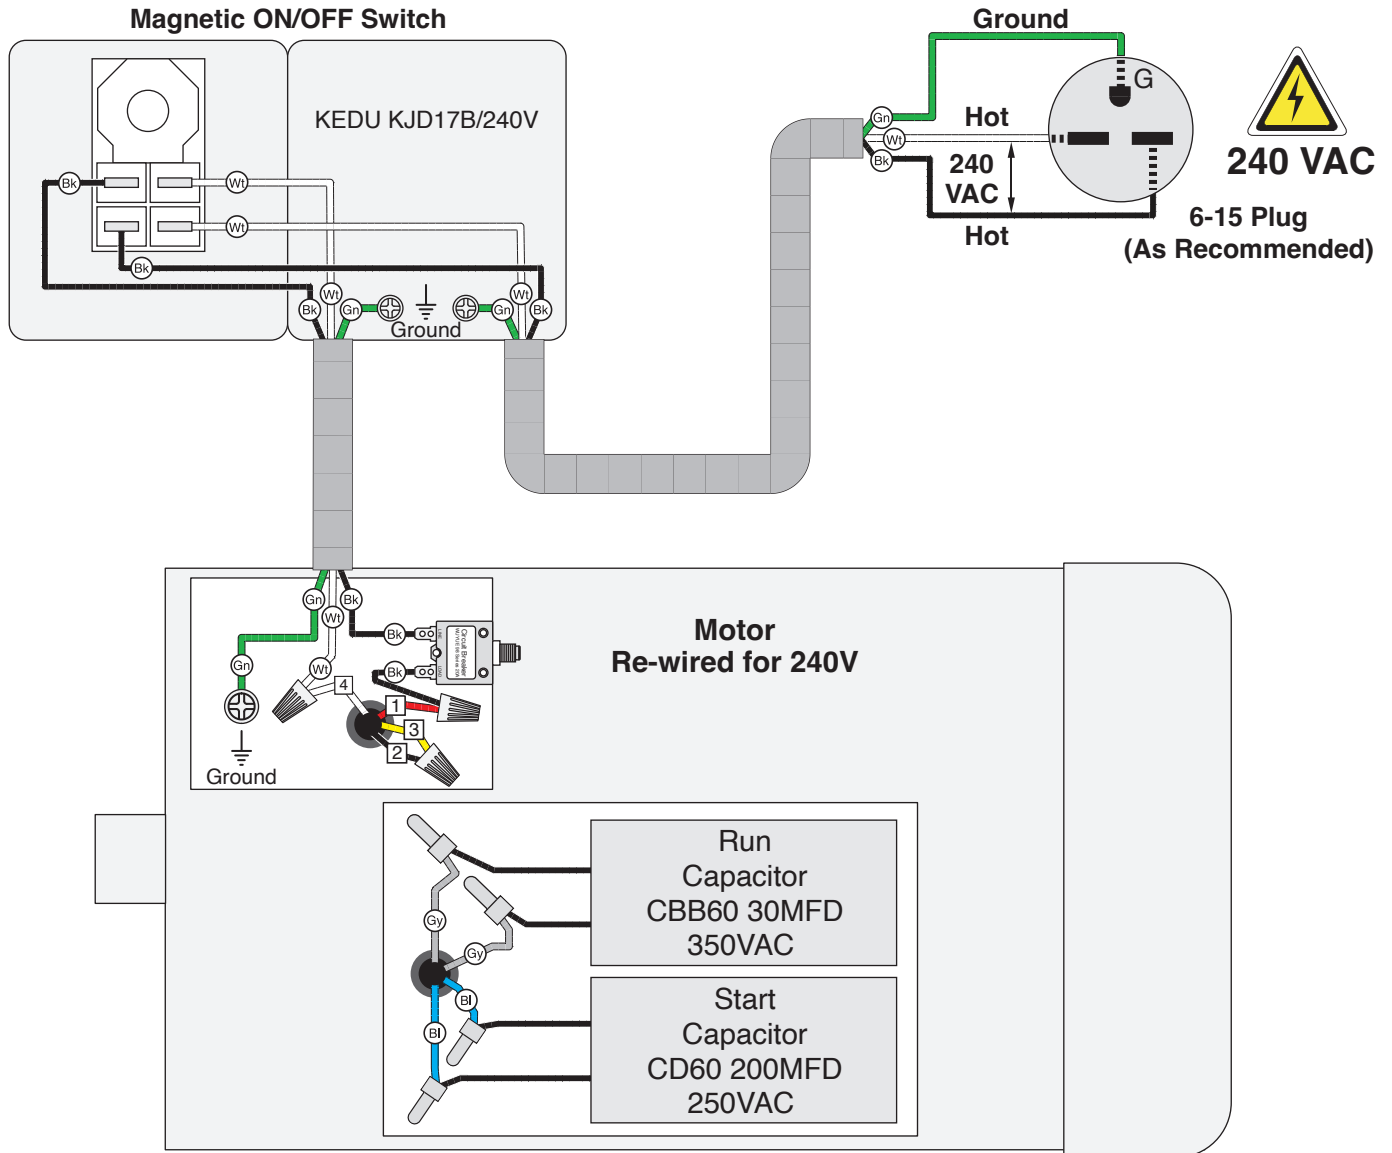

Grizzly ***Industrial, Inc.***®

MODEL G0771Z **10" HYBRID TABLE SAW** **OWNER'S MANUAL** *(For models manufactured since 07/24)*



COPYRIGHT © OCTOBER, 2016 BY GRIZZLY INDUSTRIAL, INC., REVISED JULY, 2024 (KS)
**WARNING: NO PORTION OF THIS MANUAL MAY BE REPRODUCED IN ANY SHAPE
OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.**
#KB18420 PRINTED IN TAIWAN

V7.07.24

*****Keep for Future Reference*****

WARNING!

This manual provides critical safety instructions on the proper setup, operation, maintenance, and service of this machine/tool. Save this document, refer to it often, and use it to instruct other operators.

Failure to read, understand and follow the instructions in this manual may result in fire or serious personal injury—including amputation, electrocution, or death.

The owner of this machine/tool is solely responsible for its safe use. This responsibility includes but is not limited to proper installation in a safe environment, personnel training and usage authorization, proper inspection and maintenance, manual availability and comprehension, application of safety devices, cutting/sanding/grinding tool integrity, and the usage of personal protective equipment.

The manufacturer will not be held liable for injury or property damage from negligence, improper training, machine modifications or misuse.

WARNING!

Some dust created by power sanding, sawing, grinding, drilling, and other construction activities contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm. Some examples of these chemicals are:

- **Lead from lead-based paints.**
- **Crystalline silica from bricks, cement and other masonry products.**
- **Arsenic and chromium from chemically-treated lumber.**

Your risk from these exposures varies, depending on how often you do this type of work. To reduce your exposure to these chemicals: Work in a well ventilated area, and work with approved safety equipment, such as those dust masks that are specially designed to filter out microscopic particles.

Table of Contents

INTRODUCTION.....	2	SECTION 5: SHOP-MADE SAFETY	
Machine Description	2	ACCESSORIES	46
Contact Info	2	Featherboards.....	46
Manual Accuracy	2	Push Sticks	49
Identification.....	3	Push Blocks	50
Controls & Components.....	4	Narrow-Rip Auxiliary Fence & Push Block ..	51
Glossary of Terms.....	5	Outfeed & Support Tables.....	53
Machine Data Sheet	6	Crosscut Sled	53
SECTION 1: SAFETY	8	SECTION 6: ACCESSORIES	54
Safety Instructions for Machinery	8	SECTION 7: MAINTENANCE.....	56
Additional Safety for Table Saws	10	Schedule	56
Preventing Kickback	11	Cleaning & Protecting	56
Protecting Yourself From Kickback.....	11	Lubrication	57
SECTION 2: POWER SUPPLY	12	SECTION 8: SERVICE	58
Converting Voltage to 240V	14	Troubleshooting	58
SECTION 3: SETUP	15	Blade Tilt Calibration.....	60
Needed for Setup.....	15	Miter Slot to Blade Parallelism.....	62
Unpacking	15	Spreader or Riving Knife Alignment.....	64
Inventory	16	Adjusting Fence	65
Hardware Recognition Chart	17	Calibrating Fence to Blade	67
Cleanup.....	18	Fence Scale Calibration.....	68
Site Considerations.....	19	Table/Dado Insert Adjustment.....	69
Assembly	20	Calibrating Miter Gauge.....	69
Dust Collection.....	24	Tensioning & Replacing Belt.....	70
Test Run.....	25	SECTION 9: WIRING.....	71
Recommended Adjustments	25	Wiring Safety Instructions	71
SECTION 4: OPERATIONS.....	26	Wiring Diagram	72
Operation Overview	26	SECTION 10: PARTS	74
Workpiece Inspection.....	27	Main	74
Non-Through & Through Cuts	27	Cabinet.....	76
Blade Requirements	28	Fence & Rails	77
Blade Selection.....	28	Blade Guard.....	78
Blade Installation	30	Miter Gauge	79
Blade Guard Assembly	31	Labels & Cosmetics	80
Riving Knife.....	33	WARRANTY & RETURNS.....	81
Ripping.....	35		
Crosscutting	36		
Miter Cuts	36		
Blade Tilt/Bevel Cuts.....	37		
Dado Cutting.....	37		
Rabbet Cutting.....	39		
Resawing	41		

INTRODUCTION

Machine Description

This hybrid table saw features a powerful 2 HP motor, steel cabinet-type stand with a 4" dust port, cast-iron trunnions, and a precision-ground cast-iron table with extension wings.

Includes an easy-glide fence, miter gauge, quick-release spreader/blade guard assembly, and a 10" x 40T saw blade.

Contact Info

We stand behind our machines! If you have questions or need help, contact us with the information below. Before contacting, make sure you get the **serial number** and **manufacture date** from the machine ID label. This will help us help you faster.

Grizzly Technical Support
1815 W. Battlefield
Springfield, MO 65807
Phone: (570) 546-9663
Email: techsupport@grizzly.com

We want your feedback on this manual. What did you like about it? Where could it be improved? Please take a few minutes to give us feedback.

Grizzly Documentation Manager
P.O. Box 2069
Bellingham, WA 98227-2069
Email: manuals@grizzly.com


Manual Accuracy

We are proud to provide a high-quality owner's manual with your new machine!

We made every effort to be exact with the instructions, specifications, drawings, and photographs in this manual. Sometimes we make mistakes, but our policy of continuous improvement also means that **sometimes the machine you receive is slightly different than shown in the manual.**

If you find this to be the case, and the difference between the manual and machine leaves you confused or unsure about something, check our website for an updated version. We post current manuals and manual updates for free on our website at **www.grizzly.com**.

Alternatively, you can call our Technical Support for help. Before calling, make sure you write down the **manufacture date** and **serial number** from the machine ID label (see below). This information is required for us to provide proper tech support, and it helps us determine if updated documentation is available for your machine.

		MODEL GXXXX MACHINE NAME	
SPECIFICATIONS		WARNING!	
Motor:		To reduce risk of serious injury when using this machine:	
Specification:		1. Read manual before operation.	
Specification:		2. Wear safety glasses and respirator.	
Specification:		3. Make sure machine is properly adjusted/setup and	
Specification:		4. Make sure the motor has stopped and disconnect power before adjustments, maintenance, or service.	
Weight:		5. DO NOT expose to rain or dampness.	
		6. DO NOT modify this machine in any way.	
		7.	
		8.	
		9.	
		10. Maintain machine carefully to prevent accidents.	

Manufactured for Grizzly in Taiwan


Manufacture Date

Serial Number



Identification

Become familiar with the names and locations of the controls and features shown below to better understand the instructions in this manual.

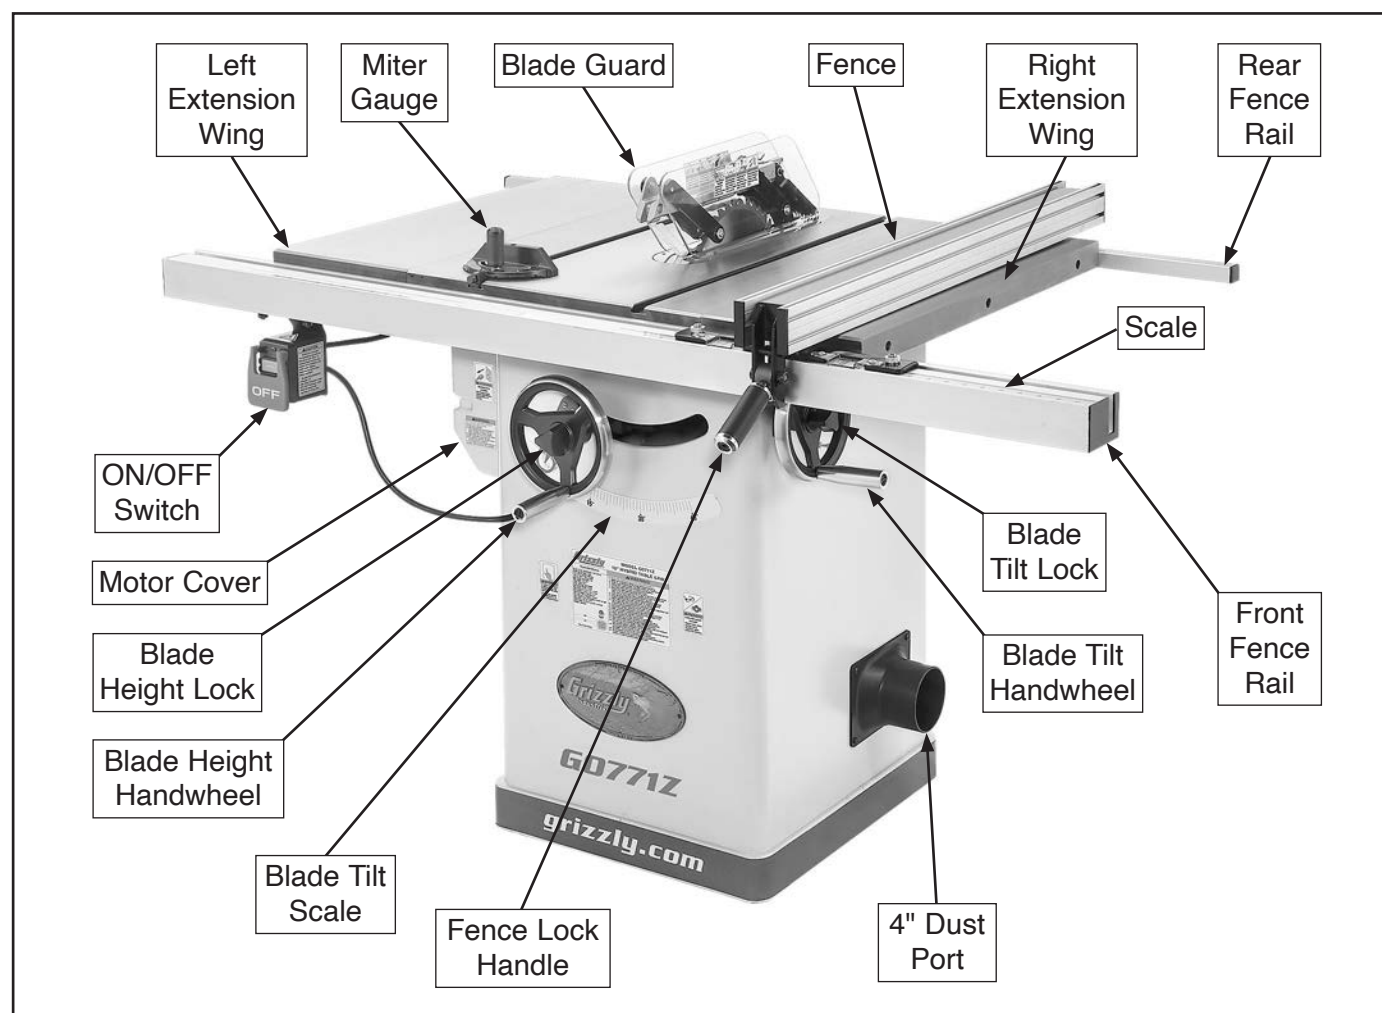


!WARNING

For Your Own Safety Read Instruction Manual Before Operating Saw

- a) Wear eye protection.
- b) Use saw-blade guard and spreader for every operation for which it can be used, including all through sawing.
- c) Keep hands out of the line of saw blade.
- d) Use a push-stick when required.
- e) Pay particular attention to instructions on reducing risk of kickback.
- f) Do not perform any operation freehand.
- g) Never reach around or over saw blade.



Controls & Components

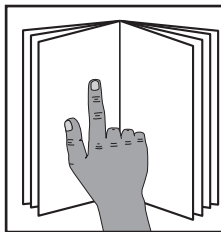

! WARNING

To reduce your risk of serious injury, read this entire manual **BEFORE** using machine.

Refer to **Figures 1–4** and the following descriptions to become familiar with the basic controls of this machine.

- A. ON/OFF Switch:** Turns motor **ON** or **OFF**. Switch can be disabled for safety by inserting disabling pin or a padlock (not included) through ON button.

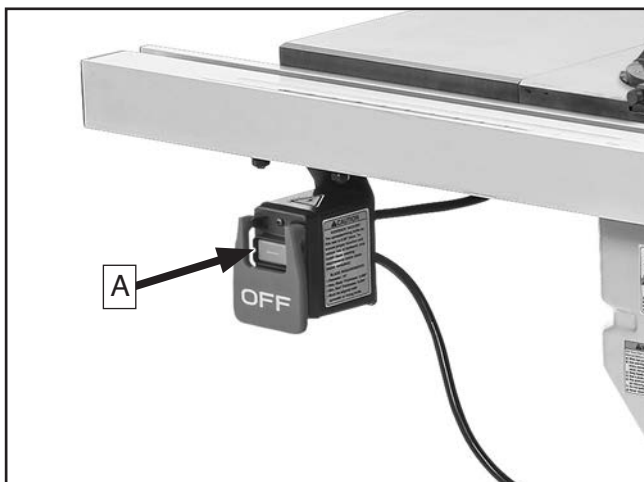


Figure 1. ON/OFF switch.

- B. Blade Height Handwheel:** Adjusts blade height from 0"–3¼".
- C. Blade Tilt Handwheel:** Adjusts angle of blade tilt from 90°–45°.
- D. Handwheel Locks:** Lock blade height and angle when tightened (one on each handwheel).

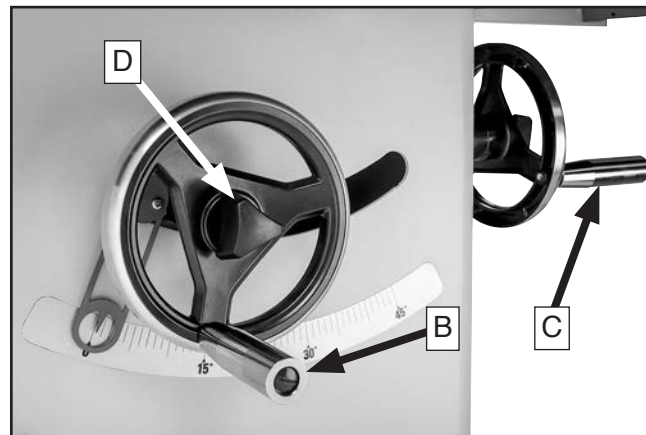


Figure 2. Blade adjustment handwheels and locks.

- E. Fence Lock:** Locks fence when pushed down, unlocks fence when pulled up.



Figure 3. Fence lock handle.

- F. Motor Reset Button:** Allows machine to be restarted after thermal overload protection has tripped. To reset, wait a few minutes for motor to cool, then press reset button. If button does not stay depressed, allow motor to cool longer, then try again.

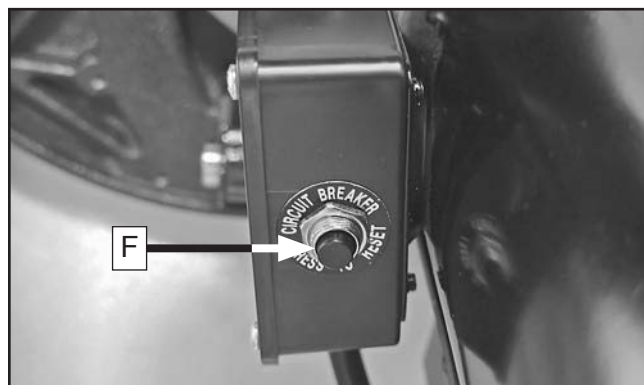


Figure 4. Motor reset button.



Glossary of Terms

The following is a list of common definitions, terms and phrases used throughout this manual as they relate to this table saw and woodworking in general. Become familiar with these terms for assembling, adjusting or operating this machine.

Arbor: A metal shaft extending from the drive mechanism which the blade is attached to.

Bevel Edge Cut: A cut made with the blade tilted to an angle between 0° and 45° to cut a beveled edge onto a workpiece. Refer to **Page 37** for more details.

Blade Guard Assembly: Metal or plastic safety device that mounts over the saw blade. Its function is to prevent the operator from coming into contact with the saw blade. Refer to **Page 31** for more details.

Crosscut: Cutting operation in which the cut is made perpendicular to the grain of wood. Refer to **Page 36** for more details.

Dado Blade: Blade or set of blades that are used to cut grooves and rabbets. This saw and arbor are not intended to safely use a dado blade larger than $1\frac{3}{16}$ " wide and 8" in diameter, as specified on **Page 7**.

Dado Cut: Cutting operation that uses a dado blade to cut a flat bottomed groove into the face of the workpiece. Refer to **Page 37** for more details.

Featherboard: Safety device used to keep the workpiece against the rip fence and against the table surface. Refer to **Page 46** for more details.

Kerf: The resulting cut or gap in the workpiece after the saw blade passes through during a cutting operation.

Kickback: An event in which the workpiece is propelled back towards the operator, usually at a very high rate of speed. See **Page 11** for information about ways to avoid kickback.

Non-Through Cut: A cut in which the blade does not cut through the top of the workpiece. Refer to **Page 27** for more details.

Parallel: Being an equal distance apart at every point along two given lines or planes (i.e. the rip fence face is parallel to the face of the saw blade).

Perpendicular: Lines or planes that intersect and form right angles (i.e. the blade is perpendicular to the table surface).

Push Stick: Safety device used to push the workpiece through a cutting operation. Used most often when rip cutting thin workpieces. Refer to **Page 49** for more details.

Rabbet: Cutting operation that creates an L-shaped channel along the edge of the workpiece. Refer to **Page 39** for more details.

Rip Cut: Cutting operation in which the cut is made parallel to the grain of the wood. Refer to **Page 35** for more details.

Riving Knife: Similar to the spreader. However, the top of the riving knife is slightly lower than the top of the blade, which allows non-through cuts. See **Page 33** for more details.

Spreader/Splitter: Metal plate located behind the blade that keeps the cut workpiece from pinching the blade to reduce the possibility of kickback. Spreaders will typically have anti-kickback pawls attached.

Straightedge: A tool used to check the flatness, parallelism, or consistency of a surface.

Thin Kerf Blade: A blade with a kerf or thickness that is thinner than a standard blade. Thin kerf blades cannot be used on this saw without using a thin-kerf riving knife.

Through Cut: A cut in which the blade cuts completely through the workpiece. Refer to **Page 28** for more information.





MACHINE DATA SHEET

Customer Service #: (570) 546-9663 · To Order Call: (800) 523-4777 · Fax #: (800) 438-5901

MODEL G0771Z 10" HYBRID TABLE SAW

Product Dimensions:

Weight..... 286 lbs.
Width (side-to-side) x Depth (front-to-back) x Height..... 64 x 40-1/4 x 36 in.
Footprint (Length x Width)..... 21 x 19-1/2 in.

Shipping Dimensions:

Carton #1

Type..... Cardboard Box on Wood Skids
Content..... Machine
Weight..... 295 lbs.
Length x Width x Height..... 40 x 29 x 29 in.
Must Ship Upright..... Yes

Carton #2

Type..... Cardboard Box
Content..... Fence
Weight..... 29 lbs.
Length x Width x Height..... 66 x 16 x 7 in.
Must Ship Upright..... Yes

Electrical:

Power Requirement..... 120V or 240V, Single-Phase, 60 Hz
Prewired Voltage..... 120V
Full-Load Current Rating..... 15A at 120V, 7.5A at 240V
Minimum Circuit Size..... 20A at 120V, 15A at 240V
Connection Type..... Cord and Plug
Power Cord Included..... Yes
Power Cord Length..... 6 ft.
Power Cord Gauge..... 14 AWG
Plug Included..... Yes
Included Plug Type..... 5-15 for 120V
Recommended Plug Type..... 6-15 for 240V
Switch Type..... ON/OFF Push Button w/Lockout Pin

Motors:

Main

Horsepower..... 2 HP
Phase..... Single-Phase
Amps..... 15A/7.5A
Speed..... 3450 RPM
Type..... TEFC Capacitor-Start Induction
Power Transfer Belt Drive
Bearings..... Sealed & Permanently Lubricated
Centrifugal Switch/Contacts Type..... Internal



Main Specifications:

Main Information

Table Saw Type.....	Hybrid
Maximum Standard Blade Diameter.....	10 in.
Maximum Dado Blade Diameter.....	8 in.
Arbor Size.....	5/8 in.
Arbor Speed.....	3450 RPM
Maximum Width of Dado.....	13/16 in.
Blade Tilt Direction.....	Left
Max Blade Tilt.....	45 deg.
Maximum Depth of Cut At 90 Degrees.....	3-1/4 in.
Maximum Depth of Cut At 45 Degrees.....	2-1/4 in.
Max Rip Right of Blade w/Included Fence & Rails.....	30 in.
Max Rip Left of Blade w/Included Fence & Rails.....	15 in.

Additional Blade Information

Included Blade Information.....	10" x 40T
Riving Knife/Spreader Thickness.....	0.090 in.
Required Blade Body Thickness.....	0.060 – 0.086 in.
Required Blade Kerf Thickness.....	0.094 – 0.126 in.
Rim Speed at Max Blade Diameter.....	9025 FPM

Table Information

Floor to Table Height.....	35-3/8 in.
Table Size with Extension Wings Width.....	40-1/2 in.
Table Size with Extension Wings Depth.....	27 in.
Distance Front of Table to Center of Blade.....	15-1/2 in.
Distance Front of Table to Blade At Maximum Cut.....	11-1/2 in.
Main Table Size Thickness.....	1-5/8 in.

Fence Information

Fence Type.....	Camlock T-Shape w/Aluminum Face
Fence Size Length.....	35-5/8 in.
Fence Size Width.....	3-1/4 in.
Fence Size Height.....	2-7/16 in.
Fence Rail Type.....	Extruded Aluminum
Fence Rail Length.....	64 in.
Fence Rail Width.....	3-1/8 in.
Fence Rail Height.....	2-3/8 in.

Miter Gauge Information

Miter Gauge Slot Type.....	T-Slot
Miter Gauge Slot Size Width.....	3/4 in.
Miter Gauge Slot Size Height.....	3/8 in.

Construction

Table.....	Precision-Ground Cast Iron
Wings.....	Precision-Ground Cast Iron
Cabinet.....	Pre-Formed Steel
Trunnions.....	Cast Iron
Fence Assembly.....	Aluminum
Rails.....	Aluminum
Miter Gauge Construction.....	Aluminum
Guard.....	Aluminum and Plastic
Body/Cabinet Paint Type/Finish.....	Powder Coated
Arbor Bearings.....	Sealed and Permanently Lubricated

Other Related Information

Number of Dust Ports.....	1
Dust Port Size.....	4 in.
Compatible Mobile Base.....	D2057A



SECTION 1: SAFETY

For Your Own Safety, Read Instruction Manual Before Operating This Machine

The purpose of safety symbols is to attract your attention to possible hazardous conditions. This manual uses a series of symbols and signal words intended to convey the level of importance of the safety messages. The progression of symbols is described below. Remember that safety messages by themselves do not eliminate danger and are not a substitute for proper accident prevention measures. Always use common sense and good judgment.



Indicates an imminently hazardous situation which, if not avoided, **WILL** result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, **COULD** result in death or serious injury.



Indicates a potentially hazardous situation which, if not avoided, **MAY** result in minor or moderate injury. It may also be used to alert against unsafe practices.

NOTICE

Alerts the user to useful information about proper operation of the machine to avoid machine damage.

Safety Instructions for Machinery



OWNER'S MANUAL. Read and understand this owner's manual **BEFORE** using machine.

TRAINED OPERATORS ONLY. Untrained operators have a higher risk of being hurt or killed. Only allow trained/supervised people to use this machine. When machine is not being used, disconnect power, remove switch keys, or lock-out machine to prevent unauthorized use—especially around children. Make your workshop kid proof!

DANGEROUS ENVIRONMENTS. Do not use machinery in areas that are wet, cluttered, or have poor lighting. Operating machinery in these areas greatly increases the risk of accidents and injury.

MENTAL ALERTNESS REQUIRED. Full mental alertness is required for safe operation of machinery. Never operate under the influence of drugs or alcohol, when tired, or when distracted.

ELECTRICAL EQUIPMENT INJURY RISKS.

You can be shocked, burned, or killed by touching live electrical components or improperly grounded machinery. To reduce this risk, only allow qualified service personnel to do electrical installation or repair work, and always disconnect power before accessing or exposing electrical equipment.

DISCONNECT POWER FIRST. Always disconnect machine from power supply **BEFORE** making adjustments, changing tooling, or servicing machine. This prevents an injury risk from unintended startup or contact with live electrical components.

EYE PROTECTION. Always wear ANSI-approved safety glasses or a face shield when operating or observing machinery to reduce the risk of eye injury or blindness from flying particles. Everyday eyeglasses are **NOT** approved safety glasses.



WARNING

WEARING PROPER APPAREL. Do not wear loose clothing, gloves, neckties, or jewelry that can become entangled in moving parts. Always tie back or cover long hair. Wear non-slip footwear to reduce risk of slipping and losing control or accidentally contacting cutting tool or moving parts.

HAZARDOUS DUST. Dust created by machinery operations may cause cancer, birth defects, or long-term respiratory damage. Be aware of dust hazards associated with each workpiece material. Always wear a NIOSH-approved respirator to reduce your risk.

HEARING PROTECTION. Always wear hearing protection when operating or observing loud machinery. Extended exposure to this noise without hearing protection can cause permanent hearing loss.

REMOVE ADJUSTING TOOLS. Tools left on machinery can become dangerous projectiles upon startup. Never leave chuck keys, wrenches, or any other tools on machine. Always verify removal before starting!

USE CORRECT TOOL FOR THE JOB. Only use this tool for its intended purpose—do not force it or an attachment to do a job for which it was not designed. Never make unapproved modifications—modifying tool or using it differently than intended may result in malfunction or mechanical failure that can lead to personal injury or death!

AWKWARD POSITIONS. Keep proper footing and balance at all times when operating machine. Do not overreach! Avoid awkward hand positions that make workpiece control difficult or increase the risk of accidental injury.

CHILDREN & BYSTANDERS. Keep children and bystanders at a safe distance from the work area. Stop using machine if they become a distraction.

GUARDS & COVERS. Guards and covers reduce accidental contact with moving parts or flying debris. Make sure they are properly installed, undamaged, and working correctly **BEFORE** operating machine.

FORCING MACHINERY. Do not force machine. It will do the job safer and better at the rate for which it was designed.

NEVER STAND ON MACHINE. Serious injury may occur if machine is tipped or if the cutting tool is unintentionally contacted.

STABLE MACHINE. Unexpected movement during operation greatly increases risk of injury or loss of control. Before starting, verify machine is stable and mobile base (if used) is locked.

USE RECOMMENDED ACCESSORIES. Consult this owner's manual or the manufacturer for recommended accessories. Using improper accessories will increase the risk of serious injury.

UNATTENDED OPERATION. To reduce the risk of accidental injury, turn machine **OFF** and ensure all moving parts completely stop before walking away. Never leave machine running while unattended.

MAINTAIN WITH CARE. Follow all maintenance instructions and lubrication schedules to keep machine in good working condition. A machine that is improperly maintained could malfunction, leading to serious personal injury or death.

DAMAGED PARTS. Regularly inspect machine for damaged, loose, or mis-adjusted parts—or any condition that could affect safe operation. Immediately repair/replace **BEFORE** operating machine. For your own safety, **DO NOT** operate machine with damaged parts!

MAINTAIN POWER CORDS. When disconnecting cord-connected machines from power, grab and pull the plug—**NOT** the cord. Pulling the cord may damage the wires inside. Do not handle cord/plug with wet hands. Avoid cord damage by keeping it away from heated surfaces, high traffic areas, harsh chemicals, and wet/damp locations.

EXPERIENCING DIFFICULTIES. If at any time you experience difficulties performing the intended operation, stop using the machine! Contact our Technical Support at (570) 546-9663.



Additional Safety for Table Saws

WARNING

Serious cuts, amputation, or death can occur from contact with rotating saw blade during operation. Workpieces, broken blades, or flying particles thrown by blade can blind or strike operators or bystanders with deadly force. To reduce the risk of these hazards, operator and bystanders **MUST** completely heed the hazards and warnings below.

HAND & BODY POSITIONING. Keep hands away from saw blade and out of blade path during operation, so they cannot accidentally slip into blade. Only operate at front of machine and always stand to side of blade path. Never reach behind or over blade, or under blade guard when blade is spinning.

BLADE GUARD. The blade guard protects operator from rotating saw blade. Make sure blade guard is installed, adjusted correctly, and used for all possible "through cuts." Promptly repair or replace if damaged. Re-install immediately after operations that require its removal.

RIVING KNIFE. Use riving knife for all "non-through cuts", except for dados. Make sure it is aligned and positioned correctly. Promptly repair or replace it if damaged.

KICKBACK. Kickback occurs when saw blade ejects workpiece back toward operator. Know how to reduce risk of kickback, and learn how to protect yourself if it does occur.

FEEDING WORKPIECE. Feeding workpiece incorrectly increases risk of kickback. Always allow blade to reach full speed before cutting, feed workpiece from front of saw, making sure workpiece is flat against table and a fence, miter gauge, or other guide is used to feed workpiece in a straight line. Feed cuts through to completion. Never start saw with workpiece touching blade or pull workpiece from behind blade. Never back workpiece out of cut, move it sideways, or perform a "freehand" operation. Never plunge cut.

DADO AND RABBET OPERATIONS. Dado and rabbeting operations require special attention since they must be performed with blade guard removed, which increases risk of blade contact. **DO NOT** attempt dado or rabbeting operations without first reading these sections in this manual.

PUSH STICKS/PUSH BLOCKS. To reduce risk of accidental blade contact, use push sticks/push blocks whenever possible. In event of an accident, these will often take damage that would have occurred to hands/fingers.

FENCE. To reduce risk of kickback, make sure fence remains properly adjusted and parallel with blade. Always lock fence before using. Do not use fence while using miter gauge. Make sure fence is not touching the blade when the saw is started.

CUT-OFF PIECES. To avoid risk of injury due to blade contact, turn saw **OFF** and allow blade to completely stop before removing cut-off pieces near blade or trapped between blade and table insert. Never use your hands to move cut-off pieces away from blade while saw is running.

BLADE ADJUSTMENTS. Adjusting blade height or tilt during operation increases risk of crashing blade and sending metal fragments flying with deadly force at operator or bystanders. Only adjust blade height and tilt when blade is completely stopped and saw is **OFF**. Make sure blade is not touching the guard, riving knife, or workpiece before the saw is started.

CHANGING BLADES. Accidental startup while changing saw blade can result in serious injury. To reduce risk of accidental blade contact, always disconnect power before changing blades.

DAMAGED SAW BLADES. Damaged saw blade teeth can become deadly projectiles. Never use blades that have been dropped or damaged.

CUTTING CORRECT MATERIAL. Cutting metal, glass, stone, tile, etc., increases risk of operator injury due to kickback or flying particles. Only cut natural and man-made wood products, laminate-covered wood products, and some plastics. Never cut materials not intended for this saw.



Preventing Kickback

Below are ways to avoid the most common causes of kickback:

- Only cut workpieces with at least one smooth and straight edge. DO NOT cut warped, cupped or twisted wood.
- Keep the blade guard installed and working correctly for all through cuts.
- Never attempt freehand cuts. If the workpiece is not fed parallel with the blade, kickback will likely occur. Always use the rip fence or miter gauge to support the workpiece.
- Make sure the spreader or riving knife is aligned with the blade. A misaligned spreader or riving knife can cause the workpiece to catch or bind, increasing the chance of kickback.
- Ensure that the rip fence locks parallel with the blade; otherwise, the chances of kickback are extreme.
- The spreader or riving knife maintains the kerf in the workpiece, reducing the chance of kickback. Always use the riving knife for all non-through operations, unless a dado blade is installed. Always use the spreader with the blade guard for all through cuts.
- Feed cuts through to completion. Anytime you stop feeding a workpiece in the middle of a cut, the chance of kickback is greatly increased.
- Keep the blade guard installed and in good working order. Only remove it when performing non-through cuts and immediately re-install the blade guard when finished. Remember, always use the riving knife for all non-through operations, unless a dado blade is installed.
- Make multiple, shallow passes when performing a non-through cut. Making a deep non-through cut will greatly increase the chance of kickback.
- Never move the workpiece backwards or try to back it out of a cut while the blade is moving. If you cannot complete a cut for some reason, stop the saw motor and allow the blade to completely stop before backing the workpiece out. Promptly fix the condition that prevented you from completing the cut before starting the saw again.

Protecting Yourself From Kickback

Even if you know how to prevent kickback, it may still happen. Here are some ways to protect yourself if kickback DOES occur:

- Stand to the side of the blade during every cut. If kickback does occur, the thrown workpiece usually travels directly in front of the blade.
- Wear safety glasses or a face shield. In the event of kickback, your eyes and face are the most vulnerable parts of your body.
- Never, for any reason, place your hand behind the blade. Should kickback occur, your hand will be pulled into the blade, which could cause amputation.
- Use a push stick to keep your hands farther away from the moving blade. If kickback occurs, the push stick will most likely take the damage your hand would have received.
- Use featherboards or anti-kickback devices to assist with feeding and prevent or slow down kickback.

CAUTION


Statistics show that most common accidents among table saw users can be linked to kickback. Kickback is typically defined as the high-speed expulsion of stock from the table saw toward its operator. In addition to the danger of the operator or others in the area being struck by the flying stock, it is often the case that the operator's hands are pulled into the blade during kickback.



SECTION 2: POWER SUPPLY

Availability

Before installing the machine, consider the availability and proximity of the required power supply circuit. If an existing circuit does not meet the requirements for this machine, a new circuit must be installed. To minimize the risk of electrocution, fire, or equipment damage, installation work and electrical wiring must be done by an electrician or qualified service personnel in accordance with all applicable codes and standards.

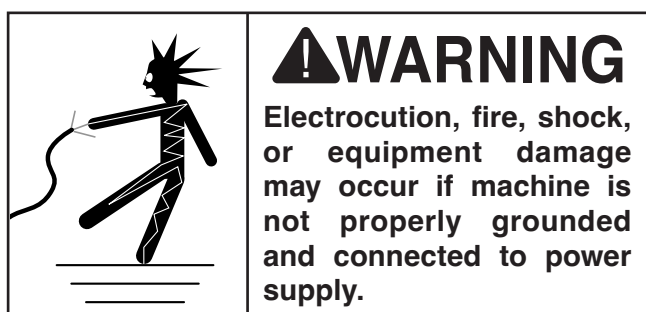

Full-Load Current Rating

The full-load current rating is the amperage a machine draws at 100% of the rated output power. On machines with multiple motors, this is the amperage drawn by the largest motor or sum of all motors and electrical devices that might operate at one time during normal operations.

Full-Load Current Rating at 120V 15 Amps

Full-Load Current Rating at 240V 7.5 Amps

The full-load current is not the maximum amount of amps that the machine will draw. If the machine is overloaded, it will draw additional amps beyond the full-load rating.

If the machine is overloaded for a sufficient length of time, damage, overheating, or fire may result—especially if connected to an undersized circuit. To reduce the risk of these hazards, avoid overloading the machine during operation and make sure it is connected to a power supply circuit that meets the specified circuit requirements.

Circuit Information

A power supply circuit includes all electrical equipment between the breaker box or fuse panel in the building and the machine. The power supply circuit used for this machine must be sized to safely handle the full-load current drawn from the machine for an extended period of time. (If this machine is connected to a circuit protected by fuses, use a time delay fuse marked D.)

! CAUTION

For your own safety and protection of property, consult an electrician if you are unsure about wiring practices or electrical codes in your area.

Note: *Circuit requirements in this manual apply to a dedicated circuit—where only one machine will be running on the circuit at a time. If machine will be connected to a shared circuit where multiple machines may be running at the same time, consult an electrician or qualified service personnel to ensure circuit is properly sized for safe operation.*

Circuit Requirements for 120V

This machine is prewired to operate on a power supply circuit that has a verified ground and meets the following requirements:

Nominal Voltage 110V, 115V, 120V
Cycle 60 Hz
Phase Single-Phase
Power Supply Circuit 20 Amps
Plug/Receptacle NEMA 5-15

Circuit Requirements for 240V

This machine can be converted to operate on a power supply circuit that has a verified ground and meets the requirements listed below. (Refer to **Voltage Conversion** instructions for details.)

Nominal Voltage 208V, 220V, 230V, 240V
Cycle 60 Hz
Phase Single-Phase
Power Supply Circuit 15 Amps
Plug/Receptacle NEMA 6-15



Grounding Requirements

This machine **MUST** be grounded. In the event of certain malfunctions or breakdowns, grounding reduces the risk of electric shock by providing a path of least resistance for electric current.

For 120V operation: This machine is equipped with a power cord that has an equipment-grounding wire and a grounding plug (see following figure). The plug must only be inserted into a matching receptacle (outlet) that is properly installed and grounded in accordance with all local codes and ordinances.


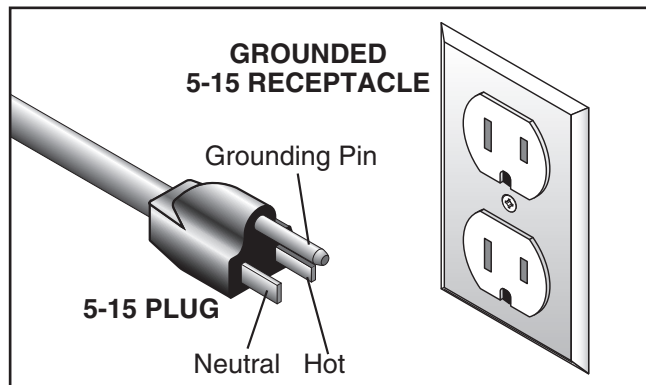


Figure 5. Typical 5-15 plug and receptacle.

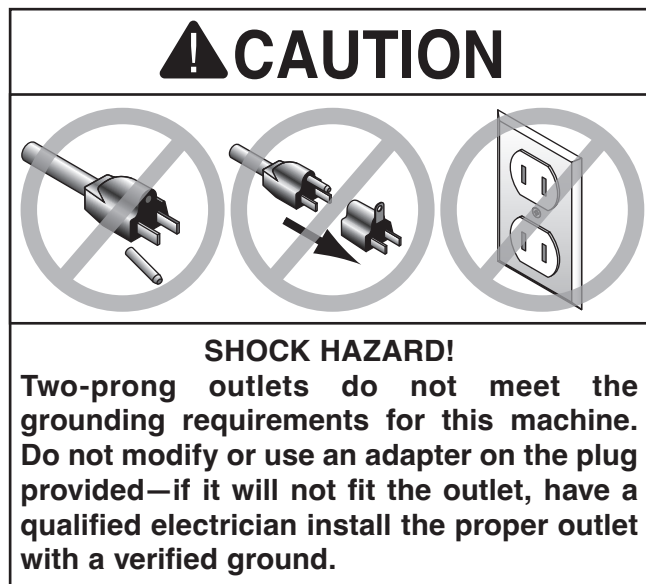

For 240V operation: The plug specified under "Circuit Requirements for 240V" on the previous page has a grounding prong that must be attached to the equipment-grounding wire on the included power cord. The plug must only be inserted into a matching receptacle (see following figure) that is properly installed and grounded in accordance with all local codes and ordinances.

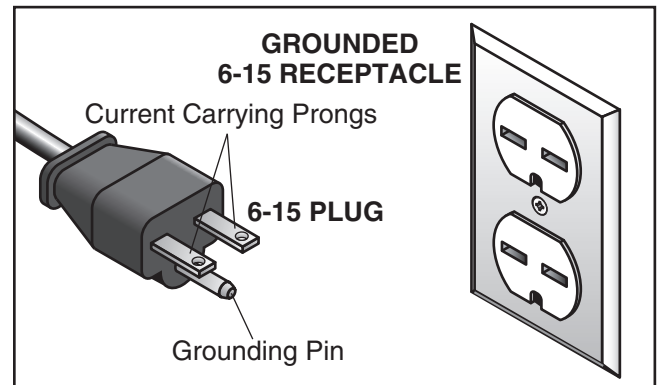


Figure 6. Typical 6-15 plug and receptacle.

Improper connection of the equipment-grounding wire can result in a risk of electric shock. The wire with green insulation (with or without yellow stripes) is the equipment-grounding wire. If repair or replacement of the power cord or plug is necessary, do not connect the equipment-grounding wire to a live (current carrying) terminal.

Check with a qualified electrician or service personnel if you do not understand these grounding requirements, or if you are in doubt about whether the tool is properly grounded. If you ever notice that a cord or plug is damaged or worn, disconnect it from power, and immediately replace it with a new one.

Extension Cords

We do not recommend using an extension cord with this machine. If you must use an extension cord, only use it if absolutely necessary and only on a temporary basis.

Extension cords cause voltage drop, which can damage electrical components and shorten motor life. Voltage drop increases as the extension cord size gets longer and the gauge size gets smaller (higher gauge numbers indicate smaller sizes).

Any extension cord used with this machine must be in good condition and contain a ground wire and matching plug/receptacle. Additionally, it must meet the following size requirements:

Minimum Gauge Size12 AWG
Maximum Length (Shorter is Better).....50 ft.



Converting Voltage to 240V

The voltage conversion **MUST** be performed by an electrician or qualified service personnel.

The voltage conversion procedure consists of rewiring the motor and installing the correct plug. A wiring diagram is provided on **Page 72** for your reference.

IMPORTANT: If the diagram included on the motor conflicts with the one on **Page 72**, the motor may have changed since the manual was printed. Use the diagram included on the motor instead.

Items Needed	Qty
Phillips Head Screwdriver #2	1
Wrench Open-End 11mm	1
Wire Nut (14 AWG x 3)	1
Electrical Tape	As Needed
Wire Cutters/Stripper	1
Circuit Breaker (P0771Z029V4-11X)	1
Plug 6-15	1

To convert machine to 240V:

1. DISCONNECT MACHINE FROM POWER!
2. Cut off existing 5-15 plug.
3. Open motor junction box, then remove (2) wire nuts and circuit breaker indicated in **Figure 7**.

4. Install new circuit breaker, then connect wires as shown in **Figure 8**. Twist wire nuts onto their respective wires and wrap them with electrical tape so they will not come loose.

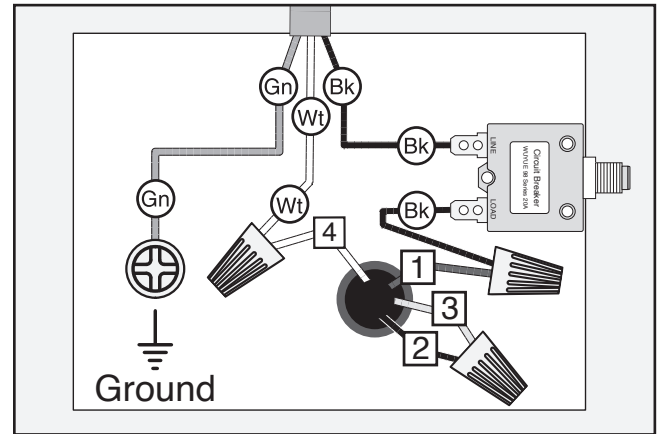


Figure 8. Motor rewired to 240V.

5. Close and secure motor junction box.
6. Install a 6-15 plug on power cord, according to plug manufacturer's instructions. If plug manufacturer's instructions are not available, NEMA standard 6-15 plug wiring is provided on **Page 72**.


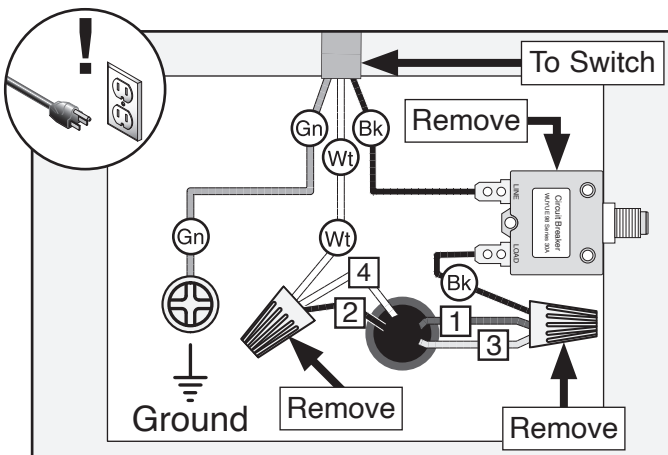


Figure 7. Inside motor junction box.




SECTION 3: SETUP

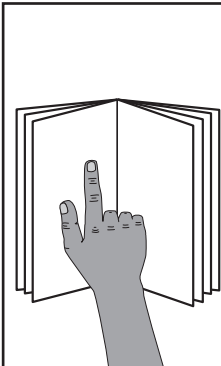


!WARNING

This machine presents serious injury hazards to untrained users. Read through this entire manual to become familiar with the controls and operations before starting the machine!

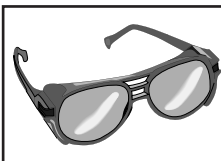

!WARNING

Wear safety glasses during the entire setup process!

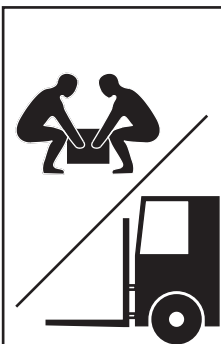

!WARNING

HEAVY LIFT!

Straining or crushing injury may occur from improperly lifting machine or some of its parts. To reduce this risk, get help from other people and use a forklift (or other lifting equipment) rated for weight of this machine.

Needed for Setup

The following are needed to complete the setup process, but are not included with your machine.

Description	Qty
• Additional People	1
• Safety Glasses for Each Person	1 Pr.
• Protective Gloves	1 Pr.
• Cleaner/Degreaser (Page 18)	As Needed
• Disposable Rags	As Needed
• Disposable Gloves	As Needed
• File/Wire Brush.....	1
• Straightedge 4'	1
• Wrench or Socket 13mm.....	1
• Phillips Head Screwdriver #2	1
• Flat Head Screwdriver 1/4".....	1
• Dust Collection System	1
• Dust Hose 4"	1
• Hose Clamps 4"	2

Unpacking

This machine was carefully packaged for safe transport. When unpacking, separate all enclosed items from packaging materials and inspect them for shipping damage. ***If items are damaged, please call us immediately at (570) 546-9663.***

IMPORTANT: Save all packaging materials until you are completely satisfied with the machine and have resolved any issues between Grizzly or the shipping agent. *You MUST have the original packaging to file a freight claim. It is also extremely helpful if you need to return your machine later.*



Inventory

The following is a list of items shipped with your machine. Before beginning setup, lay these items out and inventory them.

If any non-proprietary parts are missing (e.g. a nut or a washer), we will gladly replace them; or for the sake of expediency, replacements can be obtained at your local hardware store.

Box 1 Contents (Figures 9–10)

	Qty
A. Access Panel.....	1
B. Motor Cover.....	1
C. Extension Wings	2
D. Spreader/Riving Knife	1
E. Blade Guard Assembly	1
F. Miter Handle	1
G. Miter Gauge.....	1
H. Handwheels.....	2
I. Star Knobs.....	2
J. Saw Blade 10" x 40T	1
K. Dust Port 4"	1
L. Table Insert.....	1
M. Dado Insert (For 8" Blades Only)	1
N. Push Stick	1
O. Hex Wrenches 2.5, 3, 4, 5, 6, 8mm	1 Ea.
P. Wrench 23mm Closed, 22mm Open....	1 Ea.
Q. Circuit Breaker WUYUE 98 Series 20A	1

Box 2 Contents (Figure 11)

	Qty
R. Rear Fence Rail	1
S. Front Fence Rail.....	1
T. Fence Assembly.....	1

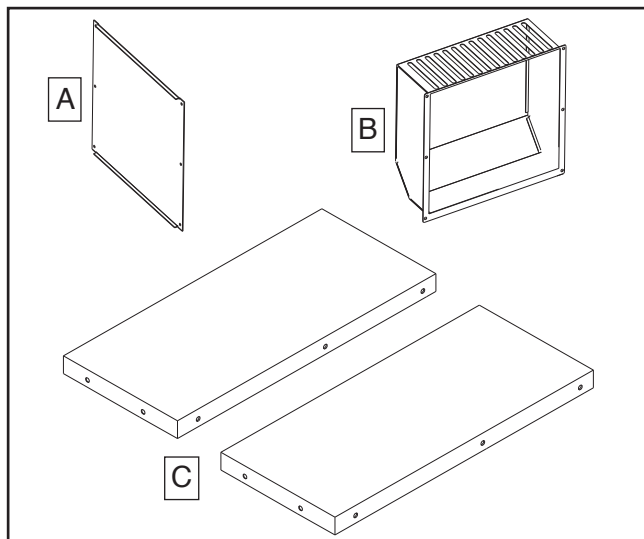


Figure 9. Extension wings, access panel, and motor cover.

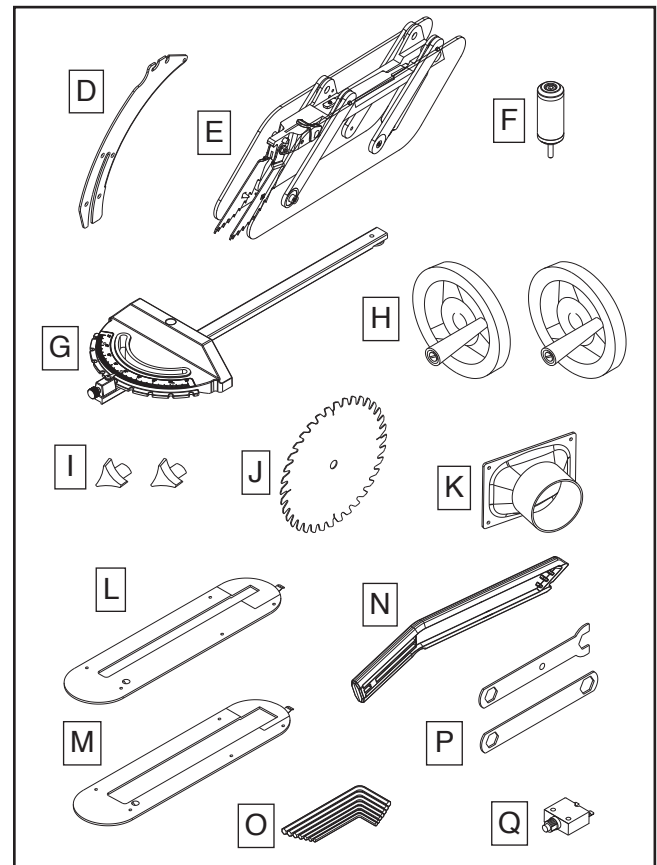


Figure 10. Component inventory.

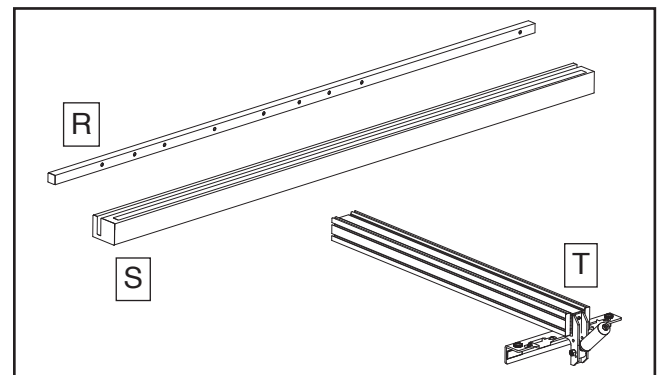


Figure 11. Fence assembly and fence rails.


Fasteners (see Hardware Recognition Chart)

Cap Screws M10-1.5 x 30	6
Cap Screws M8-1.25 x 25	8
Hex Bolts M8-1.25 x 30	8
Hex Bolts M8-1.25 x 16	2
Hex Nuts M8-1.25.....	14
Flat Washers 10mm	6
Lock Washers 10mm.....	6
Lock Washers 8mm.....	2
Button Head Cap Screws M5-.8 x 10.....	10
Flat Washer 6 x 20mm	1
Set Screws M8-1.25 x 10.....	6
Button Head Cap Screws M5-.8 x 16.....	6
Flat Washers 5mm	4



Hardware Recognition Chart

USE THIS CHART TO MATCH UP
HARDWARE DURING THE INVENTORY
AND ASSEMBLY PROCESS.

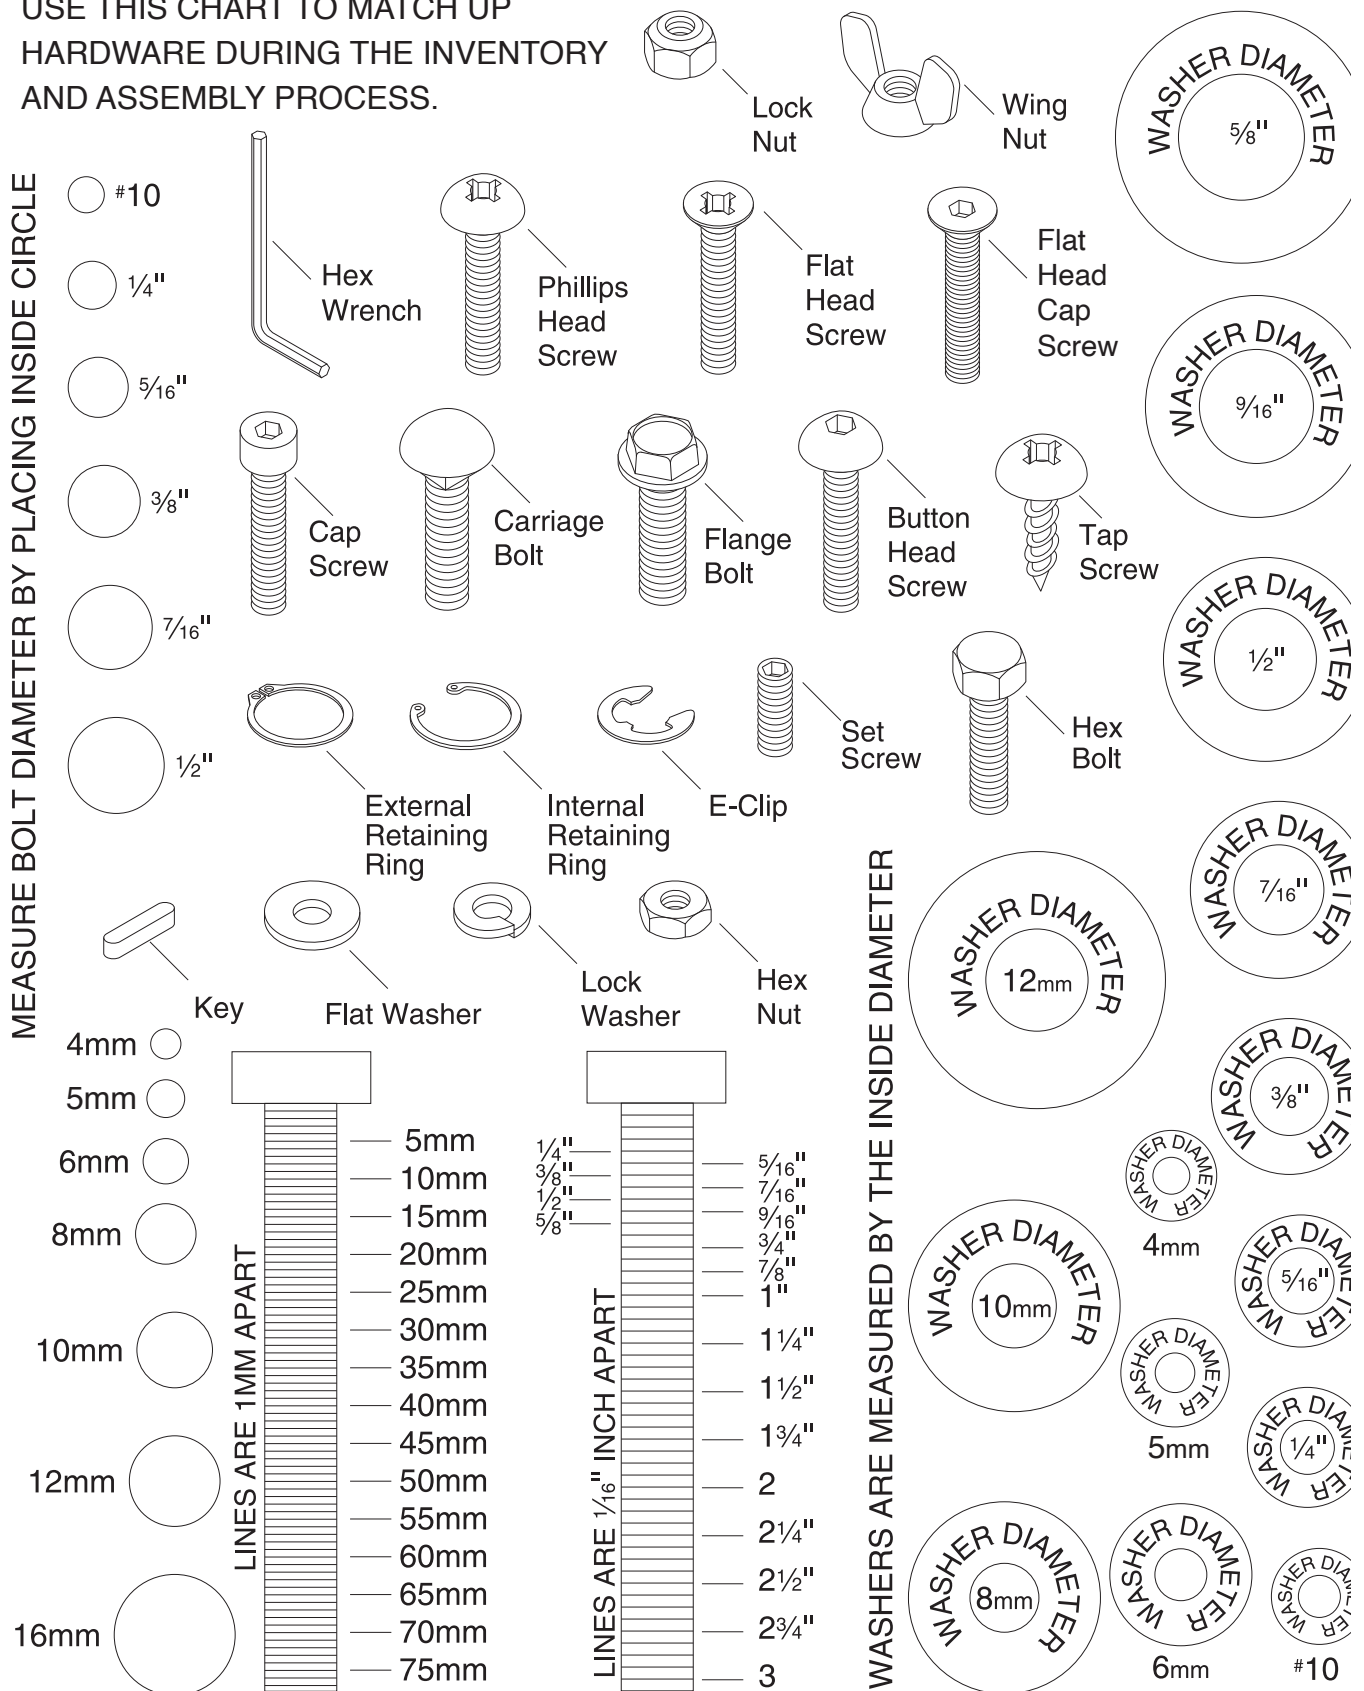

Cleanup

The unpainted surfaces of your machine are coated with a heavy-duty rust preventative that prevents corrosion during shipment and storage. This rust preventative works extremely well, but it will take a little time to clean.

Be patient and do a thorough job cleaning your machine. The time you spend doing this now will give you a better appreciation for the proper care of your machine's unpainted surfaces.


There are many ways to remove this rust preventative, but the following steps work well in a wide variety of situations. Always follow the manufacturer's instructions with any cleaning product you use and make sure you work in a well-ventilated area to minimize exposure to toxic fumes.


Before cleaning, gather the following:

- Disposable rags
- Cleaner/degreaser (WD-40 works well)
- Safety glasses & disposable gloves
- Plastic paint scraper (optional)

Basic steps for removing rust preventative:

1. Put on safety glasses.
2. Coat the rust preventative with a liberal amount of cleaner/degreaser, then let it soak for 5–10 minutes.
3. Wipe off the surfaces. If your cleaner/degreaser is effective, the rust preventative will wipe off easily. If you have a plastic paint scraper, scrape off as much as you can first, then wipe off the rest with the rag.
4. Repeat **Steps 2–3** as necessary until clean, then coat all unpainted surfaces with a quality metal protectant to prevent rust.

	⚠ WARNING Gasoline and petroleum products have low flash points and can explode or cause fire if used to clean machinery. Avoid using these products to clean machinery.
--	--

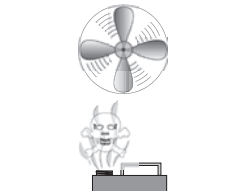	⚠ CAUTION Many cleaning solvents are toxic if inhaled. Only work in a well-ventilated area.
--	---

NOTICE Avoid harsh solvents like acetone or brake parts cleaner that may damage painted surfaces. Always test on a small, inconspicuous location first.

T23692—Orange Power Degreaser

A great product for removing the waxy shipping grease from the **non-painted** parts of the machine during clean up.

<p>Order online at www.grizzly.com OR Call 1-800-523-4777</p>	
--	---

Figure 12. T23692 Orange Power Degreaser.




Site Considerations

Weight Load

Refer to the **Machine Data Sheet** for the weight of your machine. Make sure that the surface upon which the machine is placed will bear the weight of the machine, additional equipment that may be installed on the machine, and the heaviest workpiece that will be used. Additionally, consider the weight of the operator and any dynamic loading that may occur when operating the machine.

Space Allocation

Consider the largest size of workpiece that will be processed through this machine and provide enough space around the machine for adequate operator material handling or the installation of auxiliary equipment. With permanent installations, leave enough space around the machine to open or remove doors/covers as required by the maintenance and service described in this manual. **See below for required space allocation.**

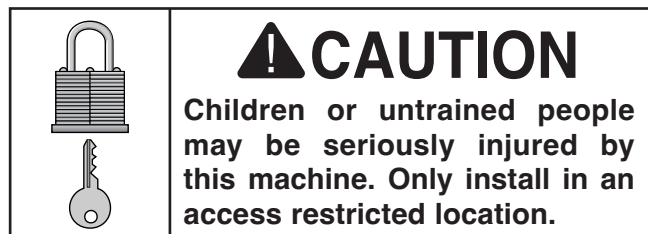

Physical Environment

The physical environment where the machine is operated is important for safe operation and longevity of machine components. For best results, operate this machine in a dry environment that is free from excessive moisture, hazardous chemicals, airborne abrasives, or extreme conditions. Extreme conditions for this type of machinery are generally those where the ambient temperature range exceeds 41°–104°F; the relative humidity range exceeds 20%–95% (non-condensing); or the environment is subject to vibration, shocks, or bumps.

Electrical Installation

Place this machine near an existing power source. Make sure all power cords are protected from traffic, material handling, moisture, chemicals, or other hazards. Make sure to leave enough space around machine to disconnect power supply or apply a lockout/tagout device, if required.

Lighting

Lighting around the machine must be adequate enough that operations can be performed safely. Shadows, glare, or strobe effects that may distract or impede the operator must be eliminated.

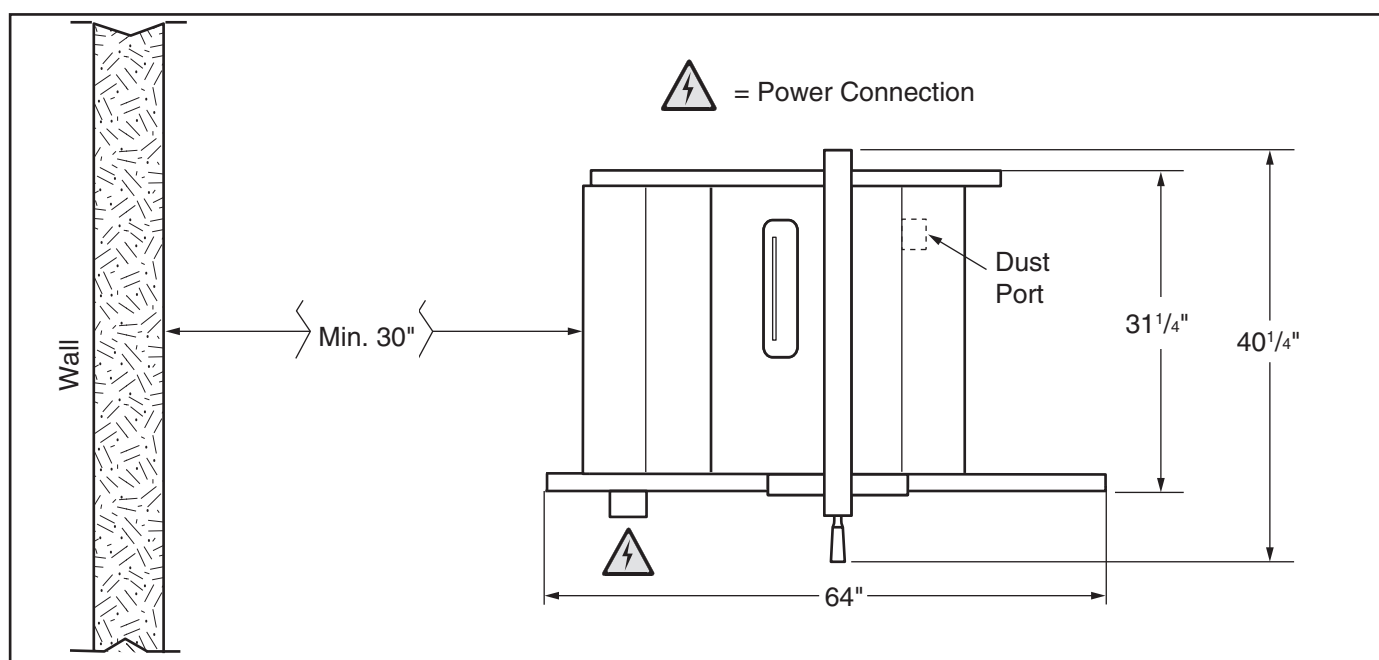


Figure 13. Minimum working clearances.



Assembly

The machine must be fully assembled before it can be operated. Before beginning the assembly process, refer to **Needed for Setup** and gather all listed items. To make sure the assembly process goes smoothly, first clean all parts that have any heavy-duty rust preventative applied by the factory (if applicable).

To assemble table saw:

1. Inspect extension wings and main table mating surfaces for burrs or foreign materials that may inhibit assembly.

For a correct fit, mating edges of table and wings must be clean, smooth, and flat. If necessary, use a wire brush or file to remove any flashing, dings, or high spots.

2. While a helper holds extension wings in place, attach each wing flush with main table using (3) M10-1.5 x 30 cap screws, 10mm flat washers, and 10mm lock washers (see **Figure 14**). Do not fully tighten cap screws at this time.

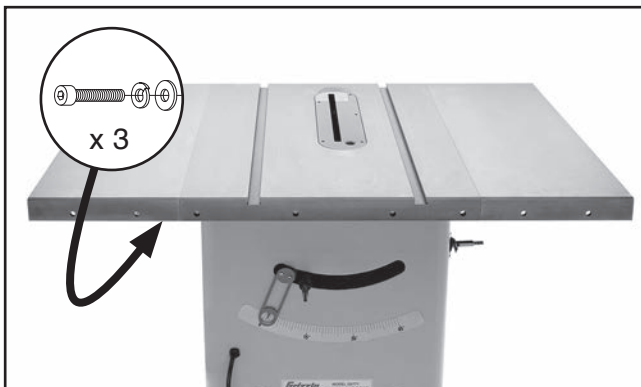


Figure 14. Extension wings installed.

3. Thread (3) M8-1.25 x 10 set screws into each extension wing at locations shown in **Figure 15**.

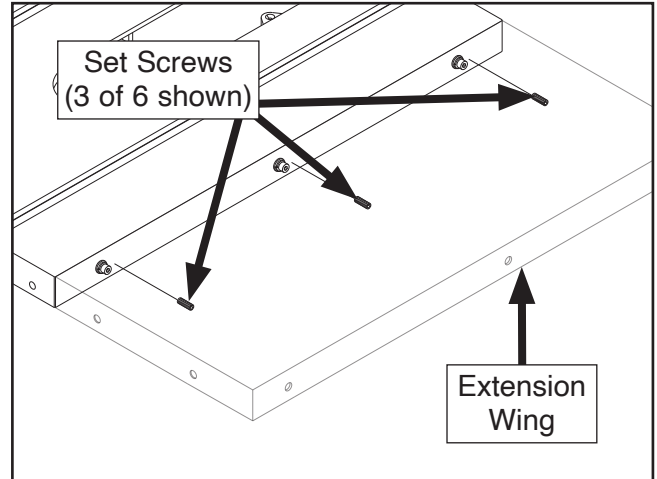


Figure 15. Extension wing set screw locations.

4. Using a straightedge as a guide, rotate set screws until extension wings are in plane with main table, then fully tighten cap screws installed in **Step 2**.
5. Attach motor cover to cabinet using (6) M5-.8 x 10 button head cap screws (see **Figure 16**).

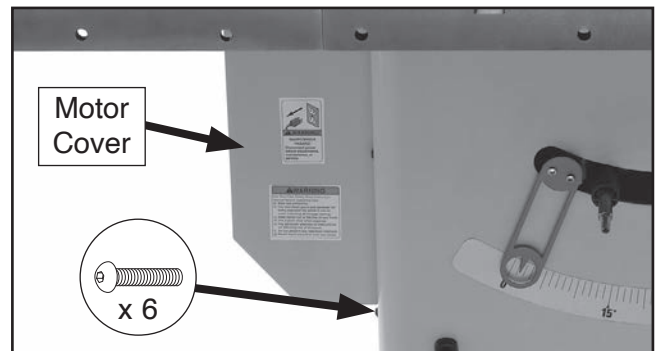


Figure 16. Motor cover installed.



6. Remove end caps from both ends of front fence rail (see **Figure 17**).

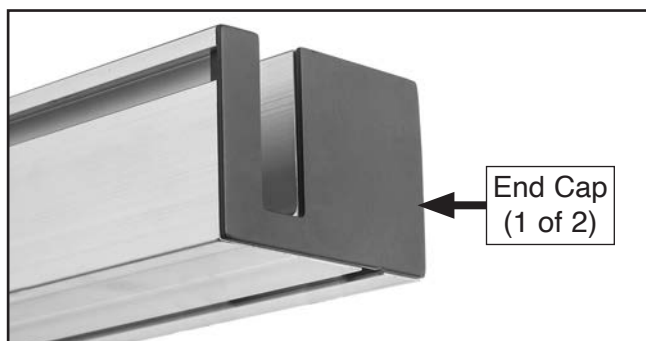


Figure 17. End cap on front fence rail.

7. Insert (2) M8-1.25 x 16 hex bolts into bottom slot on left end of fence rail (see **Figure 18**). These will be used later for mounting the switch.

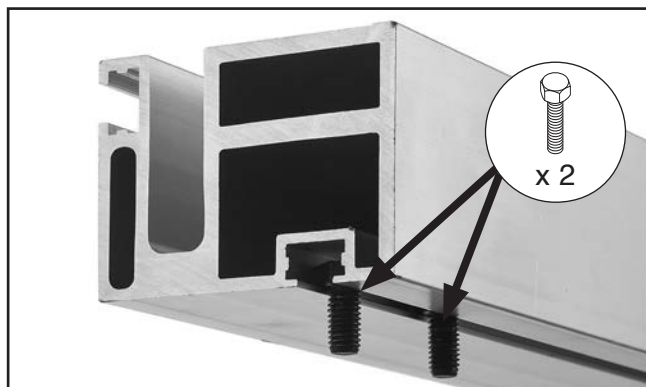


Figure 18. Hex bolts for mounting switch.

8. Orient fence rail so scale faces you. Press end cap into left end of front fence rail to re-install.
9. Slide (8) M8-1.25 x 30 hex bolts into slot on right end of front fence rail (see **Figure 19**).

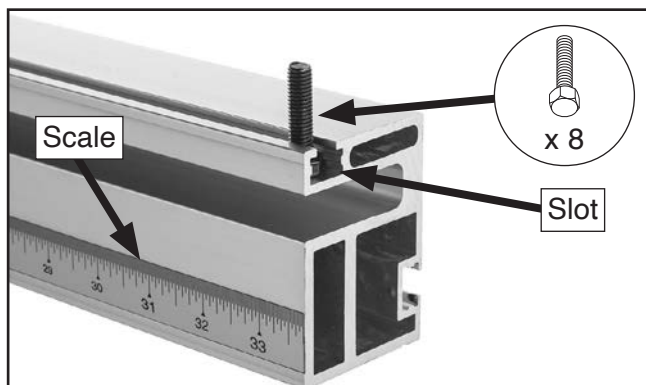


Figure 19. Hex bolt positioned in front fence rail slot.

10. Align hex bolts in fence rail with holes in table, then insert bolts into table. Be sure scale on fence rail faces up. Hand tighten (8) M8-1.25 hex nuts onto hex bolts. Do not fully tighten yet (see **Figure 20**).



Figure 20. Mounting front fence rail.

11. Install switch onto hex bolts from **Step 7** using (2) M8-1.25 hex nuts and 8mm lock washers (see **Figure 21**).



Figure 21. Switch installed.

12. Install rear fence rail on rear of table using (8) M8-1.25 x 25 cap screws, as shown in **Figure 22**. Secure outer four cap screws with M8-1.25 hex nuts.

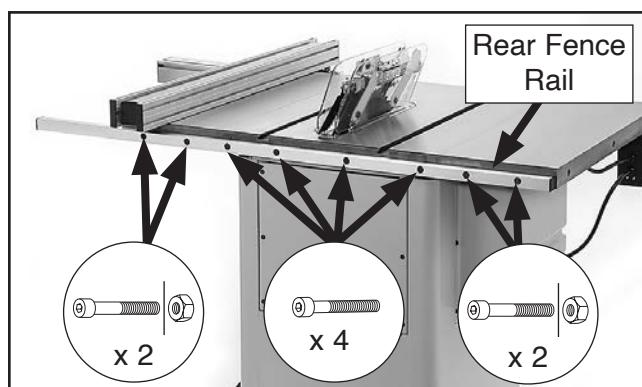


Figure 22. Rear fence rail mounting locations.



13. Install handwheels on shafts, making sure notch in each wheel fits over pin on each shaft, and secure with star knobs, as shown in **Figure 23**.

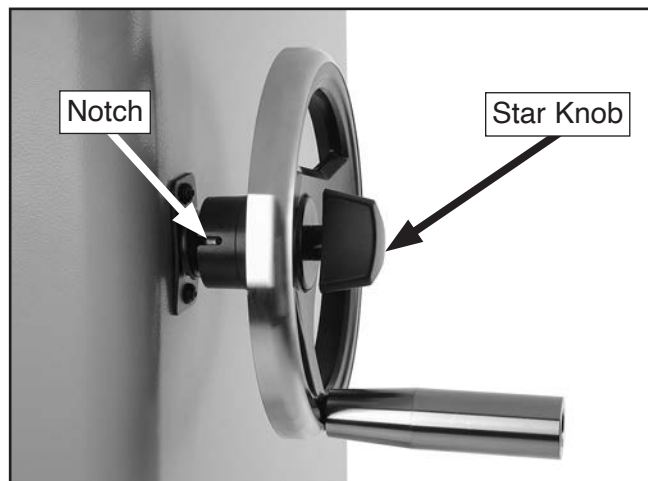


Figure 23. Handwheel installed.

14. Install saw blade (see **Figure 24**) as instructed in **Blade Installation** on **Page 30**.
15. Install table/dado insert in table throat (see **Figure 24**). Check to make sure it is flush and adjust if necessary (see **Table/Dado Insert Adjustment** on **Page 69** for more information).

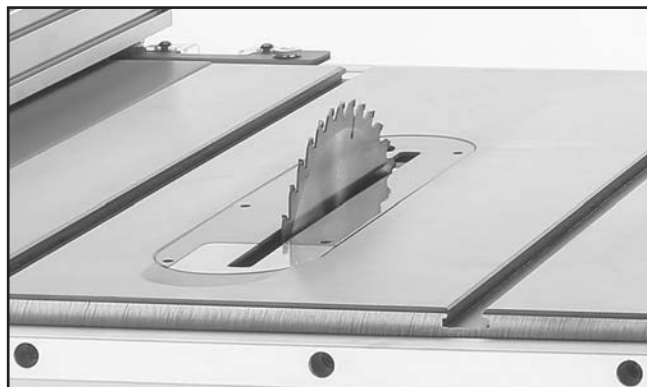


Figure 24. Example of blade and table insert installed.

16. Raise motor slightly using blade height handwheel and remove styrofoam block that supports motor during shipping (see **Figure 25**).

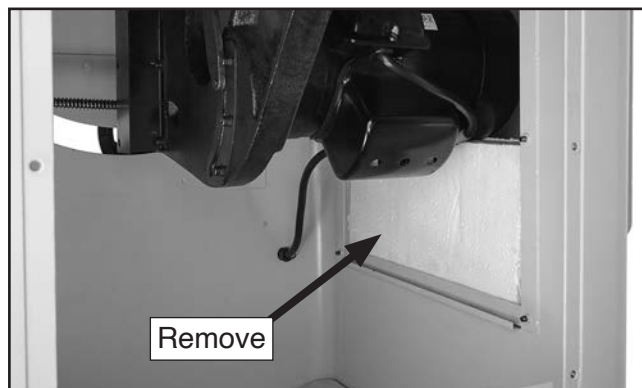


Figure 25. Location of styrofoam block to be removed.

17. Place fence on front fence rail, as shown in **Figure 26**.

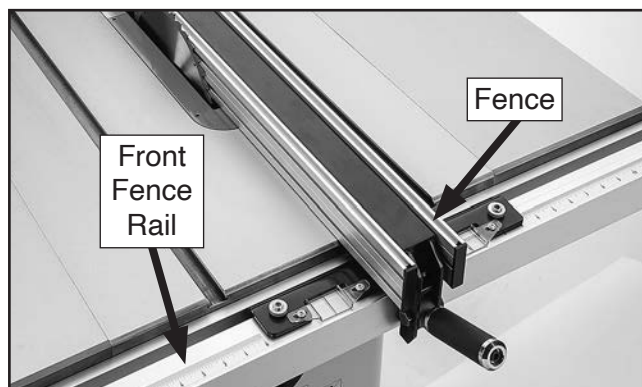


Figure 26. Fence installed on front rail.



18. Using blade height handwheel, raise blade 1–2 inches.
19. Rotate blade tilt handwheel until blade tilt indicator on front of machine points to 0° on scale (see **Figure 27**).



Figure 27. Blade tilt handwheel and angle scale.

20. Slide fence so it lightly touches right side of blade (see **Figure 28**). Do not lock fence.
21. Nudge fence rail so zero mark of scale on right lines up with cross-hair in fence scale window (see **Figure 28**).

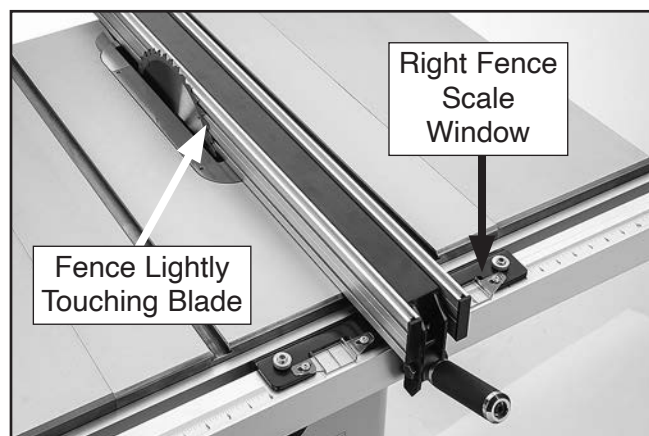


Figure 28. Fence scale calibration.

22. Tighten hex nuts from **Step 10** to secure front fence rail.

23. Check fence scale calibration by moving fence to 1" mark on scale and measuring distance from blade (see **Figure 29**).

- If crosshair aligns exactly with 1" mark, no adjustments are needed.
- If crosshair does *not* align with 1" mark, loosen fence scale window screws, move crosshair over 1" mark, then carefully tighten screws.

Note: Further scale calibration can be performed after **Test Run**, if necessary, by cutting a scrap workpiece and verifying that cutting results match fence scale, or adjusting the crosshair as necessary to achieve your desired level of accuracy.

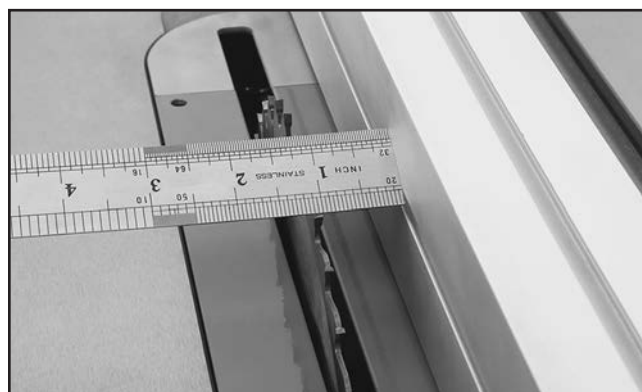


Figure 29. Checking calibration of fence scale.

24. Lower blade and move fence to left side of blade.
25. Raise blade 1–2 inches.
26. Slide fence so it lightly touches left side of blade.
27. Check left fence scale window.
 - If crosshair aligns with zero mark on left fence scale, no adjustments are needed.
 - If crosshair does *not* align with zero mark on scale, loosen fence scale window screws, move crosshair over zero mark, then carefully tighten screws.
28. Install blade guard and spreader/riving knife as instructed on **Page 31**.



29. Install end cap on right end of front fence rail in the same manner as you did on the left end in **Step 8** on **Page 21**.
30. Secure rear access panel with (6) M5-.8 x 16 button head cap screws.
31. Mount dust port with (4) M5-.8 x 10 button head cap screws and 5mm flat washers (see **Figure 30**).

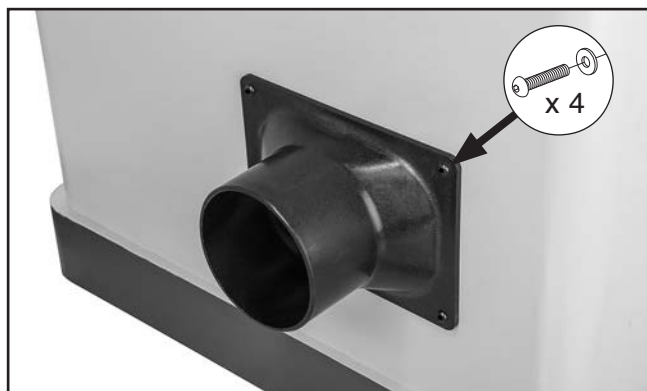


Figure 30. Dust port installed.

32. Install miter handle and 6 x 20mm flat washer into miter gauge (see **Figure 31**).

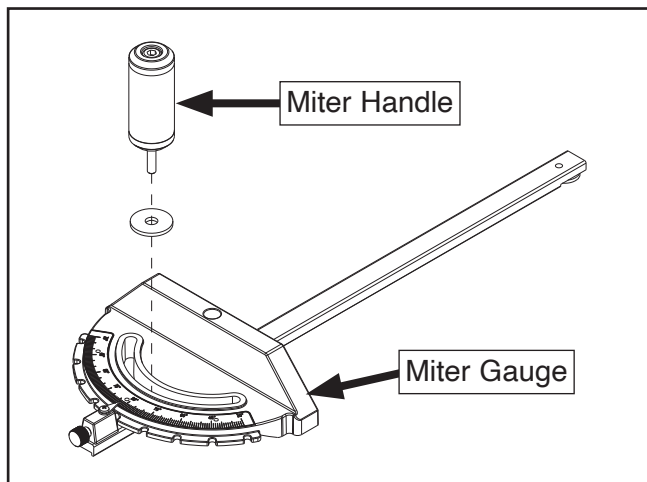


Figure 31. Installing miter handle.

Dust Collection

⚠ CAUTION

This machine creates a lot of wood chips/dust during operation. Breathing airborne dust on a regular basis can result in permanent respiratory illness. Reduce your risk by wearing a respirator and capturing the dust with a dust-collection system.

Recommended CFM at Dust Port: 400 CFM

Do not confuse this CFM recommendation with the rating of the dust collector. To determine the CFM at the dust port, you must consider these variables: (1) CFM rating of the dust collector, (2) hose type and length between the dust collector and the machine, (3) number of branches or wyes, and (4) amount of other open lines throughout the system. Explaining how to calculate these variables is beyond the scope of this manual. Consult an expert or purchase a good dust-collection "how-to" book.

To connect a dust-collection hose:

1. Fit 4" dust hose over dust port, as shown in **Figure 32**, and secure in place with a hose clamp.



Figure 32. Example of dust hose attached to dust port.

2. Tug hose to make sure it does not come off.

Note: A tight fit is necessary for proper dust collection performance.



Test Run

Once assembly is complete, test run the machine to ensure it is properly connected to power and safety components are functioning correctly.

If you find an unusual problem during the test run, immediately stop the machine, disconnect it from power, and fix the problem **BEFORE** operating the machine again. The **Troubleshooting** table in the **SERVICE** section of this manual can help.

The test run consists of verifying the following:

- 1) The motor powers up and runs correctly, and
- 2) the safety disabling mechanism on the switch works correctly.

WARNING

Serious injury or death can result from using this machine **BEFORE** understanding its controls and related safety information. **DO NOT** operate, or allow others to operate, machine until the information is understood.

WARNING

DO NOT start machine until all preceding setup instructions have been performed. Operating an improperly set up machine may result in malfunction or unexpected results that can lead to serious injury, death, or machine/property damage.

To test run machine:

1. Lower blade all the way down, and make sure all tools and objects used during setup are cleared away from machine.
2. Connect machine to power supply.
3. Turn machine **ON**, verify motor operation, then turn machine **OFF**.

The motor should run smoothly and without unusual noises.

4. Insert switch disabling pin through green ON button (see **Figure 33**).

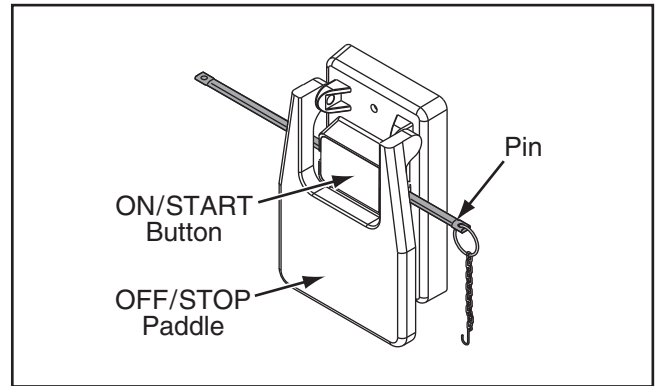


Figure 33. Switch disabling pin inserted into ON button.

5. Press green ON button to test disabling feature on switch. The machine should not start.
 - If machine *does not* start, the switch disabling feature is working as designed.
 - If machine *does* start, immediately stop the machine. The switch disabling feature is not working correctly. This safety feature must work properly before proceeding with regular operations. Call Tech Support for help.

Recommended Adjustments

For your convenience, the adjustments listed below have been performed at the factory and no further setup is required to operate this machine. However, because of the many variables involved with shipping, we recommend that you verify the following adjustments to ensure that this saw cuts safely and accurately.

Step-by-step instructions for these adjustments can be found in **SECTION 8: SERVICE**.

Adjustments that should be verified:

1. Blade Tilt Calibration (**Page 60**).
2. Miter Slot to Blade Parallelism (**Page 62**).
3. Table/Dado Insert Adjustment (**Page 69**).




SECTION 4: OPERATIONS

Operation Overview

The purpose of this overview is to provide the novice machine operator with a basic understanding of how the machine is used during operation, so the machine controls/components discussed later in this manual are easier to understand.

Due to the generic nature of this overview, it is **not** intended to be an instructional guide. To learn more about specific operations, read this entire manual, seek additional training from experienced machine operators, and do additional research outside of this manual by reading "how-to" books, trade magazines, or websites.

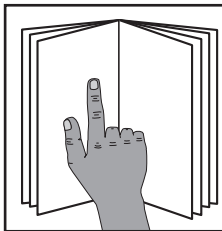


!WARNING

To reduce your risk of serious injury, read this entire manual **BEFORE** using machine.

!WARNING

Eye injuries, respiratory problems, or hearing loss can occur while operating this tool. Wear personal protective equipment to reduce your risk from these hazards.

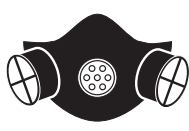

NOTICE

If you are not experienced with this type of machine, WE STRONGLY RECOMMEND that you seek additional training outside of this manual. Read books/magazines or get formal training before beginning any projects. Regardless of the content in this section, Grizzly Industrial will not be held liable for accidents caused by lack of training.

To complete a typical operation, the operator does the following:

1. Examines the workpiece to make sure it is suitable for cutting.
2. Adjusts the blade tilt, if necessary, to the correct angle of the desired cut.
3. Adjusts the blade height approximately $\frac{1}{4}$ " higher than the thickness of the workpiece.
4. Adjusts the fence to the desired width of cut, then locks it in place.
5. Checks the outfeed side of the machine for proper support and to make sure the workpiece can safely pass all the way through the blade without interference.
6. Puts on safety glasses, respirator, and hearing protection, and locates push sticks if needed.
7. Starts dust collector, then the saw.
8. Feeds the workpiece all the way through the blade while maintaining firm pressure on the workpiece against the table and fence, and keeping hands and fingers out of the blade path and away from the blade.
9. Stops the machine immediately after a cut is complete.



Workpiece Inspection

Some workpieces are not safe to cut or may require modification before they are safe to cut. **Before cutting, inspect all workpieces for the following:**

- **Material Type:** This machine is intended for cutting natural and man-made wood products, laminate-covered wood products, and some plastics. Cutting drywall or cementitious backer board creates extremely fine dust and may reduce the life of the bearings. This machine is NOT designed to cut metal, glass, stone, tile, etc.; cutting these materials with a table saw may lead to injury.
- **Foreign Objects:** Nails, staples, dirt, rocks and other foreign objects are often embedded in wood. While cutting, these objects can become dislodged and hit the operator, cause kickback, or break the blade, which might then fly apart. Always visually inspect your workpiece for these items. If they can't be removed, DO NOT cut the workpiece.
- **Large/Loose Knots:** Loose knots can become dislodged during the cutting operation. Large knots can cause kickback and machine damage. Choose workpieces that do not have large/loose knots or plan ahead to avoid cutting through them.
- **Wet or "Green" Stock:** Cutting wood with a moisture content over 20% causes unnecessary wear on the blades, increases the risk of kickback, and yields poor results.
- **Excessive Warping:** Workpieces with excessive cupping, bowing, or twisting are dangerous to cut because they are unstable and often unpredictable when being cut. DO NOT use workpieces with these characteristics!
- **Minor Warping:** Workpieces with slight cupping can be safely supported if the cupped side is facing the table or the fence. On the contrary, a workpiece supported on the bowed side will rock during a cut and could cause kickback or severe injury.

Non-Through & Through Cuts

Non-Through Cuts

A non-through cut is a sawing operation where the blade does not protrude above the top face of the wood stock, as shown in the **Figure** below.

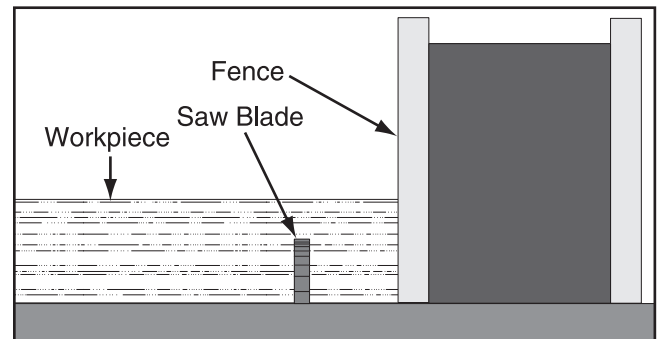


Figure 34. Example of a non-through cut.

Examples of non-through cuts include dadoes and rabbets. Non-through cuts have a higher risk of injury from kickback because the blade guard must be removed. However, when making these cuts with a standard blade, the riving knife **MUST** be installed because it still provides some protection.

IMPORTANT: When making non-through cuts with a dado blade, the riving knife **MUST** be removed. Do not attempt to cut the full depth in one pass. Instead, take multiple light passes to reduce the load on the blade.



Through Cuts

A through cut is a sawing operation in which the workpiece is completely sawn through, as shown in the **Figure** below. Examples of through cuts are rip cuts, cross cuts, miter cuts, and beveled cuts. The blade guard assembly **MUST** be used when performing through cuts.

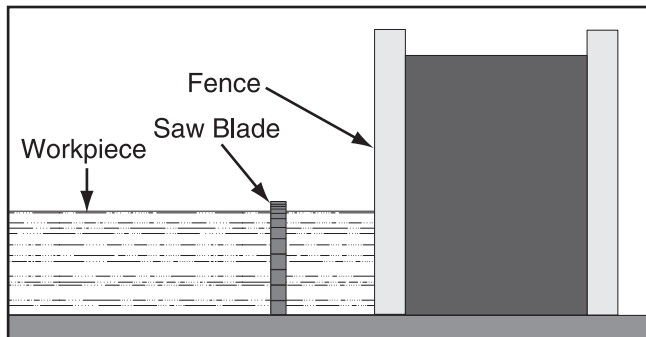


Figure 35. Example of a through cut (blade guard not shown for illustrative clarity).

Blade Requirements

The spreader/riving knife included with this machine is 0.090" (2.3mm) thick and is only designed for 10" diameter blades.

When choosing a main blade, make sure the blade size meets the requirements listed below. The thickness of the blade body and teeth can be measured with calipers or any precision measuring device.

Blade Size Requirements:

- Body Thickness: 0.060"-0.086" (1.5-2.1mm)
- Kerf (Tooth) Thickness: 0.094"-0.126" (2.4-3.2mm)

Blade Selection

This section on blade selection is by no means comprehensive. Always follow the saw blade manufacturer's recommendations to ensure safe and efficient operation of your table saw.

Ripping Blade Features:

- Best for cutting with the grain
- 20-40 teeth
- Flat-top ground tooth profile
- Large gullets for large chip removal

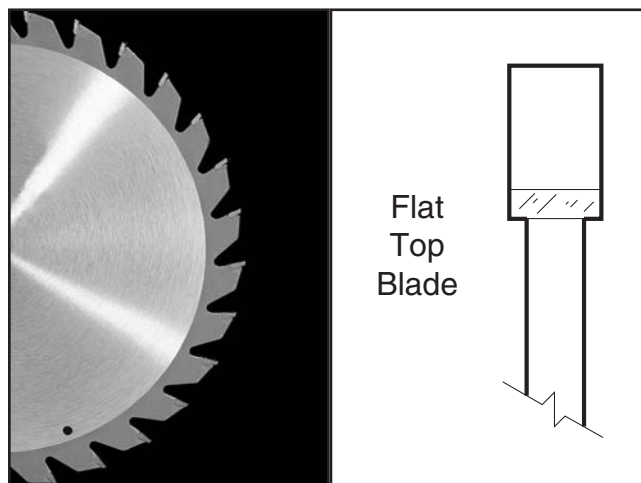


Figure 36. Ripping blade.

Crosscut blade features:

- Best for cutting across the grain
- 60-80 teeth
- Alternate top bevel tooth profile
- Small hook angle and a shallow gullet

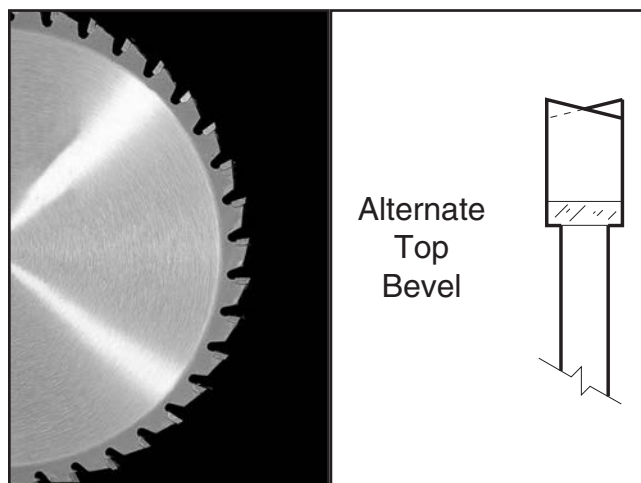


Figure 37. Crosscutting blade.



Combination blade features:

- Designed to cut both with and across grain
- 40-50 teeth
- Alternate top bevel and flat, or alternate top bevel and raker tooth profile
- Teeth are arranged in groups
- Gullets are small and shallow (similar to a cross-cut blade), then large and deep (similar to a ripping blade)

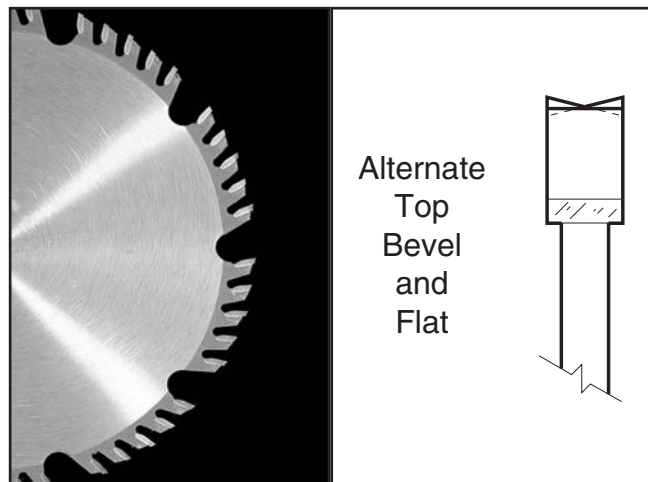


Figure 38. Combination blade.

Laminate blade features:

- Best for cutting plywood or veneer
- 40-80 teeth
- Triple chip tooth profile
- Very shallow gullet

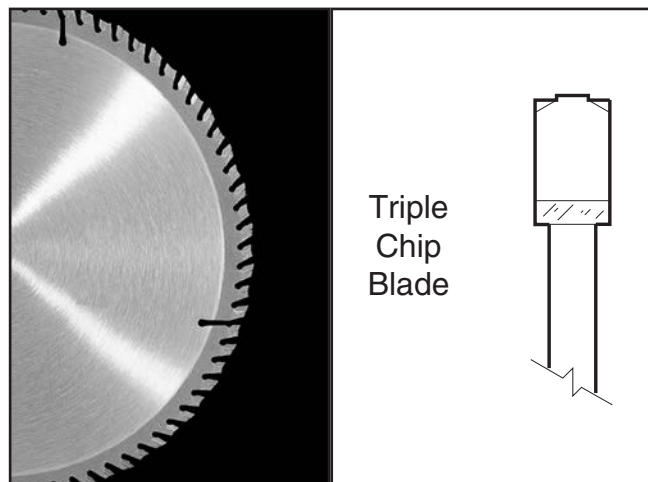


Figure 39. Laminate blade.

Thin Kerf Blade: A blade with thinner kerf than a standard blade. Since the spreader/riving knife included with this table saw is sized for standard blades, thin kerf blades cannot be used on this saw unless they meet the **Blade Requirements** specified in this manual; otherwise, they will increase the risk of kickback.

Dado Blades

Stacked Dado Blade (see below): Multiple blades are stacked together to control the cutting width. Stacked dado blades are more expensive than wobble blades, but typically produce higher quality results.

Wobble Dado Blade: A single blade mounted at a slight angle on an arbor hub. The blade angle is adjustable on the hub, and the width of the dado cut is controlled by the angle setting of the blade.

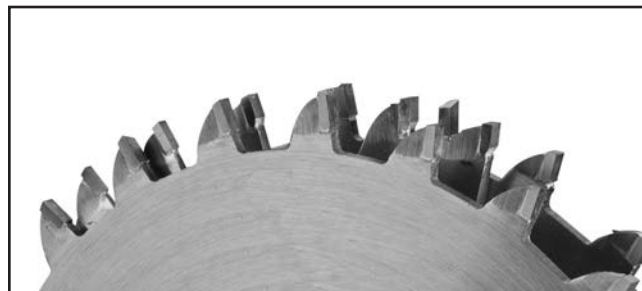



Figure 40. Stacked dado blade.



Blade Installation

CAUTION

To reduce the risk of injury, always disconnect power to the saw before changing blades. Since the blade is sharp, use extra care and wear gloves when installing it.

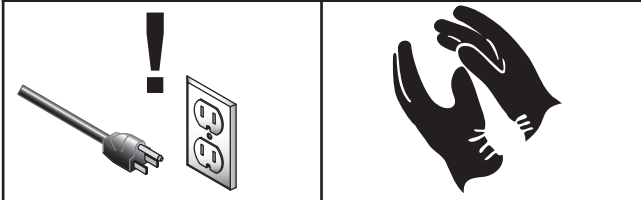

To install a new blade:

1. DISCONNECT MACHINE FROM POWER!
 2. Raise arbor all the way up, remove blade guard, table insert (leave insert adjustment screws mounted in table throat), and spreader/ripping knife (see **Page 31**).
- Note:** Table insert is held in place by magnet.
3. Use included arbor wrenches to loosen and remove arbor nut, flange, and blade (see **Figure 41**). Arbor nut has right hand threads; rotate counterclockwise to loosen.

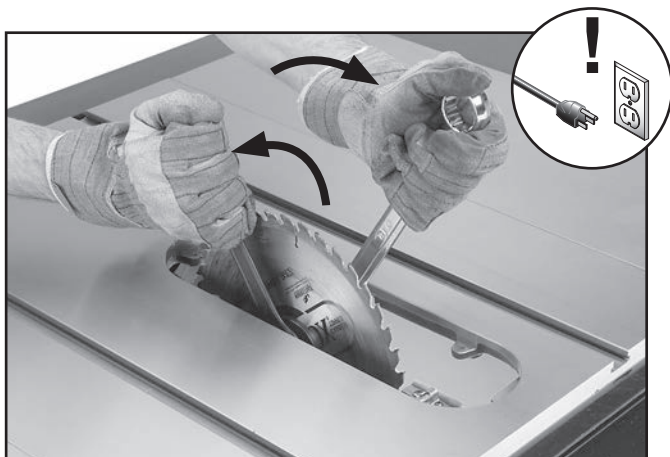


Figure 41. Example of removing table saw blade.

4. Install new blade, flange and arbor nut on arbor, as shown in **Figure 42**, with upper teeth facing front of the saw.

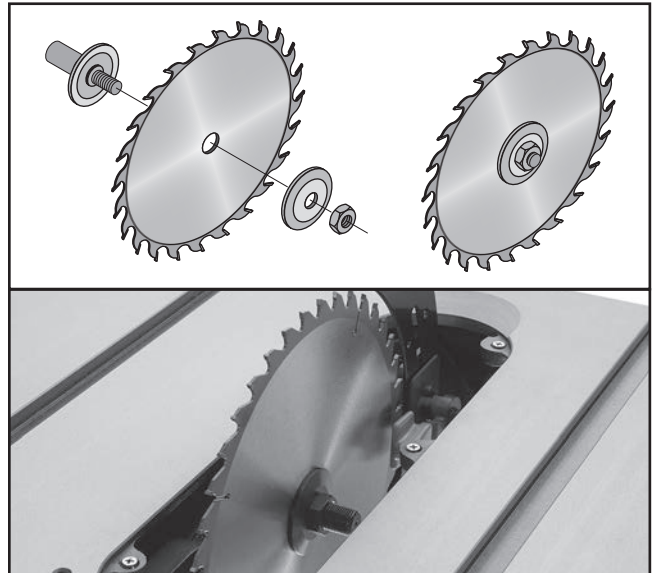


Figure 42. Correct order of installation with teeth facing the correct direction.

5. Re-install spreader/ripping knife, table insert, and blade guard (see **Page 31**).



Blade Guard Assembly

The term "blade guard" refers to the assembly that consists of the clear polycarbonate shield, the spreader, and the anti-kickback pawls on each side of the spreader (see **Figure 43**). Each of these components has important safety functions during the operation of the saw.

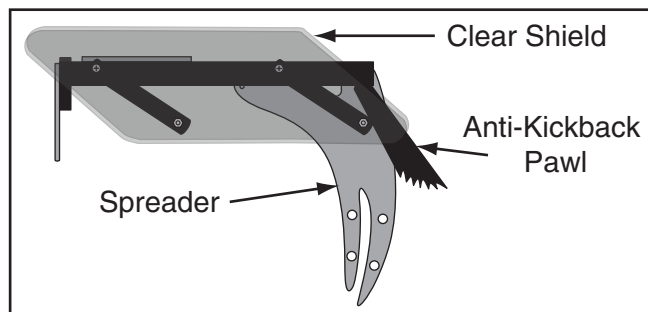


Figure 43. Blade guard assembly components.

Guard

The clear polycarbonate guard allows the operator to watch the blade cut the workpiece during operation. This guard is designed to lift as the workpiece is pushed into the blade and remain in contact with the workpiece throughout the entire cut.

The guard reduces risk of injury by providing a barrier around the blade that prevents accidental contact and contains flying wood chips.

To ensure that the guard does its job effectively, the guard must always be in the downward position against the table during idle operation, and the hinge mechanism must be maintained in good working condition so the guard can freely pivot up and down to accommodate the height of the workpiece and return to the table surface.

Spreader/Riving Knife

The spreader/riving knife is a metal plate that prevents the newly cut kerf of the workpiece from pinching the back side of the blade, causing kickback.

The spreader/riving knife also acts as a barrier behind the blade to shield hands from being pulled into the blade if a kickback occurs.

⚠ CAUTION

To work properly, spreader cannot be bent/misaligned with blade. If spreader gets bent, straighten it or replace it. Bent/misaligned spreader will increase risk of kickback! Refer to Page 64 to check/adjust alignment.

Installing Blade Guard & Spreader/Riving Knife

1. DISCONNECT MACHINE FROM POWER!
2. Remove table insert, but leave Phillips head screws mounted in table throat.
3. Raise blade all the way up.
4. Insert lower set of holes on spreader/riving knife into bracket slot, and tighten lock lever to secure spreader (see **Figure 44**).

Note: Do not insert upper set of holes on spreader into bracket slot. Doing so will result in improper installation of blade guard.

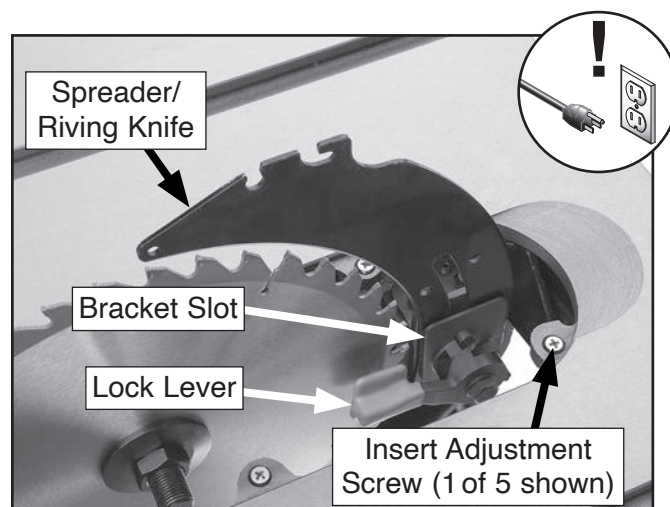


Figure 44. Lock lever used to secure spreader/riving knife.



5. Re-install table insert (refer to **Table/Dado Insert Adjustment** on **Page 69**).
6. Tug spreader upward to verify it is locked.
7. Push guard lever forward, as shown in **Figure 45**.
8. Insert rear pin on blade guard into rear slot of spreader, then push down on blade guard assembly so forward pin slides into forward slot of spreader (see **Figure 45**).

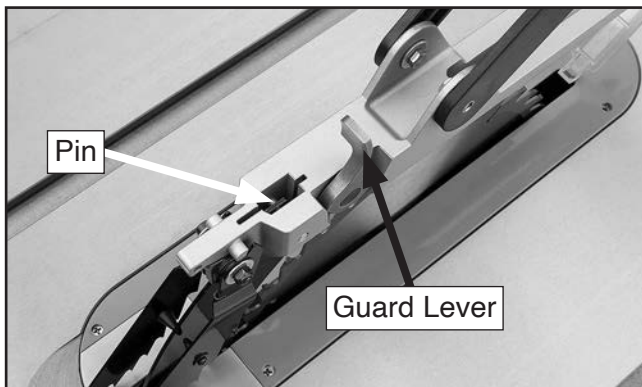


Figure 45. Example of blade guard installation.

9. Push guard lever toward rear of saw, locking blade guard.
10. Tug upward on blade guard assembly to verify that it is locked into spreader.

When properly installed, the blade guard should be set up similar to **Figure 46**. It should pivot freely up and down and return to the table in the resting position. It should also swing up high enough to accommodate the workpiece.

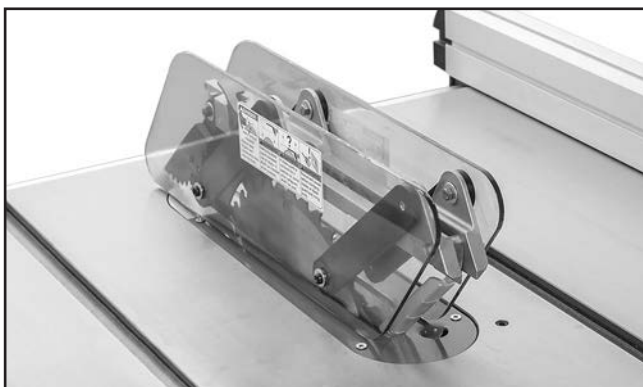


Figure 46. Example of blade guard installed.

11. Swing one side of blade guard up and out of the way.
12. While lifting up on right spreader pawl, place a straightedge against blade and spreader, making sure straightedge does not touch a blade tooth.

When properly aligned, spreader/riving knife will be in "Alignment Zone," shown in **Figure 47**, and will be parallel with blade.

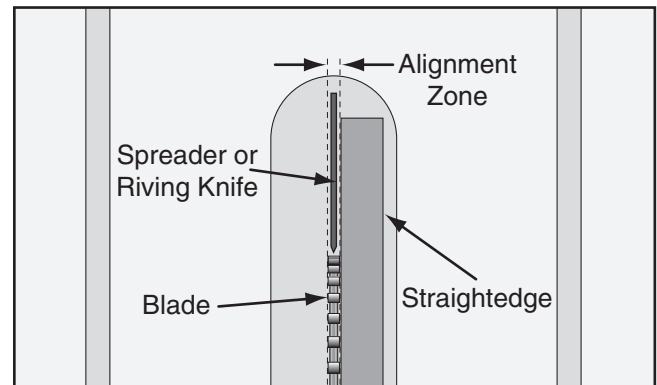


Figure 47. Spreader/riving knife alignment zone.

Anti-Kickback Pawls

The anti-kickback pawls allow the workpiece to travel in only one direction. If the workpiece moves backwards, such as during a kickback, the pawls will dig into the workpiece to slow or stop it.

To work properly, the pawls must return to their resting position after pivoting, shown in **Figure 48**.

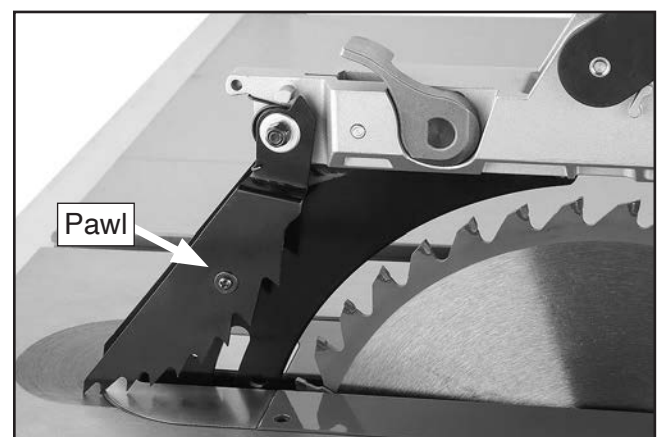


Figure 48. Example of pawls in resting position.



If the pawls fail to return to the resting position, the pivot area may need to be cleaned or the spring may have been dislodged or broken and will need to be fixed/replaced.

Disabling Pawls

You might disable the pawls if you are concerned about them scratching a delicate workpiece, or if you believe that they will obstruct a narrow workpiece and cause feeding difficulty or loss of control. Use your best judgment before retracting the pawls, as they are provided for your safety.

⚠ CAUTION

We do not recommend disabling the pawls during normal operations unless absolutely necessary. In most situations, disabling the pawls will increase your risk of serious personal injury in the event of a kickback.

⚠ CAUTION

The pawls are sharp and can lacerate fingers or hands. Use caution, and wear leather gloves when handling the pawls to reduce the risk of injury.

To disable pawls:

1. DISCONNECT MACHINE FROM POWER!
2. Remove cap screw, locking hex nut, washers, pawls, and retaining spring from blade guard assembly (see **Figure 49**).

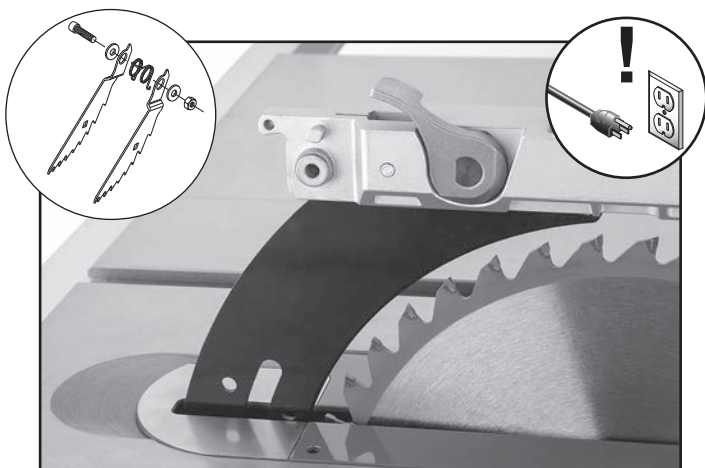


Figure 49. Example of pawls removed.

Enabling Pawls

To enable the pawls, re-install retaining spring, pawls, washers, cap screw, and locking hex nut onto blade guard assembly. Do not overtighten.

When to Use the Blade Guard

The blade guard assembly **MUST** be installed on the saw for all normal through cuts (those where the blade cuts all the way through the thickness of the workpiece). If the blade guard is removed for specific operations, always immediately replace it after those operations are complete.

When Not to Use the Blade Guard

The blade guard cannot be used on any non-through cuts (those in which the blade does not cut all the way through the thickness of the workpiece).

IMPORTANT: Whenever the blade guard cannot be used, the spreader/riving knife must be installed in the riving knife position (refer to **Riving Knife** on this page).

Sometimes the blade guard or its components can get in the way when cutting very narrow workpieces or other specialized cuts. Because the blade guard is provided to decrease your risk of injury, it should not be used if it gets in the way of making a safe cut. Use good judgment!

Riving Knife

The spreader also functions as a riving knife, which works in the same manner as the spreader, but is used for non-through cuts, except dados. It is a metal plate that prevents a newly cut workpiece from pinching the backside of the blade and causing kickback.

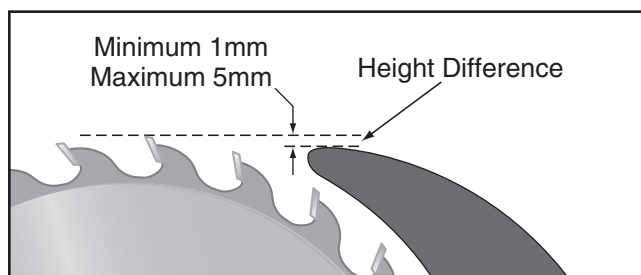


Figure 50. Example of height difference between riving knife and blade.



Similar to the spreader, the riving knife acts as a barrier behind the blade to reduce the risk of hands being pulled into the blade if kickback occurs.

When used as a riving knife, the spreader/riving knife must be kept within the range shown in **Figure 51**. For that reason, a 10" blade is required for operations that use a riving knife.

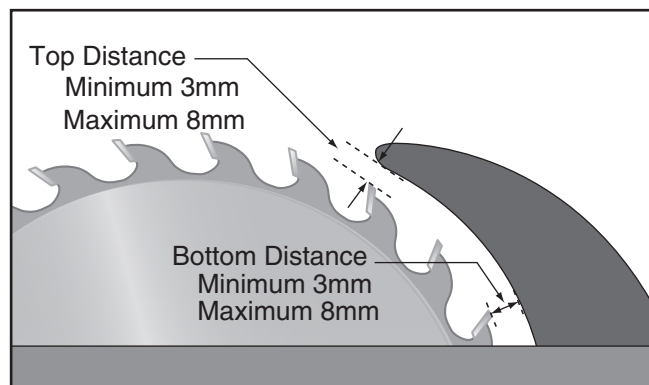


Figure 51. Example of allowable top and bottom distances between riving knife and blade.

To install riving knife:

1. DISCONNECT MACHINE FROM POWER!
2. Remove table insert, but leave Phillips head screws mounted in table throat.

Note: Table insert is held in place by magnet.

3. Raise blade all the way up.
4. Insert *upper* set of holes on spreader/riving knife into bracket slot and tighten lock lever to secure spreader/riving knife (see **Figure 52**).

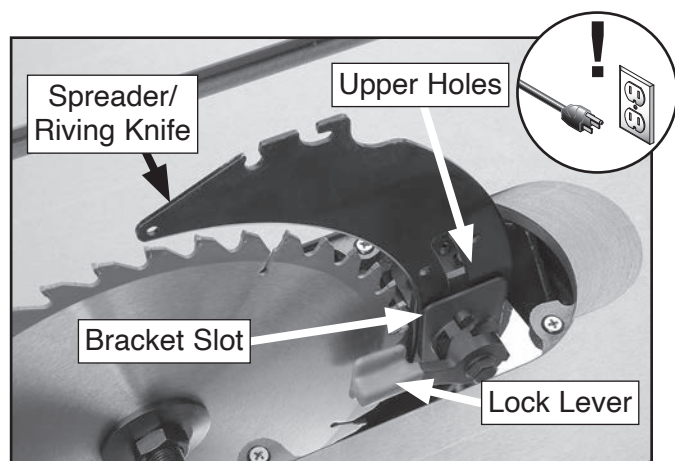


Figure 52. Lock lever used to secure spreader.

! WARNING

To ensure that the riving knife works safely, it **MUST** be aligned with and correctly adjusted to the blade. Refer to Page 64 to check or adjust the riving knife alignment.

5. Re-install table insert (refer to **Page 69**).
6. Tug upward on top of spreader/riving knife to verify it is locked.

When to Use the Riving Knife

Use the riving knife for all non-through cuts made with a standard table saw blade (i.e., dados or rabbet cuts, and when using a tenoning jig).

Also, use the riving knife for those special operations where the blade guard or its components get in the way of safe operation, such as with very narrow cuts.

When Not to Use the Riving Knife

Do not use the riving knife with a dado blade. In addition, although it is possible to use the riving knife for through cutting operations, the blade guard assembly offers far more injury protection and risk reduction than the riving knife. Therefore, **we strongly recommend** that you use the blade guard assembly for through cuts.



Ripping

"Ripping" means cutting with the grain of a natural wood workpiece. In man-made materials such as MDF or plywood, ripping simply means cutting lengthwise.

⚠ CAUTION

Serious injury can be caused by kickback. Kickback is a high-speed ejection of stock from the table saw toward an operator. The operator or bystanders may be struck by flying stock, or the operator's hands can be pulled into the blade during kickback.

To make a rip cut:

1. Review **Preventing Kickback** on **Page 11** and take necessary precautions to reduce likelihood of kickback.
2. If using natural wood, joint one long edge of workpiece on a jointer.
3. **DISCONNECT MACHINE FROM POWER!**
4. Ensure that blade guard/spreader is installed.
5. Set fence to desired width of cut on scale.
6. Adjust blade height so highest saw tooth protrudes no more than $\frac{1}{4}$ " above workpiece.
7. Set up safety devices such as featherboards or other anti-kickback devices, making sure no safety devices are contacting blade.
8. Plug saw into power source, turn it **ON**, and allow it to reach full speed.

Note: Jointed edge of workpiece must slide against fence during cutting operation.

9. Use a push stick to feed workpiece through saw blade, as shown in **Figure 53**, until workpiece is completely beyond saw blade.

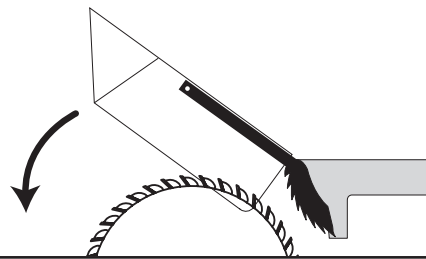


Figure 53. Typical ripping operation.

⚠ WARNING

Turn saw **OFF** and allow blade to come to a complete stop before removing cutoff piece. Failure to follow this warning could result in severe lacerations or amputation.

⚠ WARNING



Keep blade guard installed and in down position. Failure to do this could result in serious personal injury or death.



Crosscutting

"Crosscutting" means cutting across the grain of a natural wood workpiece, usually with a miter saw. In other man-made materials, such as MDF or plywood, crosscutting means cutting across the width of the workpiece.

To make a crosscut using miter gauge:

1. DISCONNECT MACHINE FROM POWER!
2. Ensure that blade guard/spreader is installed.
3. To avoid kickback, move rip fence aside and position miter gauge, adjusted to 90°, in a miter slot.
4. Adjust blade height so teeth protrude no more than 1/4" above workpiece.
5. Slide miter gauge near blade and adjust workpiece so blade will cut on waste side of line.
6. Plug in table saw, turn it **ON**, and allow it to reach full speed.
7. Hold workpiece firmly against face of miter gauge (as shown in **Figure 54**), and ease it through blade until workpiece is completely past saw blade.

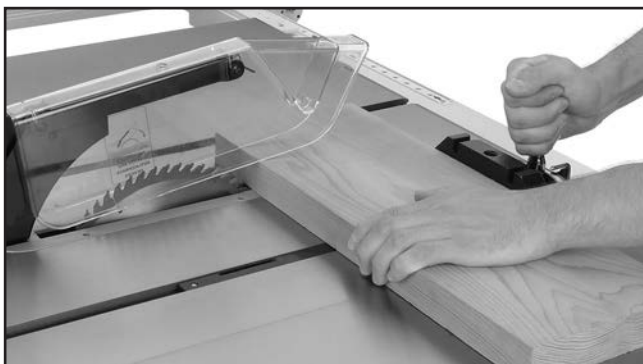


Figure 54. Typical crosscutting operation.

WARNING

Turn saw **OFF** and allow blade to come to a complete stop before removing cutoff piece. Failure to follow this warning could result in severe lacerations or amputation.

Miter Cuts

A miter is an angled crosscut. Miters are usually cut in the same manner as crosscuts, using the miter gauge and a predetermined mark on the workpiece.

To perform a miter cut:

1. DISCONNECT MACHINE FROM POWER!
2. Ensure that blade guard/spreader is installed.
3. Determine angle of cut. If angle needs to be very precise, use a protractor to set miter gauge to blade.
4. Place face of miter gauge against edge of workpiece and place bar across face of workpiece. Use bar as a guide to mark your cut, as shown in **Figure 55**.



Figure 55. Example of marking miter line.

5. Place miter gauge back into slot and hold workpiece firmly against miter gauge body. Slide miter gauge near blade and adjust workpiece so blade will cut on waste side of line.
6. Proceed to make cut in same manner as described in **Crosscutting** instructions.



Blade Tilt/Bevel Cuts

When the blade tilt adjustment bolts are properly adjusted (as described on **Page 60**), the blade tilt handwheel allows the operator to tilt the blade to the left, between 0° and 45°. This is used most often when cutting bevels, compound miters, or chamfers. **Figure 56** shows an example of the blade when tilted to 45°.

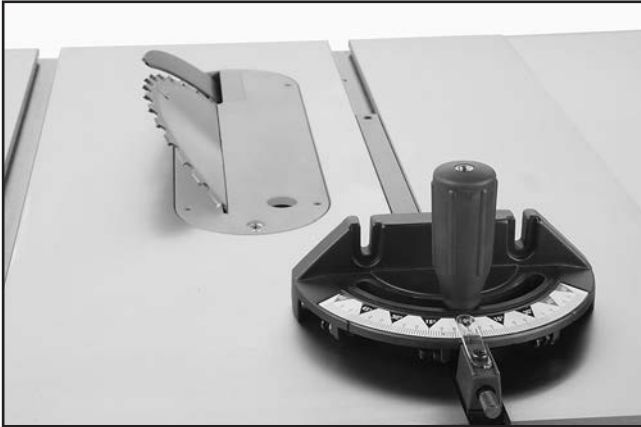


Figure 56. Example of blade tilted to 45° for bevel cutting (blade guard only removed for clarity).

Dado Cutting

Commonly used in furniture joinery, a dado is a straight channel cut in the face of the workpiece. Dadoes are "non-through" cuts that can be made with a dado blade or a standard saw blade. The **Figure** below shows a cutaway view of a dado cut being made with a dado blade.

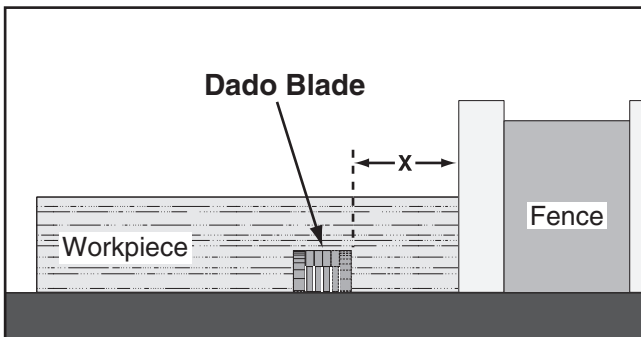


Figure 57. Example of a dado being cut with a dado blade.

The Model G0771Z accommodates 8" diameter dado blades. When using a dado blade, **DO NOT** install the riving knife.

Installing a Dado Blade

1. **DISCONNECT MACHINE FROM POWER!**
2. Remove table insert, blade guard assembly, spreader/riving knife, and saw blade.
3. Attach and adjust 8" dado blade system according to dado blade manufacturer's instructions.
4. Install included dado table insert.

WARNING

DO NOT make through cuts with a dado blade. The extra width of a dado blade will increase the risk of kickback during a through cut. Dado blades are only intended for non-through cuts. Failure to heed this warning could result in serious injury.

WARNING

Never try to cut a warped board by holding it down against the table. If kickback occurs, your hand could be pulled into the blade, resulting in accidental contact with the rotating blade, causing severe lacerations or amputation.

Cutting Dadoes with a Dado Blade

Because dado blades are much wider than standard blades, they place a greater amount of force against the workpiece when cutting. This additional force increases the risk of kickback, requiring the operator to take additional steps when cutting to keep their injury risk at an acceptable level.



WARNING

Dado blades have a higher risk of kickback than normal blades because their larger size applies stronger forces to the workpiece. This risk increases relative to the depth and width of the cut. To minimize your risk of serious personal injury, ensure that stock is flat and straight, and make multiple light cuts (rather than one deep cut) to achieve the desired cutting depth.

The **Figure** below demonstrates the sequential process of making multiple, light cuts that get progressively deeper. The actual number of cuts used should be determined by workpiece hardness, total dado depth, and feed rate. In general, if you hear the motor slow down during the cut, you are cutting too deep or feeding too fast.

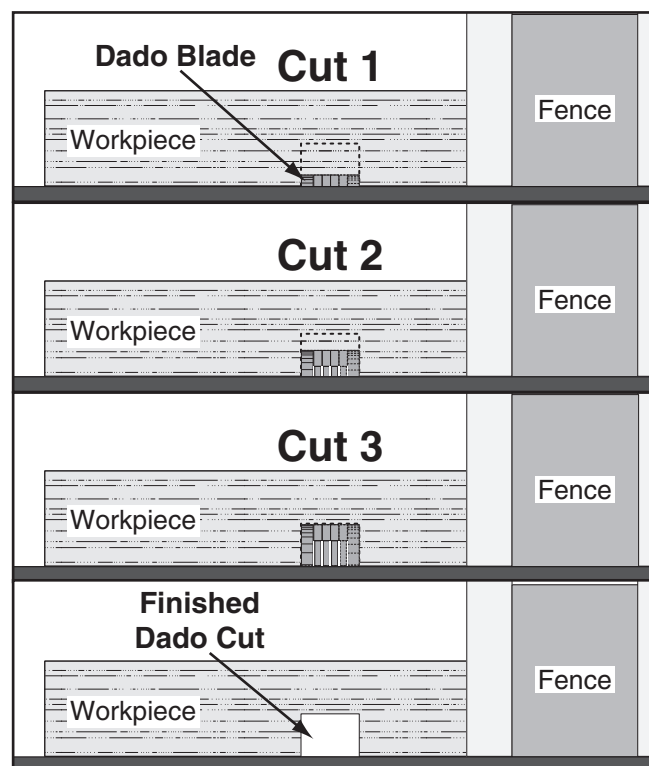


Figure 58. Example of dado being cut with multiple light cuts, instead of one deep cut.

To cut a dado with a dado blade:

1. DISCONNECT MACHINE FROM POWER!
2. Install 8" dado blade and dado insert.
3. Adjust dado blade to desired depth of cut.
4. Adjust distance between fence and inside edge of blade, as shown in **Figure 57** on **Page 37**, to dado length of a workpiece.
 - If dadoing across workpiece, use miter gauge and carefully line up desired cut with dado blade. To reduce kickback, DO NOT use fence in combination with miter gauge.
5. Connect saw to power source.
6. Turn saw **ON**. Blade should run smoothly, with no vibration.
7. When blade has reached full speed, perform test cut with scrap piece of wood.
8. If cut is satisfactory, repeat cut with actual workpiece.

Cutting Dadoes with a Standard Blade

A ripping blade (described on **Page 28**) is typically the best blade to use when cutting dadoes with a standard blade because it removes sawdust very efficiently.

To cut a dado with a standard blade:

1. DISCONNECT MACHINE FROM POWER!
2. Install 10" standard blade and table insert.
3. Mark width of dado cut on workpiece. Include marks on edge of workpiece so cut path can be aligned when workpiece is lying on table.
4. Raise blade up to desired depth of cut (depth of dado channel desired).
5. Set saw up for type of cut you need to make, depending on whether it is a rip cut (**Page 35**) or crosscut (**Page 36**).



- Align blade to cut one side of dado, as shown in **Figure 59**.

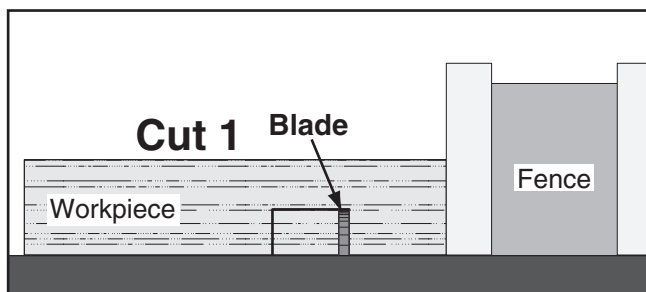


Figure 59. First cut for a single-blade dado.

- Reconnect saw to power source and turn saw **ON**. Allow blade to reach full speed, then perform cutting operation.
- Repeat cutting operation on other side of dado, as shown in **Figure 60**.

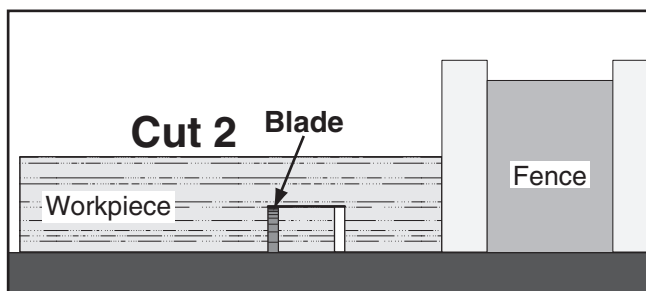


Figure 60. Second cut for a single-blade dado.

- Make additional cuts (see **Figure 61**) in center of dado to clear out necessary material. Dado is complete when channel is completely cleared out.

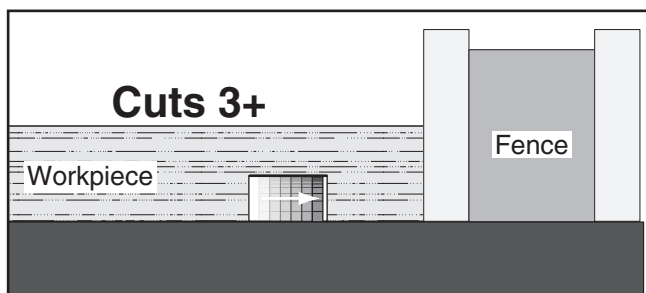


Figure 61. Additional single-blade dado cuts.

Rabbet Cutting

Commonly used in furniture joinery, a rabbet is an L-shaped groove cut in the edge of the workpiece. Rabbets can be cut with either a dado blade or a standard saw blade.

Rabbet cutting along the edge of a workpiece with a dado blade requires a sacrificial fence (**Figure 62**). Make the sacrificial fence the same length as the fence and $\frac{3}{4}$ " thick. Attach it to the fence with screws or clamps, making sure they are all secure and tight. Raise the blade into the sacrificial fence to the height needed.

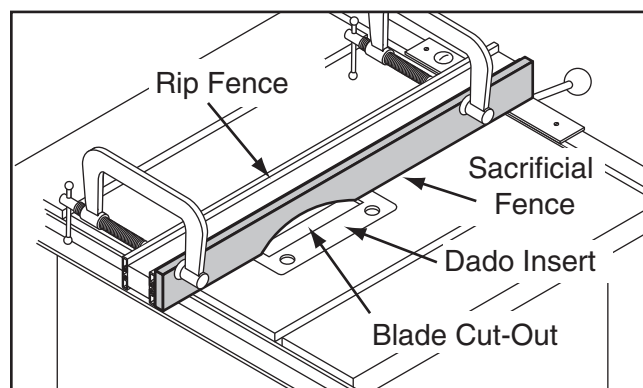


Figure 62. Example of sacrificial fence.

When using a dado blade, the included dado table insert must be installed and used during rabbeting operations.

!WARNING

Dado blades have a higher risk of kickback than normal blades because their larger size applies stronger forces to the workpiece. This risk increases relative to the depth and width of the cut. To minimize your risk of serious personal injury, ensure that stock is flat and straight, and make multiple light cuts (rather than one deep cut) to achieve the desired cutting depth.



CAUTION

Always use push sticks, featherboards, push paddles and other safety accessories whenever possible to increase control and reduce your risk of injury during operations that require blade guard be removed from saw. **ALWAYS** replace blade guard after dadoing is complete.

Cutting Rabbets with a Dado Blade

1. DISCONNECT MACHINE FROM POWER!
2. Adjust dado blade to height needed for rabbeting operation. When cutting deep rabbets, take more than one pass to reduce risk of kickback.
3. Adjust fence and align workpiece to perform cutting operation, as shown in **Figure 63**.

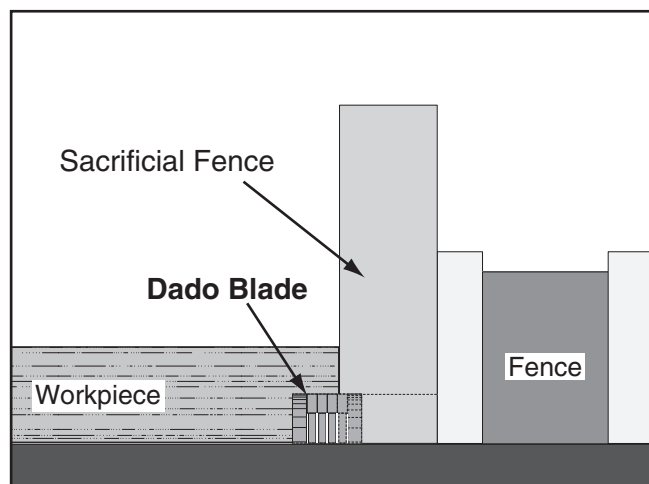


Figure 63. Rabbet cutting.

4. Reconnect saw to power source and turn saw **ON**. When blade has reached full speed, perform a test cut with a scrap piece of wood.
 - If cut is satisfactory, repeat cut with workpiece.

Cutting Rabbets with a Standard Blade

A ripping blade is typically the best blade to use for cutting rabbets when using a standard blade because it removes sawdust very efficiently. (See **Page 28** for blade details.) Also, a sacrificial fence is not required when cutting rabbets with a standard blade.

To cut rabbets with a standard blade:

1. DISCONNECT MACHINE FROM POWER!
2. Ensure that riving knife and standard table insert are installed.
3. Mark width of rabbet cut on edge of workpiece, so you can clearly identify intended cut while it is laying flat on saw table.
4. Raise blade up to desired depth of cut (depth of rabbet channel desired).
5. Stand workpiece on edge, as shown in **Figure 64**, then adjust fence so blade is aligned with inside of your rabbet channel.


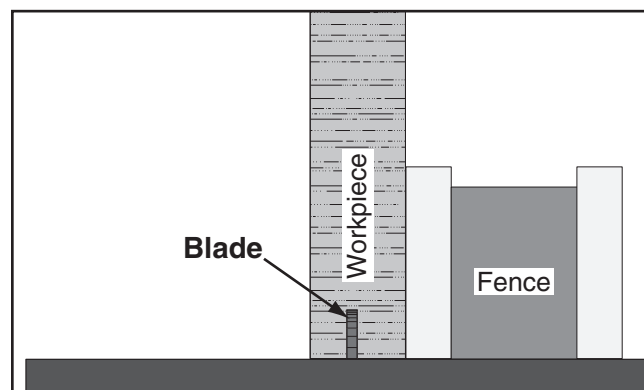


Figure 64. Example of rabbet cutting with a standard blade.

- If workpiece is very tall, or is unstable when placed against fence, lay it flat on table and use a dado blade to perform rabbet cut.



!WARNING

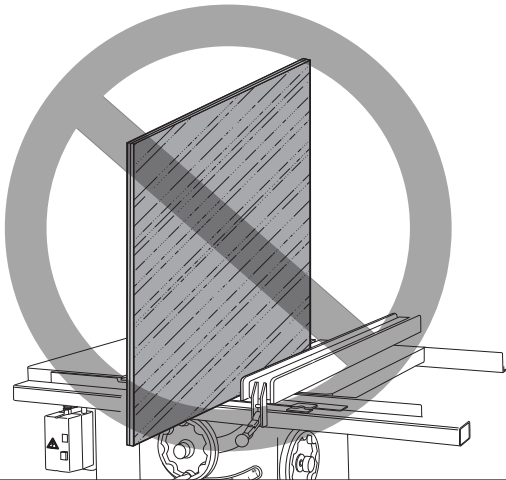

DO NOT place a tall board on edge to perform a rabbet cut with a standard blade. Workpieces that are too tall to properly support with fence can easily shift during operation and cause kickback. Instead, place stock flat on saw and perform rabbet cut with a dado blade, as instructed on Page 40.

6. Reconnect saw to power source, then perform cut.
7. Lay workpiece flat on table, as shown in **Figure 65**, adjust saw blade height to intersect with first cut, then perform second cut to complete rabbet.

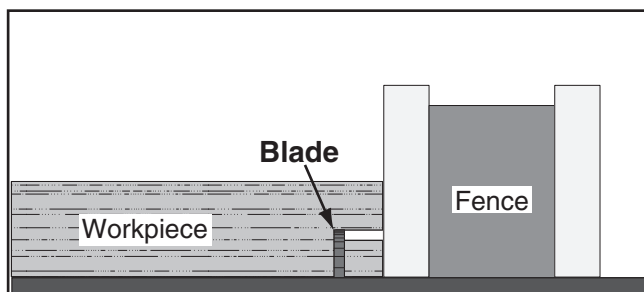


Figure 65. Example of second cut to create a rabbet.

Resawing

!WARNING

Resawing operations require proper procedures to avoid serious injury and prevent kickback. Any tilting or movement of workpiece away from fence will likely cause kickback. Be certain that stock is flat and straight. Failure to follow these warnings could result in serious personal injury or amputation.

Resawing is the process of cutting a thick piece of stock into one or more thinner pieces. Although resawing can be done with a table saw, we strongly recommend that you use a bandsaw instead.

A bandsaw is the ideal machine for resawing, and resawing with one is fairly easy and safe. A table saw is not intended for resawing, and resawing with one is difficult and more dangerous than a bandsaw due to the increased risk of kickback from binding and deep cuts, and the increased risk of injury from having to remove the guard.

If you insist on resawing with a table saw, **DO NOT** do so without using a resaw barrier and wearing a full face shield. The following instructions describe how to build a resaw barrier and add an auxiliary fence to your standard fence, to reduce the risk injury from resawing on a table saw.

Note: To determine the maximum resawing height for this table saw, find the maximum blade height, then double it and subtract $\frac{1}{8}$ ".



Making Resaw Barrier

When resawing, the resaw barrier acts in tandem with the rip fence to provide tall support for the workpiece. This minimizes the probability of it binding against the blade and causing kickback.

Tools Needed:	Qty
Table Saw	1
Jointer and Planer	Recommended
Clamps	2 Minimum
Drill	1
Drill Bits $\frac{1}{8}$ ", $\frac{9}{64}$ "	1 Each
Countersink Bit	1

Components Needed for Resaw Barrier:

Wood* $\frac{3}{4}$ " x $5\frac{1}{2}$ " x Length of Fence	1
Wood* $\frac{3}{4}$ " x 3" x Length of Fence	1
Wood Screws #8 x 2"	4
Wood Glue	As Needed

**Only use furniture-grade plywood, kiln-dried hardwood, or HDPE plastic to prevent warping.*

To build a resaw barrier:

1. Cut your wood pieces to size specified above. If you are using hardwood, cut pieces over-size, then joint and plane them to correct size to make sure they are square and flat.
2. Pre-drill and countersink four holes approximately $\frac{3}{8}$ " from bottom of $5\frac{1}{2}$ " wood piece.
3. Glue end of 3" board, clamp boards at a 90° angle with larger board in vertical position, as shown in **Figure 66**, then fasten together with wood screws.

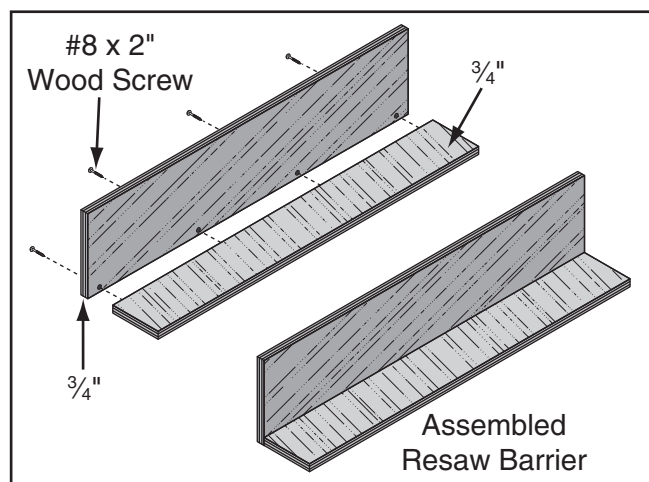


Figure 66. Resaw barrier.

Making Auxiliary Fence

An auxiliary fence is necessary if you are resawing a workpiece that is taller than it is wide. The fence should be no less than $\frac{1}{2}$ " shorter than the board to be resawn.

The fence should be similar to the one in **Figure 67** when installed.

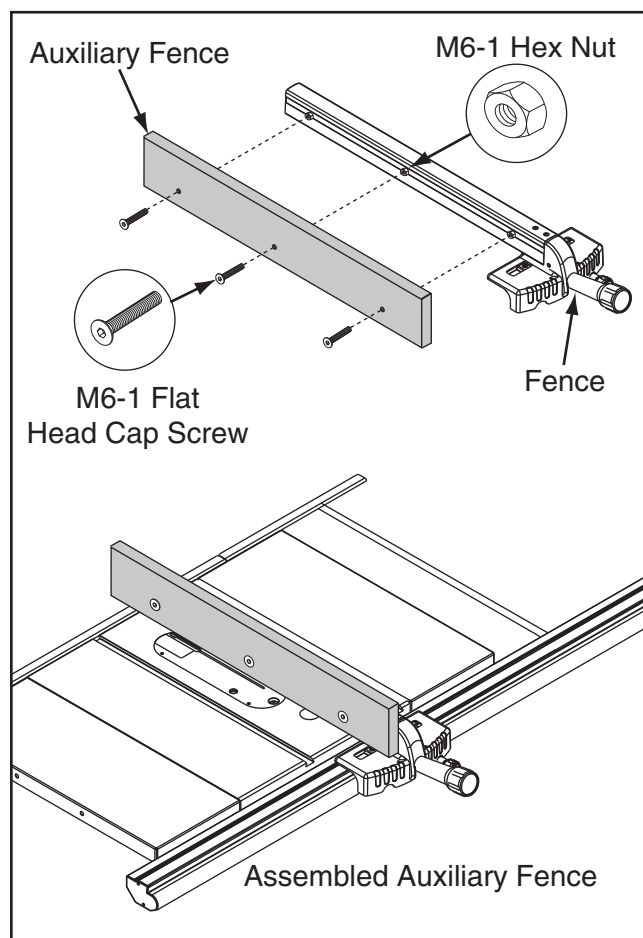


Figure 67. Example of auxiliary fence attached to Model G0771Z fence face.

Tools Needed:	Qty
Clamps	2
Drill	1
Drill Bit $\frac{1}{4}$ "	1
Countersink Drill Bit	1
Hex Wrench 5mm	1
Ruler	1



Components Needed:

Hex Nuts M6-13-6
Flat Head Cap Screws M6-1 (length varies) ..3-6
Wood* $\frac{3}{4}$ " x 4" x Length of Fence 1

**Only use furniture-grade plywood, kiln-dried hardwood, or HDPE plastic to prevent warping.*

To build an auxiliary fence:

1. Remove fence cap from fence face on which you will mount auxiliary fence (see **Figure 68**).

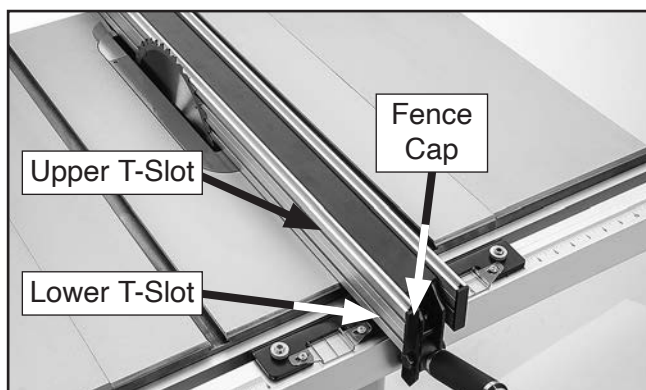


Figure 68. Auxiliary fence mounts on upper or lower T-slots of fence face.

2. Slide (3) M6-1 hex nuts into either the upper or lower T-slot.

Note: For additional mounting strength, attach auxiliary board with six hex nuts and flat head cap screws using both T-slots.

3. Place auxiliary fence board against fence face. Place a thin metal shim (such as a ruler) between table and bottom of auxiliary fence board to ensure adequate clearance between fence board and table. Clamp in position.

4. Measure depth of board plus depth of T-slot, to determine maximum length of M6-1 flat head cap screws needed to mount auxiliary fence board to fence face.
5. Measure centerline of fence T-slot and transfer to auxiliary fence board to determine where to drill holes in board for flat head cap screws.
6. Set auxiliary fence board aside, and using $\frac{1}{4}$ " drill bit, drill mounting holes in auxiliary fence board. Countersink holes $\frac{1}{16}$ " deep so head of cap screw sits slightly beneath face of auxiliary fence board.
7. Insert cap screws through holes in auxiliary fence board (see **Figure 69**).
8. Align cap screw threads with hex nuts and tighten (see **Figure 69**).

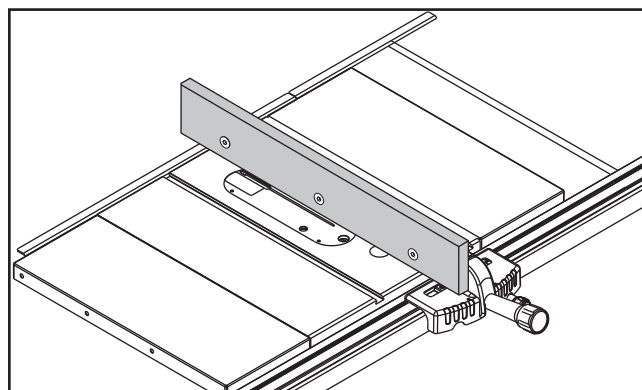


Figure 69. Example auxiliary fence attached to included fence.

9. Replace fence cap.



Resawing Operations

The table saw motor is pushed to its limits when resawing. If the motor starts to bog down, slow down your feed rate. Motor overloading and blade wear can be reduced by using a ripping blade. Ripping blades are designed to clear the sawdust quickly.

Components Needed for Resawing:

Zero-Clearance Insert	1
Ripping Blade 10".....	1
Clamps	2
Shop-Made Auxiliary Fence	1
Shop-Made Resaw Barrier.....	1

WARNING

You may experience kickback during this procedure. Stand to the side of the blade and wear safety glasses and a full face shield to prevent injury when resawing.

To perform resawing operations:

1. DISCONNECT MACHINE FROM POWER!
2. Remove standard table insert and blade guard assembly.
3. Install a ripping blade, install riving knife, lower blade below table surface, then install zero-clearance table insert.
4. Attach auxiliary fence and set it to desired width.

Note: When determining correct width, don't forget to account for blade kerf and inaccuracy of fence scale while auxiliary fence is installed.

5. Place workpiece against auxiliary fence and slide resaw barrier against workpiece, as shown in **Figure 70**. Now clamp resaw barrier to top of table saw at both ends.

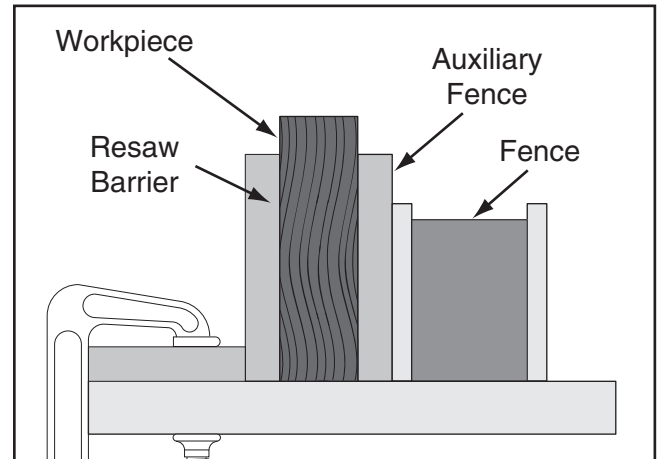


Figure 70. Ideal resaw workpiece setup.

6. Lower blade completely below table-top, and slide workpiece over blade to make sure it moves smoothly and fits between resaw barrier and fence.
7. Raise blade approximately 1 inch, or close to half the height of workpiece (see **Figure 71**), whichever is less.

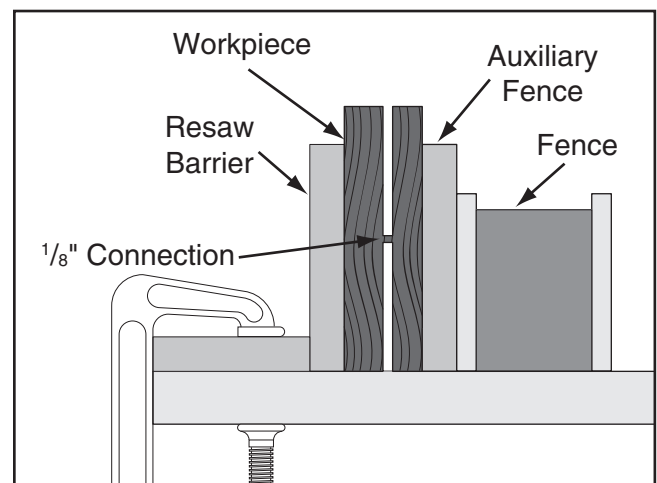


Figure 71. Ideal completed resaw cut.



8. Plug in table saw, turn it **ON**, and use a push stick or push block to feed workpiece through blade, using a slow and steady feed rate.

Note: *We recommend making a series of light cuts that get progressively deeper, to reduce the chance of stalling the motor.*

9. Flip workpiece end for end, keeping same side against fence, and run workpiece through blade.
10. Repeat **Steps 7–9** until blade is close to half the height of board to be resawn. The ideal completed resaw cut will leave a 1/8" connection when resawing is complete as shown in **Figure 71** on **Page 44**. Leaving a 1/8" connection will reduce risk of kickback.
11. Turn **OFF** table saw, then separate parts of workpiece and hand plane remaining ridge to remove it.
12. When finished resawing, remove resaw barrier and auxiliary fence, then re-install blade guard/spreader or riving knife and standard table insert.

WARNING

The danger of kickback increases relative to the depth of a cut. Reduce the risk of kickback by making multiple passes to achieve the desired depth of cut. Failure to follow these warnings could result in serious personal injury.

WARNING

Always use push sticks or push paddles to increase safety and control during operations which require that the blade guard and spreader must be removed from the saw. **ALWAYS** replace the blade guard after resawing is complete.



SECTION 5: SHOP-MADE SAFETY ACCESSORIES

Featherboards

Easily made from scrap stock, featherboards provide an added degree of protection against kickback, especially when used together with push sticks. They also maintain pressure on the workpiece to keep it against the fence or table while cutting, which makes the operation easier and safer because the cut can be completed without the operator's hands getting near the blade. The angled ends and flexibility of the fingers allow the workpiece to move in only one direction.

Making a Featherboard

This sub-section covers the two basic types of featherboards: 1) Those secured by clamps, and 2) those secured with the miter slot.

Material Needed for Featherboard

Hardwood $\frac{3}{4}$ " x 3" x 10" (Minimum)
Hardwood $\frac{3}{4}$ " x 6" x 28" (Maximum) 1

Additional Material Needed for Mounting Featherboard in Miter Slot

Hardwood $\frac{3}{8}$ " x (Miter Slot Width) x 5" L 1
Wing Nut $\frac{1}{4}$ "-20 1
Flat Head Screw $\frac{1}{4}$ "-20 x 2" 1
Flat Washer $\frac{1}{4}$ "-20 1

To make a featherboard:

1. Cut a hardwood board approximately $\frac{3}{4}$ " thick to size. Length and width of board can vary according to your design. Most featherboards are 10"–28" long and 3"–6" wide. Make sure wood grain runs parallel with length of featherboard, so fingers you will create in **Step 3** will bend without breaking.
2. Cut a 30° angle at one end of board.

⚠ CAUTION

We recommend using a bandsaw for making fingers in the next step because it tends to be safer. A table saw can be used, but it will over-cut the underside of the ends, produce a thicker kerf, and require you to stop the blade half-way through the cut, which can be dangerous.

3. Make a series of end cuts with the grain $\frac{3}{8}$ "– $\frac{1}{4}$ " apart and 2"–3" long, as shown in **Figure 72 (A)**. Alternatively, start cuts at 2"–3" deep, then make them progressively deeper, as shown in **Figure 72 (B)**.

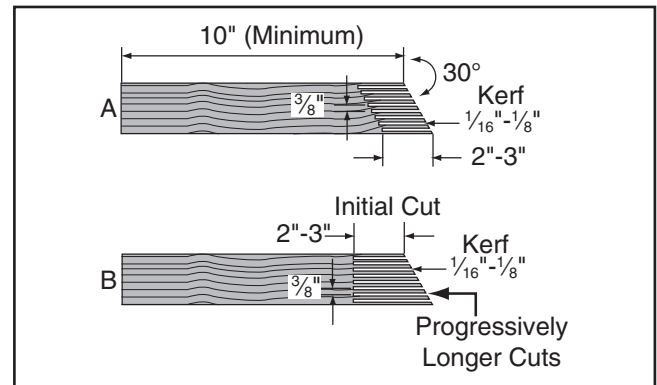


Figure 72. Patterns for featherboards (top view shown).

IMPORTANT: Cuts made across grain result in weak fingers that easily break when flexed. When made correctly, fingers should withstand flexing from moderate pressure. To test finger flexibility, push firmly on ends with your thumb. If fingers do not flex, they are likely too thick (cuts are too far apart).

NOTICE

Only Steps 1–3 are required to make a clamp-mounted featherboard. Refer to Page 48 for instructions on clamping.



4. Rout a $\frac{1}{4}$ "- $\frac{3}{8}$ " wide slot 4"-5" long in workpiece and 1"-2" from short end of featherboard (see **Figure 73**).

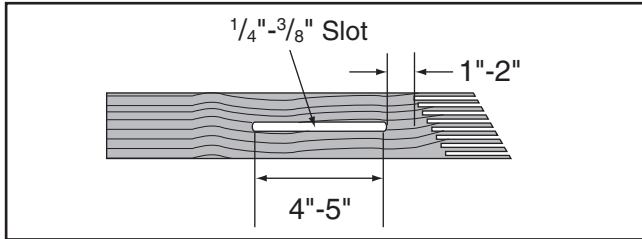


Figure 73. Slot routed in featherboard.

5. Cut a miter bar approximately 5" long that will fit in table miter slot, as shown in **Figure 74**.

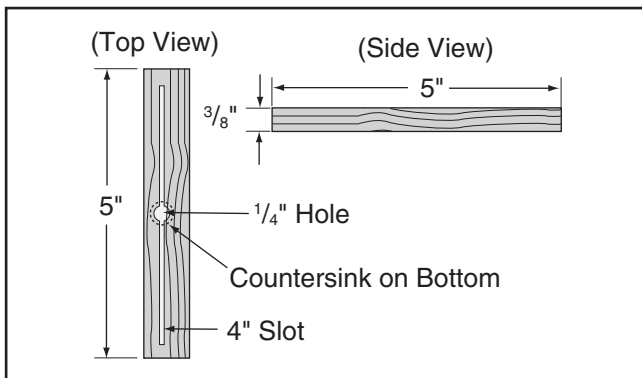


Figure 74. Miter bar pattern.

Tip: Consider making miter bar longer for larger featherboards—approximately half the length of total featherboard—to support force applied to the featherboard during use.

6. Drill a $\frac{1}{4}$ " hole in center of bar, then countersink bottom to fit a $\frac{1}{4}$ "-20 flat head screw.

7. Mark a 4" line through center of countersunk hole in center, then use a jig saw with a narrow blade to cut it out.
8. Assemble miter bar and featherboard with a $\frac{1}{4}$ "-20 x flat head screw, flat washer, and a wing nut or a star knob (see **Figure 75**). Congratulations! Your featherboard is complete.

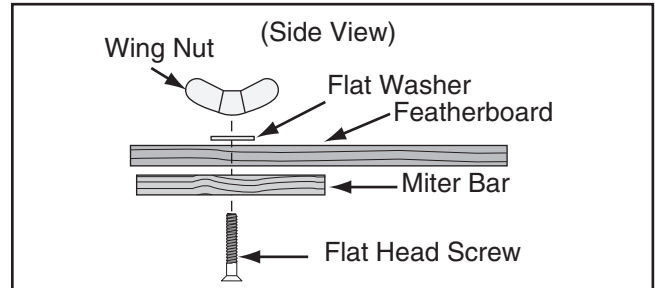


Figure 75. Assembling miter slot featherboard components.

Note: The routed slot, countersink hole, and flat head screw are essential for miter bar to clamp into miter slot. When wing nut is tightened, it will draw flat head screw upward into countersunk hole. This will spread sides of miter bar and force them into walls of miter slot, locking featherboard in place.

Tip: The length of the flat head screw depends on thickness of featherboard—though $1\frac{1}{2}$ " to 2" lengths usually work.

Now, proceed to **Mounting Featherboard in Miter Slot** on **Page 48**.



Mounting Featherboards w/Clamps

1. Lower saw blade, then adjust fence to desired width and secure it.
2. Place workpiece against fence, making sure it is 1" in front of the blade.
3. Place a featherboard on table away from blade so all fingers point forward and contact workpiece (see **Figure 76**).

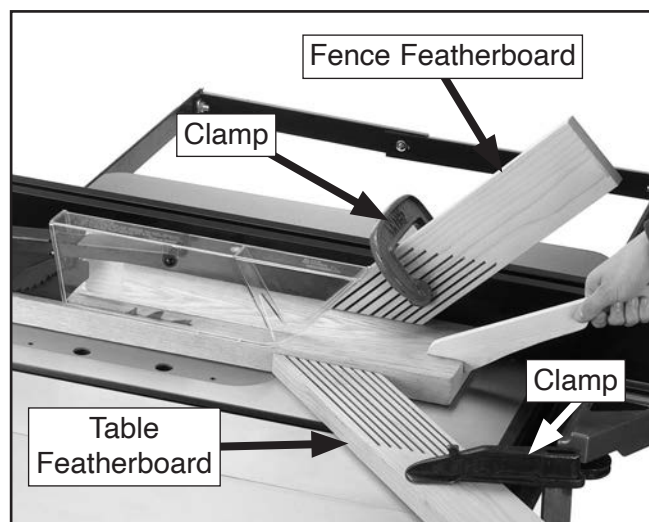


Figure 76. Example of featherboards secured with clamps.

4. Secure featherboard to table with a clamp.
5. Check featherboard by pushing it with your thumb to ensure it is secure.
 - If featherboard moves, tighten clamp more.
6. Optional: If cutting long workpieces, it may be beneficial to use a second featherboard attached to fence to keep board firmly against table while feeding.

Mounting Featherboard in Miter Slot

1. Lower saw blade, then adjust fence to desired width and secure it.
2. Place workpiece evenly against fence, making sure it is 1" in front of blade.
3. Slide featherboard miter bar into miter slot, making sure fingers slant toward blade, as shown in **Figure 77**.

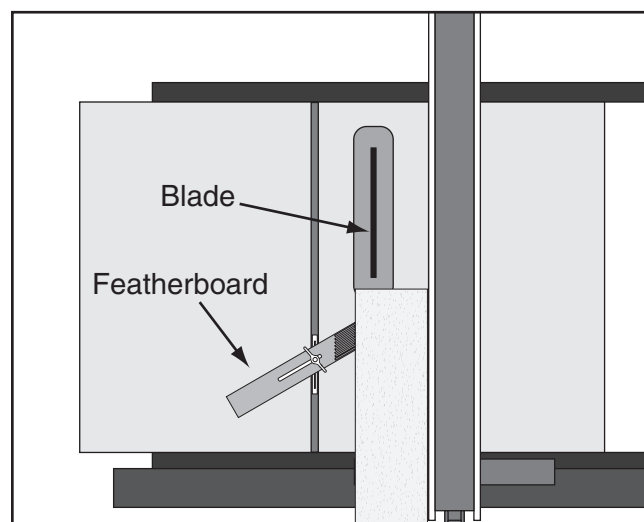


Figure 77. Featherboard installed in miter slot and supporting workpiece for ripping cut.

4. Position fingered edge of featherboard against edge of workpiece, so that all fingers contact workpiece. Slide featherboard toward blade until first finger is nearly even with end of workpiece, which should be 1" away from blade.
5. Double check workpiece and featherboard to ensure they are properly positioned, as described in **Step 4**. Then secure featherboard to table. Check featherboard by hand to make sure it is tight.

Note: The featherboard should be placed firmly enough against workpiece to keep it against fence but not so tight that it is difficult to feed workpiece.



Push Sticks

When used correctly, push sticks reduce the risk of injury by keeping hands away from the blade while cutting. In the event of an accident, a push stick can also absorb damage that would have otherwise happened to hands or fingers.

Using a Push Stick

Use push sticks whenever your hands will get within 12" of the blade. To maintain control when cutting large workpieces, start the cut by feeding with your hands then use push sticks to finish the cut, so your hands are not on the end of the workpiece as it passes through the blade.

Feeding: Place the notched end of the push stick against the end of the workpiece (see **Figure 79** below), and move the workpiece into the blade with steady downward and forward pressure.

Supporting: A second push stick can be used to keep the workpiece firmly against the fence while cutting. When using a push stick in this manner, only apply pressure before the blade; otherwise, pushing the workpiece against or behind the blade will increase the risk of kickback (see "Push Stick Prohibition Zone" in **Figure 78** below).

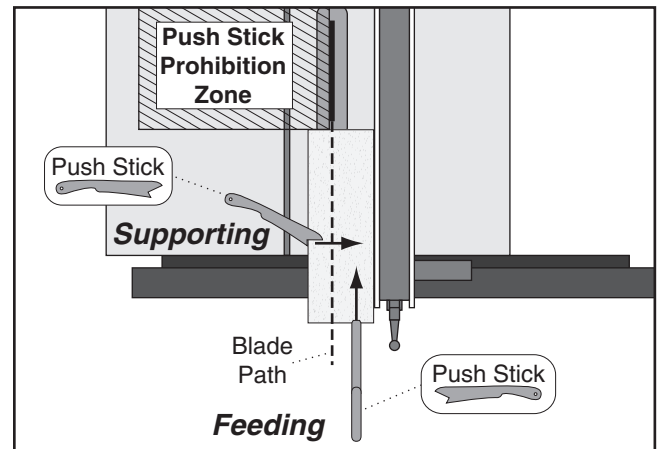


Figure 78. Using push sticks to rip narrow stock.

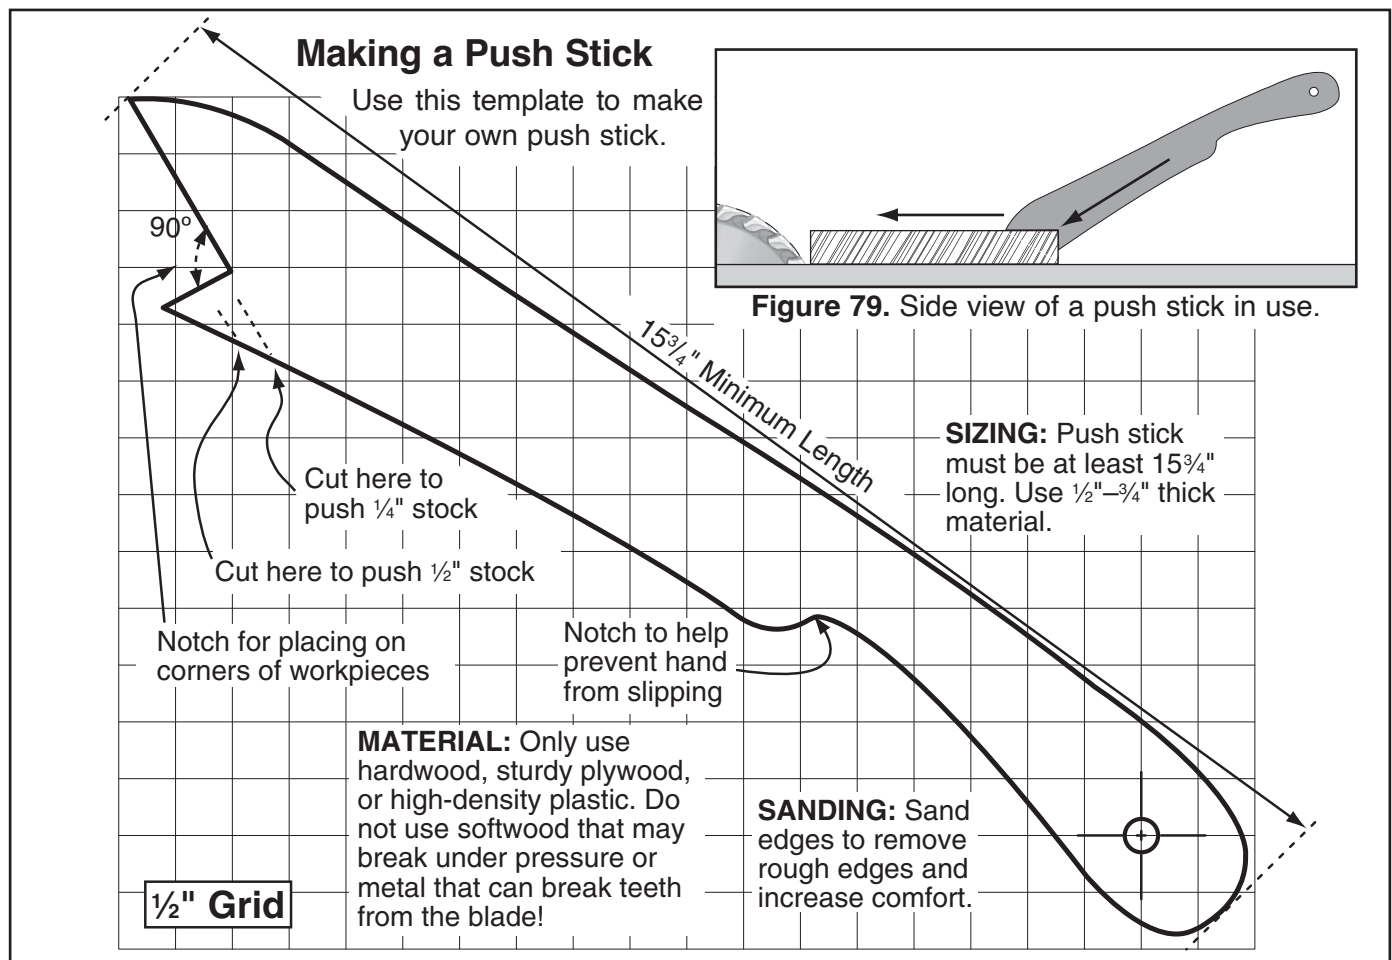


Figure 80. Template for a basic shop-made push stick (not shown at actual size).



Push Blocks

When used correctly, a push block reduces the risk of injury by keeping hands away from the blade while cutting. In the event of an accident, a push block often takes the damage that would have otherwise happened to hands or fingers.

Using a Push Block

A push block can be used in place of or in addition to a push stick for feeding workpieces into the blade. Due to their design, push blocks allow the operator to apply firm downward pressure on the workpiece that could not otherwise be achieved with a push stick.

The push block design on this page can be used in two different ways (see **Figure 81** below). Typically, the bottom of the push block is used until the end of the workpiece reaches the blade.

The notched end of the push block is then used to push the workpiece the rest of the way through the cut, keeping the operator's hands at a safe distance from the blade. A push stick is often used at the same time in the other hand to support the workpiece during the cut (see **Using a Push Stick** on previous page).

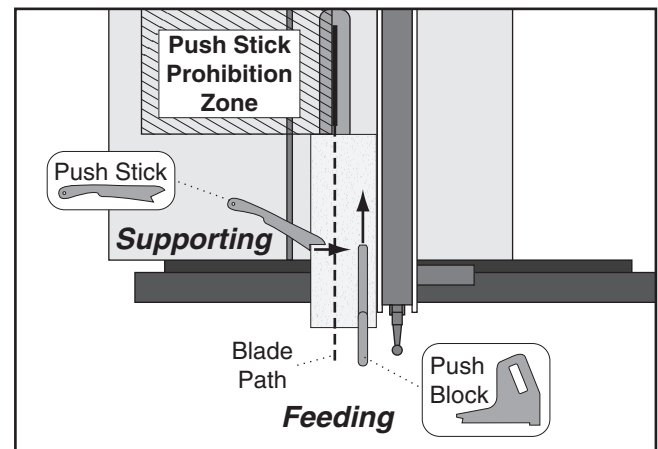


Figure 82. Using a push block and push stick to make a rip cut.

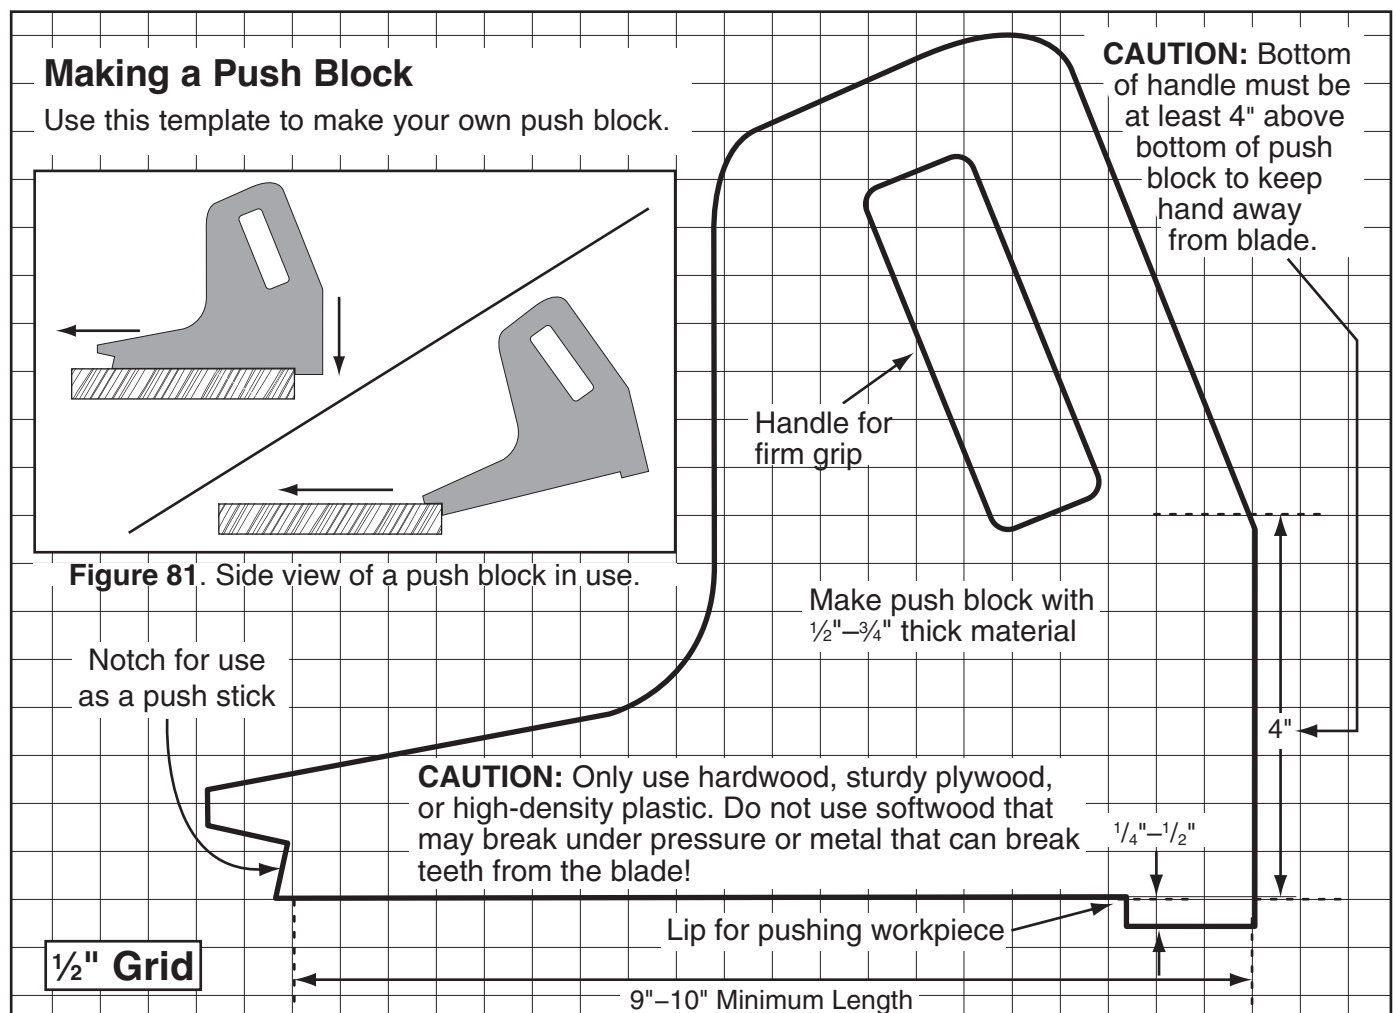


Figure 83. Template for a shop-made push block (shown at 50% of full size).



Narrow-Rip Auxiliary Fence & Push Block

There are designs for hundreds of specialty jigs that can be found in books, trade magazines, and on the internet. These types of jigs can greatly improve the safety and consistency of cuts. They are particularly useful during production runs when dozens or hundreds of the same type of cut need to be made.

The narrow-rip auxiliary fence and push block system shown in this section is an example of a specialty jig that can be made to increase the safety of very narrow rip cuts.

Material Needed for Narrow Rip Auxiliary Fence & Push Block

Hardwood $\frac{3}{4}$ " x 3" x Length of Fence 1
 Plywood $\frac{3}{4}$ " x $5\frac{1}{4}$ " x Length of Fence 1
 Wood Screws #8 x $1\frac{1}{2}$ " 8

Material Needed for Push Block

Hardwood or Plywood $\frac{3}{4}$ " x 15" x $5\frac{5}{8}$ " 1
 Hardwood or Plywood $\frac{3}{4}$ " x 10" x 5"–9" 1
 Cyanoacrylate Wood Glue Varies
 Wood Screws #8 x $1\frac{1}{2}$ " As Needed

Making a Narrow-Rip Push Block for an Auxiliary Fence

1. Cut a piece of $\frac{3}{4}$ " thick plywood $5\frac{1}{4}$ " wide and as long as your table saw fence; cut a piece of $\frac{3}{4}$ " thick hardwood 3" wide and as long as your table saw fence, as shown in **Figure 84**.

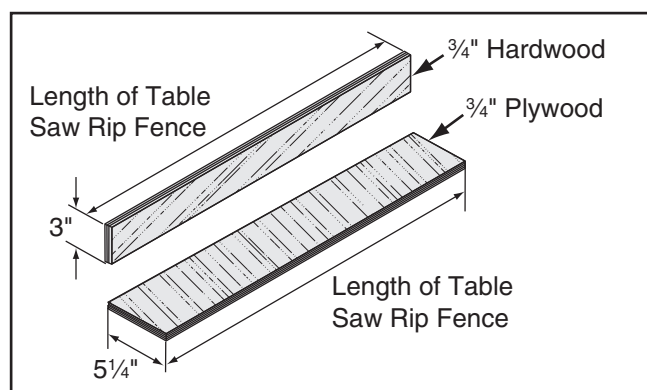


Figure 84. Auxiliary fence dimensions.

Note: We recommend cutting hardwood board oversize, then jointing and planing it to correct size to make sure board is square and flat. Only use furniture-grade plywood or kiln-dried hardwood to prevent warping.

2. Pre-drill and countersink eight pilot holes $\frac{3}{8}$ " from bottom of 3" wide board, then secure boards together with eight #8 x $1\frac{1}{2}$ " wood screws, as shown in **Figure 85**.

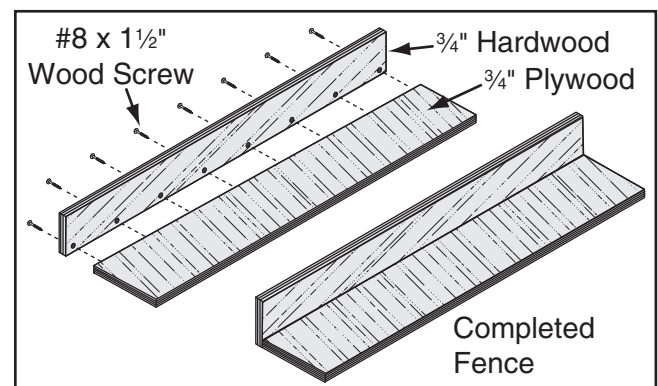


Figure 85. Location of pilot holes.

3. Using $\frac{3}{4}$ " material you used in previous steps, cut out pieces for push block per dimensions shown in **Figure 86**; for handle, cut a piece 10" long by 5"–9" high and shape it as desired to fit your hand.

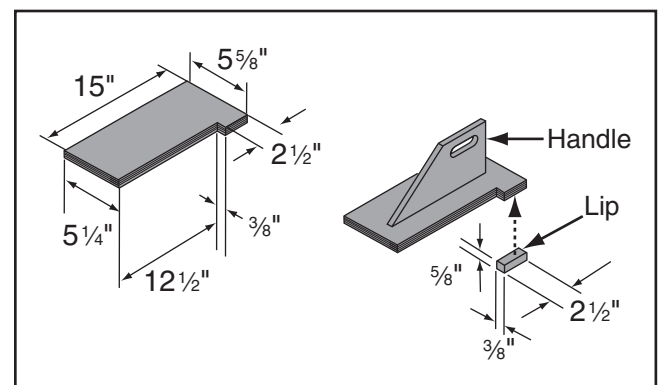


Figure 86. Push block dimensions and construction.

4. Attach handle to base with #8 x $1\frac{1}{2}$ " wood screws, and attach lip to base with cyanoacrylate-type wood glue.



Using the Auxiliary Fence & Push Block

1. Place auxiliary fence on table and clamp it to fence at both ends, then adjust distance between auxiliary fence and blade—this determines how wide workpiece will be ripped (see **Figure 87**).


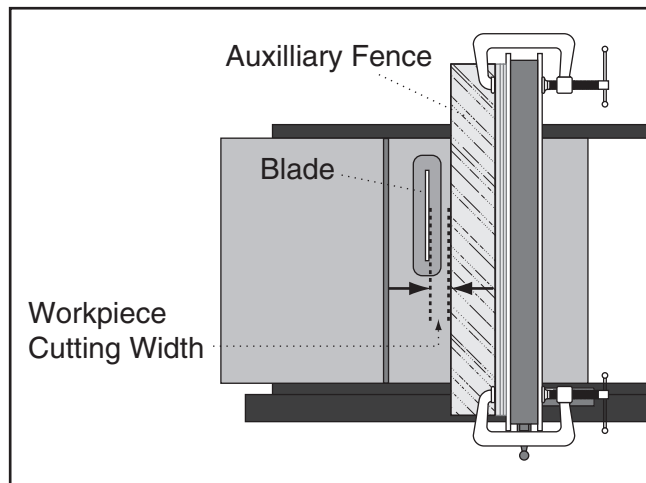


Figure 87. Adjusting ripping distance between blade and auxiliary fence.

2. Install blade guard, then remove pawls, as explained on **Page 32**, so right pawl does not interfere with push block lip.

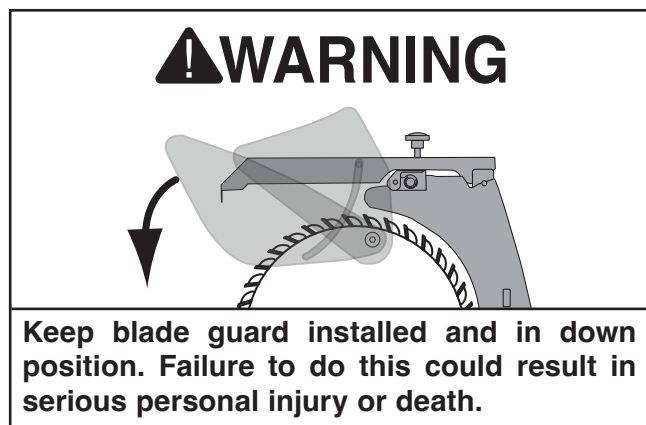

3. Place workpiece 1" behind blade and evenly against table and auxiliary fence.

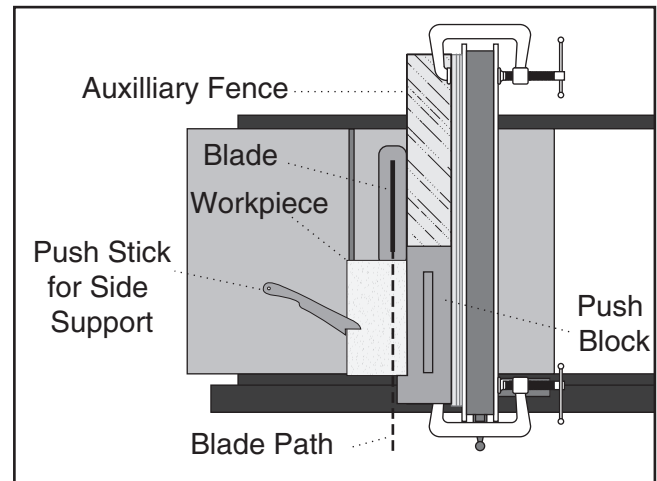


Figure 88. Push block in position to push workpiece through blade.

4. Turn saw **ON**, then begin ripping workpiece using a push stick for side support.
5. As workpiece nears end of cut, place push block on auxiliary fence with lip directly behind workpiece, then release push stick just before blade.
6. Guide workpiece rest of way through cut with push block, as shown in **Figure 89**.

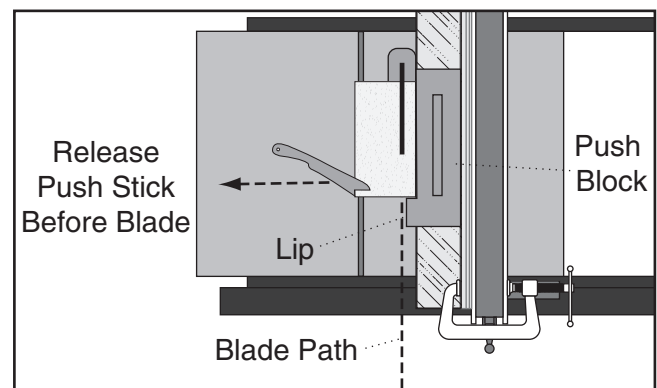


Figure 89. Ripping with push block.



7. Re-install spreader pawls when finished using auxiliary fence and push block.



Outfeed & Support Tables

One of the best accessories for improving the safety and ease of using a table saw is simply placing a large table (outfeed table) behind the saw to catch the workpiece (see **Figure 90**). Additionally, another table to the left of the saw (support table) can also help support large workpieces so they can be cut safely and accurately.



Figure 90. Example of outfeed & support tables.

Crosscut Sled

A crosscut sled (see **Figure 91**) is a fantastic way to improve the safety and accuracy of crosscutting on the table saw. Most expert table saw operators use a crosscut sled when they have to crosscut a large volume of work, because the sled offers substantial protection against kickback when crosscutting.



Figure 91. Example of crosscut sled.



SECTION 6: ACCESSORIES

! WARNING

Installing unapproved accessories may cause machine to malfunction, resulting in serious personal injury or machine damage. To reduce this risk, only install accessories recommended for this machine by Grizzly.

NOTICE

Refer to our website or latest catalog for additional recommended accessories.

- D4206—Clear Flexible Hose 4" x 10'
- D4256—45° Elbow 4"
- D4199—Black Flexible Hose 4" x 50'
- W1034—Heavy-Duty Clear Flex Hose 4" x 10'
- D2107—Hose Hanger 4 1/4"
- W1015—Y-Fitting 4" x 4" x 4"
- W1017—90° Elbow 4"
- W1019—Hose Coupler (Splice) 4"
- W1317—Wire Hose Clamp 4"
- W1007—Plastic Blast Gate 4"
- W1053—Anti-Static Grounding Kit

We've hand picked a selection of commonly used dust collection components for machines with 4" dust ports.



Figure 92. Dust collection accessories.

- G1163P—1 HP Floor Model Dust Collector
- G0710—1 HP Wall-Mount Dust Collector
- T33948—3.0 Micron Upgrade Bag

Excellent point-of-use dust collectors that can be used next to the machine with only a small amount of ducting. Specifications: 537 CFM, 7.2" static pressure, 1.5 cubic foot material collection, and 30 micron filter. Motor is 1 HP, 120V/240V, 7A/3.5A.

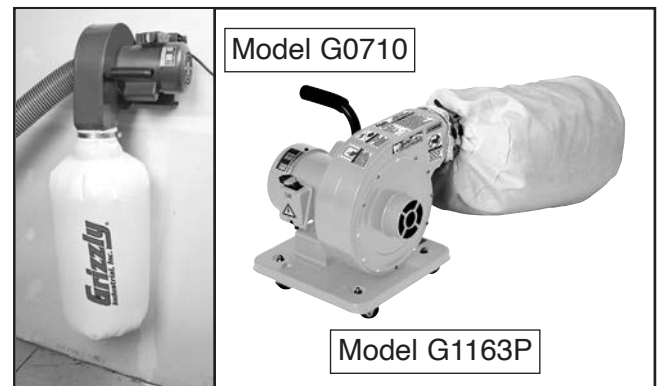


Figure 93. Point-of-use dust collectors.

Forrest Dado Blades

- H4756—8", 24 Teeth, 1/4"—29/32" Groove
- T23267—8", 24 Teeth, 3/16"—1/4" Groove

The world's finest dado head clean cuts all your grooves! No splintering when cross-cutting oak, ply veneers and melamine. Perfect for flat-bottomed grooves. No staggered steps or round bottoms like a wobble-dado leaves! Cuts in all directions - rip, cross-cut, miter, any depth. Cuts all sized grooves 1/4" through 29/32" increments.



Figure 94. H4756 Dado Blade.

order online at www.grizzly.com or call 1-800-523-4777



H8029—5-Pc. Safety Kit

Comes with four table saw jigs, essential for safe operation. Includes two push blocks, push stick, featherboard, and combination saw and router gauge. Featherboard fits $\frac{3}{8}$ " x $\frac{3}{4}$ " miter slots.

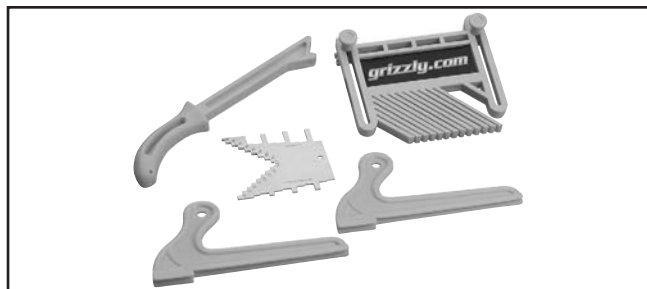


Figure 95. H8029 5 Pc. Safety Kit.

Forrest Woodworker II Saw Blades

T20778—10", 20 Teeth

T20779—10", 40 Teeth

T23527—10", 48 Teeth

Hailed as the Cadillac of all blades, Forrest saw blades have become legendary for their ability to leave highly polished, finish ready surfaces on nearly everything they cut. Made in USA.

With this all purpose blade for table saws you can rip and crosscut 1" 2" rockhards and softwoods, resulting in a smooth-as-sanded surface. With 20° face hook, ply veneers will crosscut with no bottom splinter at moderate feed rates. Double hard and 40% stronger C4 carbide will give up to 300% longer life between sharpenings. Ends blade changing (one blade does rip, combo and crosscut), second-step finishing and cutting $\frac{1}{16}$ " oversize to allow for resurfacing. Buy and sharpen one blade instead of 3 (24T rip, 50T combination and 80T crosscut). $\frac{5}{8}$ " arbor, $\frac{1}{8}$ " kerf.



Figure 96. Forrest Woodworker II Saw Blade.

D3096—Featherboard

Reduce the risk of kick-back without the use of clamps. These featherboards are designed to lock into $\frac{3}{8}$ " and $\frac{3}{4}$ " miter gauge slots and are adjustable for various stock widths.

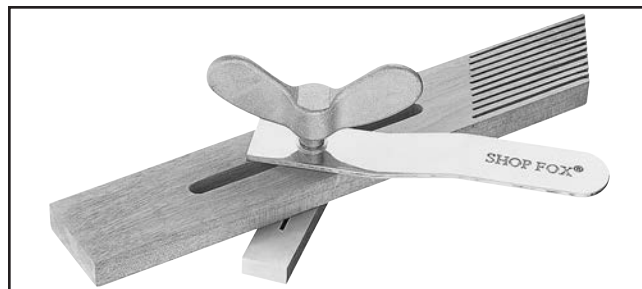


Figure 97. D3096 Featherboard.

T28922—Bear Crawl "Cub" Mobile Base

The Cub version of the Bear Crawl was designed for small-footprint machines weighing up to 1200 lbs. It features wide-inline fixed casters and out-rigger swivel casters to keep your equipment moving effortlessly on almost any surface. This is a high-quality mobile base that will make your shop more convenient and efficient and will keep your equipment stable and rolling for years to come. Adjusts from 14" x 14" to 22½" x 22½"!


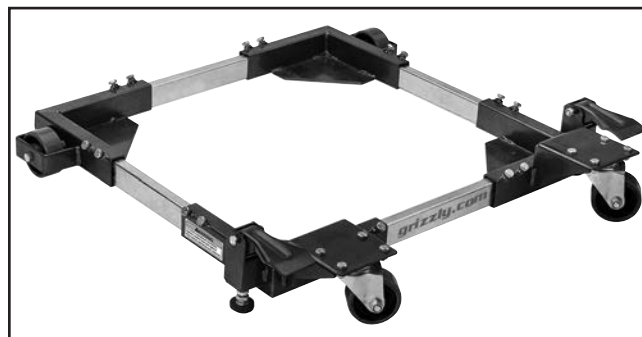


Figure 98. T28922 Bear Crawl "Cub" Mobile Base.

order online at www.grizzly.com or call 1-800-523-4777



SECTION 7: MAINTENANCE

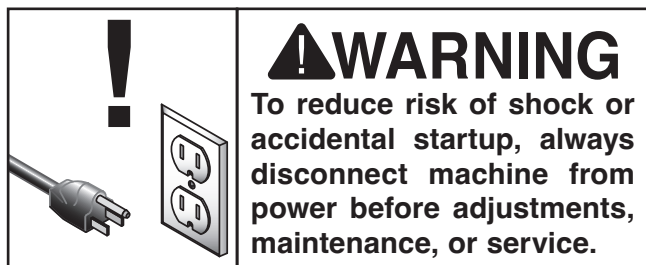

Schedule

For optimum performance from this machine, this maintenance schedule must be strictly followed.

Ongoing

To minimize your risk of injury and maintain proper machine operation, shut down the machine immediately if you ever observe any of the items below, and fix the problem before continuing operations:

- Loose mounting bolts.
- Damaged saw blade.
- Worn or damaged wires.
- Any other unsafe condition.

Weekly Maintenance

- Clean table surface and miter slot grooves.
- Clean and protect cast-iron table.
- Clean rip fence.

Monthly Check

- Clean/vacuum dust buildup from inside cabinet and off motors.
- Check/replace belt for proper tension, damage or wear (**Page 70**).

Every 6–12 Months:

- Lubricate trunnion slides (**Page 57**).
- Lubricate worm gear (**Page 57**).
- Lubricate leadscrew (**Page 57**).

Cleaning & Protecting

Cleaning the table saw is relatively easy. Vacuum excess wood chips and sawdust, and wipe off the remaining dust with a dry cloth. If any resin has built up, use a resin-dissolving cleaner to remove it.

Protect the unpainted cast-iron table by wiping it clean after every use—this ensures moisture from wood dust does not remain on the bare metal surface. Keep the table rust-free with regular applications of products like SLIPIT® (see **Figure 99**).

Recommended Metal Protectants

G5562—SLIPIT® 1 Qt. Gel

G5563—SLIPIT® 11 Oz. Spray



Figure 99. Recommended products for protecting unpainted cast iron/steel parts on machinery.



Lubrication

It is essential to clean components before lubricating them because dust and chips build up on lubricated components and make them hard to move. Simply adding more grease to them will not yield smooth moving components.

Clean the components in this section with mineral spirits or other oil/grease solvent cleaner and shop rags.

If you thoroughly clean the components in this section before lubricating them, the result will be silky smooth movement when turning the handwheels, which will result in much higher enjoyment on your part!

The following are the main components that need to be lubricated:

- Trunnion Slides and Orientation Gears
- Worm Gears, Trunnion, and Bearing Housing Teeth

Trunnion Slides

Clean out the front and rear trunnion slides with mineral spirits and a rag, then apply lithium grease into each groove. Move the blade tilt back and forth to spread the grease (see **Figure 100**).

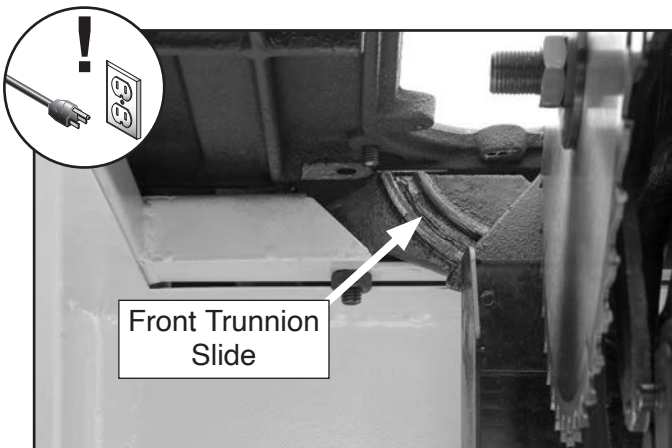


Figure 100. Trunnion slide (only front slide shown).

Worm Gear, Bull Gear & Leadscrew

Clean away any built up grime and debris from the worm gear, bull gear, and leadscrew (see **Figures 101–102**) with a wire brush, rags, and mineral spirits. Allow the components to dry, then apply a thin coat of white lithium grease.

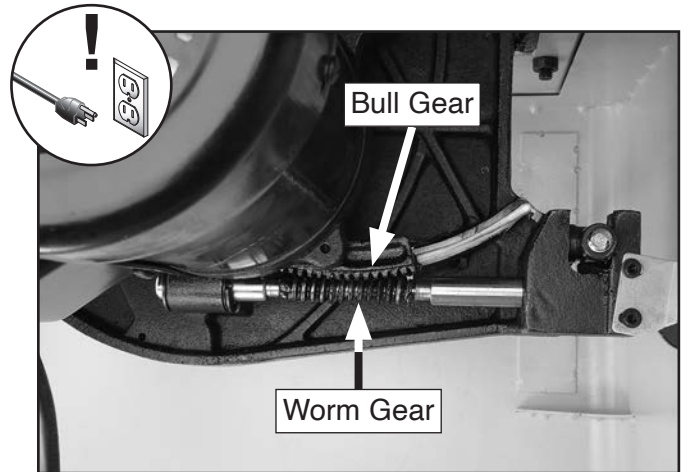


Figure 101. Worm and bull gear.


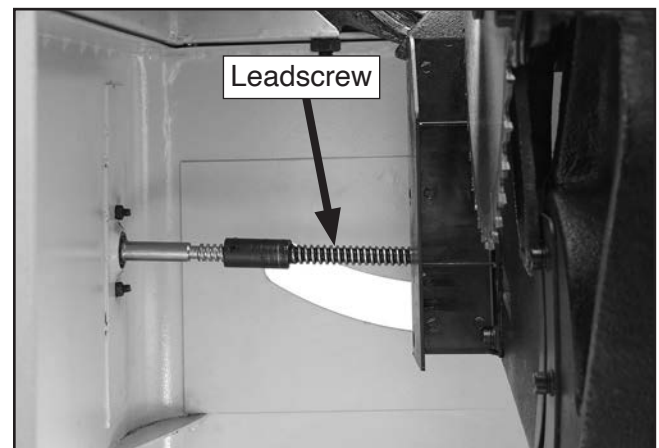


Figure 102. Leadscrew.

SECTION 8: SERVICE

Review the troubleshooting and procedures in this section to fix or adjust your machine if a problem develops. If you need replacement parts or you are unsure of your repair skills, then feel free to call our Technical Support at (570) 546-9663.

Troubleshooting

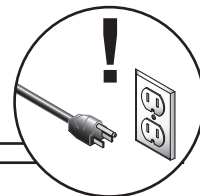

Motor & Electrical

Symptom	Possible Cause	Possible Solution
Machine does not start, or power supply breaker immediately trips after startup.	<ol style="list-style-type: none"> 1. Switch disabling pin installed. 2. Machine circuit breaker tripped or at fault. 3. Incorrect power supply voltage or circuit size. 4. Plug/receptacle at fault/wired incorrectly. 5. Power supply circuit breaker tripped or fuse blown. 6. Motor wires connected incorrectly. 7. Start capacitor at fault. 8. Centrifugal switch adjustment/contact points at fault. 9. Contactor not energized/at fault. 10. Wiring broken, disconnected, or corroded. 11. ON/OFF switch at fault. 12. Circuit breaker switch at fault. 13. Motor or motor bearings at fault. 	<ol style="list-style-type: none"> 1. Remove switch disabling pin. 2. Reset circuit breaker on switch (Page 4). 3. Ensure correct power supply voltage and circuit size. 4. Test for good contacts; correct the wiring (Page 72). 5. Ensure circuit is free of shorts. Reset circuit breaker or replace fuse. 6. Correct motor wiring connections (Page 72). 7. Test/replace if at fault. 8. Adjust centrifugal switch/clean contact points. Replace either if at fault. 9. Test all legs for power; replace if necessary. 10. Fix broken wires or disconnected/corroded connections. 11. Replace switch. 12. Replace circuit breaker switch. 13. Replace motor.
Machine stalls or is underpowered.	<ol style="list-style-type: none"> 1. Machine undersized for task. 2. Workpiece material unsuitable for machine. 3. Feed rate too aggressive for motor blade. 4. Workpiece crooked; fence not parallel with blade. 5. Blade dull or wrong blade for task. 6. Belt slipping/pulleys misaligned. 7. Motor wires connected incorrectly. 8. Plug/receptacle at fault/wired incorrectly. 9. Pulley slipping on shaft. 10. Motor overheated, tripping machine circuit breaker. 11. Run capacitor at fault. 12. Extension cord too long. 13. Centrifugal switch/contact points at fault. 14. Motor or motor bearings at fault. 	<ol style="list-style-type: none"> 1. Use correct blade/reduce feed rate or depth of cut. 2. Only cut wood/ensure moisture is below 20%. 3. Reduce feed pressure and speed. 4. Use jointer to straighten edge of workpiece that slides up against fence; adjust fence parallel with blade (Page 65). 5. Use correct blade for type of cut (Page 28). Use sharp blade. 6. Clean/tension/replace belt (Page 70); ensure pulleys are aligned. 7. Correct motor wiring connections (Page 72). 8. Test for good contacts/correct wiring (Page 72). 9. Tighten/replace loose pulley/shaft. 10. Clean motor, let cool, and reduce workload. Reset breaker (Page 4). 11. Test/repair/replace. 12. Move machine closer to power supply; use shorter extension cord. 13. Adjust centrifugal switch/clean contact points. Replace either if at fault. 14. Replace motor.



Motor & Electrical (Cont.)

Symptom	Possible Cause	Possible Solution
Machine has vibration or noisy operation.	<ol style="list-style-type: none"> 1. Motor or component loose. 2. Blade at fault. 3. V-belt worn, loose, or pulleys misaligned. 4. Motor pulley loose. 5. Arbor pulley loose. 6. Arbor bearings at fault. 7. Motor fan rubbing on fan cover. 8. Centrifugal switch needs adjustment/at fault. 9. Motor bearings at fault. 	<ol style="list-style-type: none"> 1. Replace damaged or missing bolts/nuts or tighten if loose. 2. Replace warped/bent blade (Page 30); resharpen dull blade. 3. Inspect/replace belt (Page 70). Re-align pulleys if necessary. 4. Secure pulley on shaft. 5. Tighten/replace arbor pulley with shaft and thread locking liquid. 6. Replace arbor housing bearings; replace arbor. 7. Fix/replace fan cover; replace loose/damaged fan. 8. Adjust/replace if at fault. 9. Test by rotating shaft; rotational grinding/loose shaft requires bearing replacement.

Operations

Symptom	Possible Cause	Possible Solution
Fence does not move smoothly.	<ol style="list-style-type: none"> 1. Fence not mounted/adjusted correctly. 2. Rails dirty or sticky. 3. Clamp screw out of adjustment. 	<ol style="list-style-type: none"> 1. Remount fence and adjust correctly (Page 67). 2. Clean and lubricate/wax rails. 3. Adjust clamp screw (Page 67).
Material moves away from fence when ripping.	<ol style="list-style-type: none"> 1. Improper feeding technique. 2. Fence not parallel with blade. 3. Workpiece crooked or bowed. 	<ol style="list-style-type: none"> 1. Learn/use proper feeding technique. 2. Adjust fence parallel with blade (Page 67). 3. Use jointer to straighten edge of workpiece that slides against fence.
Blade not parallel with miter slot.	<ol style="list-style-type: none"> 1. Blade is damaged or warped. 2. Table misadjusted. 	<ol style="list-style-type: none"> 1. Replace blade (Page 30). 2. Adjust miter slot parallel with blade.
Blade tilt does not stop at 45°/90°.	<ol style="list-style-type: none"> 1. 45°/90° stop out of adjustment. 2. Saw dust or debris stuck in trunnion slides or on stop nuts. 	<ol style="list-style-type: none"> 1. Adjust 45°/90° stop nuts (Page 60). 2. Clean sawdust or debris out of trunnion slides or off stop nuts; lubricate as necessary.
Blade hits table insert when tilting to 45°.	<ol style="list-style-type: none"> 1. Sawdust/debris stuck in trunnion slides. 2. Miter slot not parallel with blade. 3. Blade incorrectly installed. 4. Table/trunnion assembly mount position not correct. 	<ol style="list-style-type: none"> 1. Clean sawdust or debris out of trunnion slides. 2. Adjust miter slot parallel with blade (Page 62). 3. Correctly install blade (Page 30). 4. Adjust table or trunnion mounting position.
Kickback occurs.	<ol style="list-style-type: none"> 1. Fence not parallel with blade. 2. Feeding boards freehand without fence or miter gauge. 3. Spreader/riving knife not correctly aligned with blade. 4. Blade guard not installed/not working correctly. 5. Letting go of board before it is past blade. 6. Board not held firmly against table and fence. 7. Using miter gauge and fence at same time. 8. Board is warped or edge that slides against fence is bowed/curved. 9. Taking too deep of a cut. 	<ol style="list-style-type: none"> 1. Adjust fence parallel with blade (Page 67). 2. Always use fence or miter gauge as a guide when feeding workpiece. 3. Adjust spreader/riving knife into alignment with blade (Page 64). 4. Install blade guard (Page 31). Replace blade guard before using saw if damaged. 5. Move board completely past blade before releasing. 6. Hold board firmly against table and fence; use push stick(s) to keep fingers away from blade. 7. Never use miter gauge and fence together. 8. Always cut bowed workpiece with cupped side against table; use a jointer to straighten edges of board. 9. Always make shallow passes for non-through cuts.



Blade Tilt Calibration

The blade tilt settings for this saw have been set at the factory and should not require adjustment during assembly. However, after prolonged use, or if the saw does not cut accurate bevels, the settings should be checked and adjusted accordingly.

Note: The tilt scale reads "0" when the blade is 90° to the table.

Tools Needed	Qty
90° Square	1
45° Square.....	1
Hex Wrench 4mm.....	1

Setting 90° Stop

1. DISCONNECT MACHINE FROM POWER!
2. Raise blade as high as it will go, then tilt it toward 90° until it stops and cannot be tilted any more.
3. Place a 90° square against table and blade so it contacts blade evenly from bottom to top, as shown in **Figure 103**. Make sure a blade tooth does not obstruct placement of square.

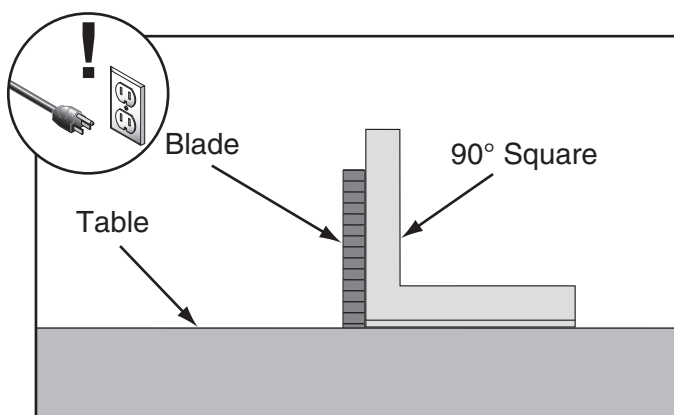


Figure 103. Checking blade at 90°.

- If blade is 90° to table, then no adjustments are necessary. Make sure tilt indicator arrow shown in **Figure 104** points to 0° mark on scale. Adjust position by loosening Phillips head screws, moving indicator with fingers, then tightening screws.



Figure 104. Tilt indicator arrow.

- If blade is *not* 90° to table, you will need to adjust 90° stop nuts. Proceed to **Step 4**.

4. Remove motor cover (see **Page 20**).
5. Loosen (2) M8-1.25 hex nuts on leadscrew (see **Figure 105**).

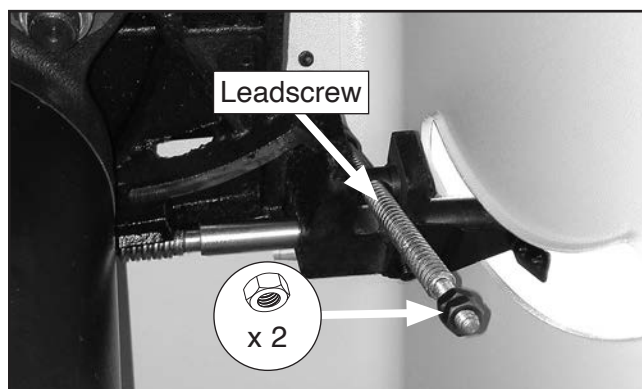


Figure 105. Location of 90° stop nuts.

6. Tilt blade to about 5° so there is room for stop nuts to move.
7. Loosen stop nuts and adjust according to how far off blade was from 90°. Recheck blade and repeat adjustment as necessary until blade stops at 90°, then tighten stop nuts against each other and replace motor cover.

Note: Rotating stop nuts clockwise adjusts blade further to right; rotating them counter-clockwise adjusts blade to left.



Setting 45° Stop

1. DISCONNECT MACHINE FROM POWER!
2. Raise blade as high as it will go, then tilt it towards 45° until it stops and cannot be tilted any more.
3. Place a 45° square against table and blade so it contacts blade evenly from bottom to top, as shown in **Figure 106**. Make sure a blade tooth does not obstruct placement of square.

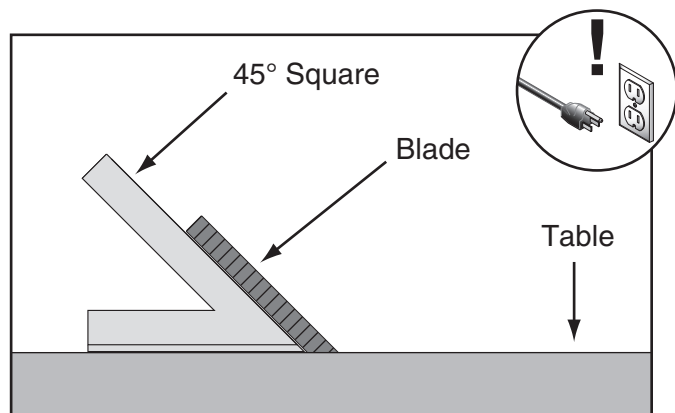


Figure 106. Checking blade at 45°.

- If blade *is* 45° to table, then no adjustments need to be made. Proceed to **Step 8**.
 - If blade *is not* 45° to table, you will need to adjust 45° limiting block. Proceed to **Step 4**.
4. Remove rear access panel.

5. Loosen (2) M5-.8 x 10 cap screws in 45° limiting block (see **Figure 107**).

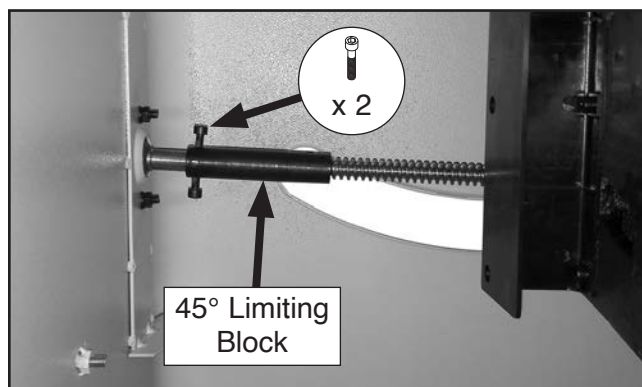


Figure 107. Location of 45° limiting block.

6. Tilt blade away from 45° by about 5°, so there is room for limiting block to move.
7. Adjust 45° limiting block according to how far off blade was from 45°, then recheck blade and repeat adjustment as necessary until blade stops at 45°, then tighten cap screws and replace rear access panel.
8. Make sure tilt indicator arrow points to 45° mark on scale. If it doesn't, adjust indicator arrow as described on **Page 60**.



Miter Slot to Blade Parallelism

Your table saw will give the best results if the miter slot and the rip fence are adjusted parallel to the blade. If either of these are not exactly parallel, your cuts and your finished work will be lower in quality, but more importantly, the risk of kickback will be increased.

Tools Needed	Qty
Adjustable Square	1
Marker	1
Metal Shim Stock	As Needed
Open-End Wrench 12mm.....	1

To adjust blade parallel to miter slot:

1. DISCONNECT MACHINE FROM POWER!
2. Tilt blade to 0°, then use an adjustable square to measure distance from miter slot to a carbide tip on blade, as shown in **Figure 108**. Make sure that face of adjustable square is even along miter slot.

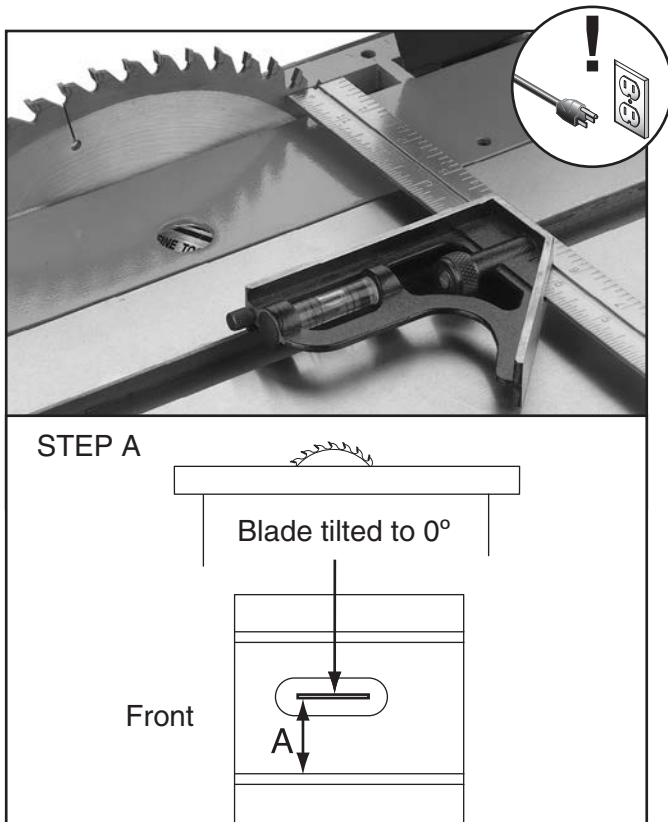


Figure 108. Example of adjusting blade to miter slot.

3. With end of adjustable square just touching tip, lock square in place. Now, mark carbide tip with a marker where you made this measurement.

CAUTION

Blade is sharp. Use extra care or wear gloves when handling or working near blade.

4. Rotate marked blade tip to other end of table insert.
5. Slide adjustable square down to other end of table insert and compare distance from marked blade tip to end of adjustable square, as shown in **Figure 109**.

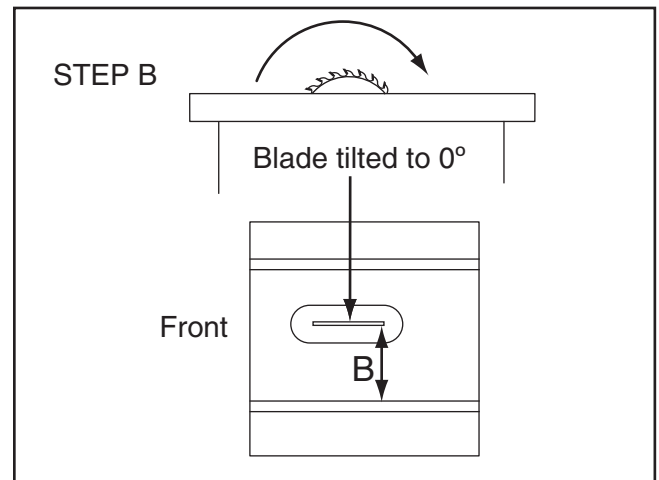


Figure 109. Measuring distance from miter slot to carbide tip on opposite side of table insert.

- If blade tip measurement is same on both sides, go to **Step 8**.
- If blade tip does not touch end of adjustable square similar to first measurement, table will need to be adjusted. Proceed to **Step 6**.



6. Loosen (4) table mounting bolts securing table top to base (see **Figure 110**), and lightly tap table in direction needed to square table to blade.

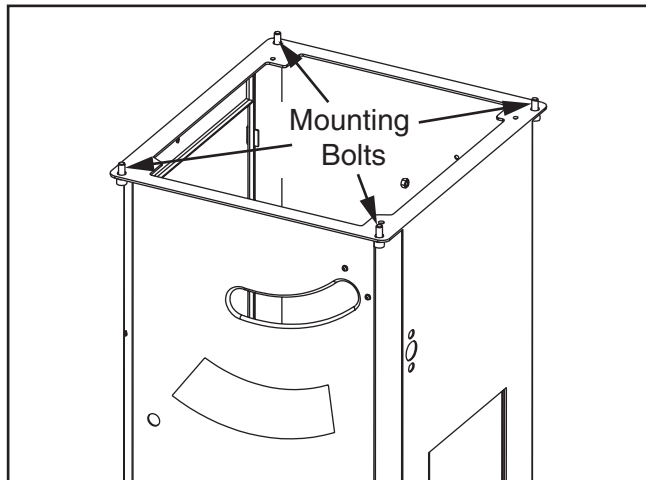


Figure 110. Location of table mounting bolts (table omitted for clarity).

7. Repeat **Steps 2–6** until blade and miter slot are parallel, then tighten retighten table mounting bolts.
8. Tilt blade to 45° and recheck miter slot-to-blade parallelism.
 - If blade is still parallel with miter slot, no additional adjustments need to be made.
 - If blade was parallel with miter slot at 0° but not at 45°, one end of table will need to be shimmed higher with metal shim stock. Continue to **Step 9**.
9. Loosen (4) table mounting bolts from **Step 6**.
10. Refer to **Figures 111–112** for shim placement. If distance A is shorter than B, shim(s) will need to be placed under corners #1 and #2. If the distance of B is shorter than A, shim(s) will need to be placed under corner #3. Very thin shim stock works well.

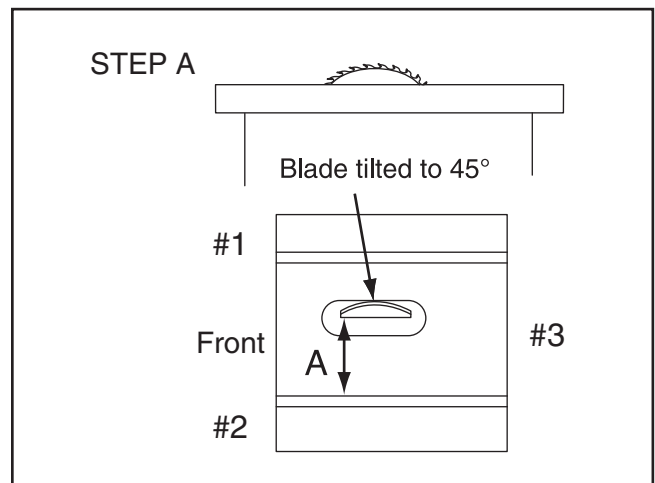


Figure 111. Shim procedure diagram A.

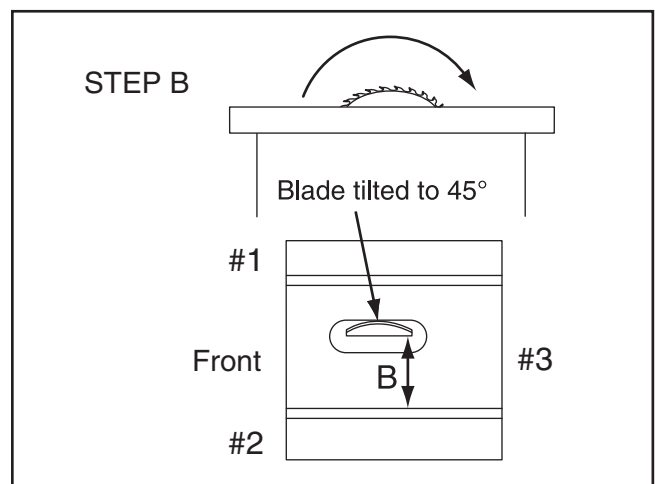


Figure 112. Shim procedure diagram B.

11. Tighten one table mounting bolt a small amount and then repeat with the others, tightening each down the same amount. Continue this process with all the bolts, tightening them a little each time until they are secure.
12. Now recheck blade to miter slot at 0° and 45° by repeating **Steps 2-5**.
 - If distance of A and B are equal, continue to **Step 13**.
 - If distances are still off, repeat **Steps 9–12**.
13. Once miter slot is adjusted to blade, recheck all measurements and be sure table mounting bolts are secure.

Note: If you remove the table in the future, note the shim placements and reassemble them exactly how they came apart.



Spreader or Riving Knife Alignment

Checking Alignment

The blade guard spreader/riving knife must be aligned with the blade when installed. If the spreader/riving knife is not aligned with the blade, then the workpiece will be forced sideways during the cut, which will increase the risk of kickback.

Tool Needed	Qty
Straightedge (min. 12").....	1

To check spreader/riving knife alignment:

1. DISCONNECT MACHINE FROM POWER!
2. Raise saw blade to maximum height so you have easy working access.
3. Place straightedge against top and bottom of blade and spreader/riving knife, as shown in **Figure 113**. Spreader/riving knife should be parallel with blade at both positions and in the "Alignment Zone," as shown in **Figure 114**.

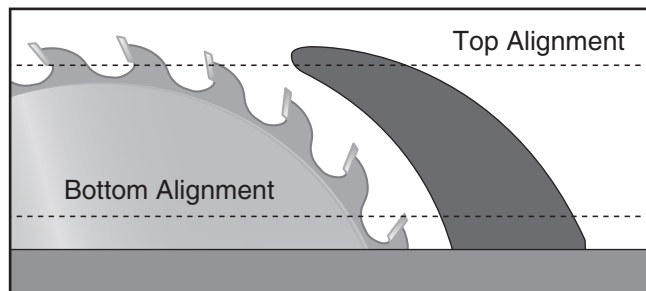


Figure 113. Example of checking top and bottom riving knife parallelism with blade.

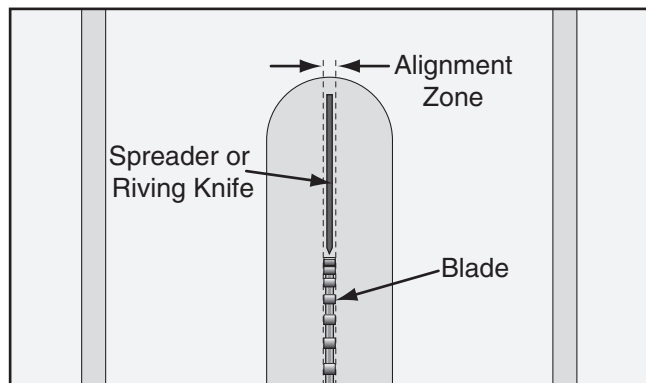


Figure 114. Spreader/riving knife alignment zone.

- If spreader/riving knife *is* parallel with blade and in alignment zone, no adjustments need to be made.
- If spreader/riving knife *is not* parallel with blade and inside alignment zone, then it needs to be adjusted. Proceed to **Adjusting Alignment** instructions.
- If spreader/riving knife *is not* parallel with blade at either top or bottom, it may be bent. Remove spreader/riving knife, place it on a flat surface and check to see if spreader/riving knife lies evenly along its length.
- If spreader/riving knife does not lie evenly, proceed to **Adjusting Bent Spreader/Riving Knife** procedure.

Adjusting Alignment

The spreader/riving knife mounting position can be aligned with the blade using the cap screws on the spreader/riving knife "L" bracket (see **Figure 115**).

Tool Needed	Qty
Hex Wrench 4mm.....	1

To adjust spreader/riving knife position:

1. DISCONNECT MACHINE FROM POWER!
2. Remove table insert, but leave Phillips head screws mounted in table throat.

Note: Table insert is held in place by a magnet.



3. Loosen two cap screws on "L" bracket (see **Figure 115**), then slide spreader/ripping knife as needed to move it into alignment with blade.

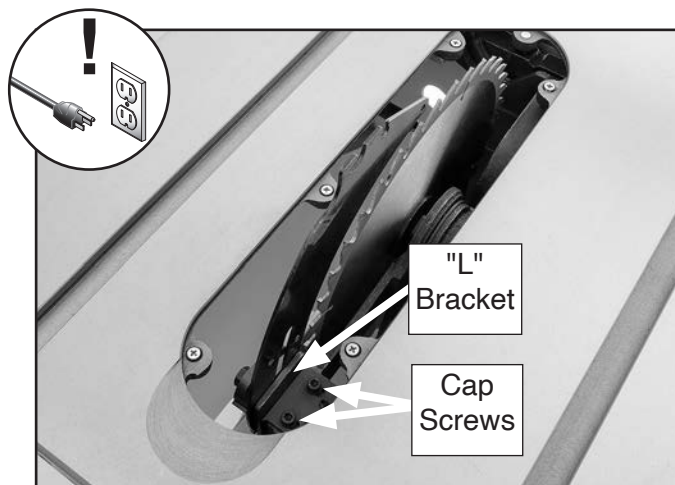


Figure 115. Cap screws for adjusting spreader/ripping knife position.

4. Follow **Checking Alignment, Steps 1–3**.
 - If spreader/ripping knife *is* in alignment zone, no additional steps are necessary.
 - If spreader/ripping knife is still *not* in alignment zone, continue adjusting position of "L" bracket as necessary to correctly align spreader/ripping knife.
5. Tighten two cap screws on mounting block to secure spreader/ripping knife adjustment.
6. Re-install, check and if necessary, adjust table insert (refer to **Page 69**).

Adjusting Bent Spreader/Ripping Knife

1. DISCONNECT MACHINE FROM POWER!
2. Bend spreader/ripping knife by hand while installed, then follow **Steps 1–3 in Checking Alignment** to determine if it is parallel with blade and inside "Alignment Zone."
 - If necessary, remove spreader/ripping knife to straighten it.
 - If you cannot straighten spreader/ripping knife properly, replace it.

Adjusting Fence

There are three main adjustments for the fence: (1) square, (2) height, and (3) clamping pressure. Keep in mind that these adjustments are interconnected and some trial-and-error may be needed to achieve satisfactory results.

Tools Needed

	Qty
Wrench 19mm	1
Hex Wrench 6mm.....	1
Machinist's Square	1

Fence Squareness and Height

The fence face must be square to the table in order to produce accurate cuts. The fence is adjustable with two set screws where the fence slot sits in the front rail (see **Figure 116**).

Also, the fence should be adjusted evenly above the table to ensure it does not drag across the surface as shown in **Figure 117**.



Figure 116. Location of lock nuts and set screws for adjusting fence squareness and height.

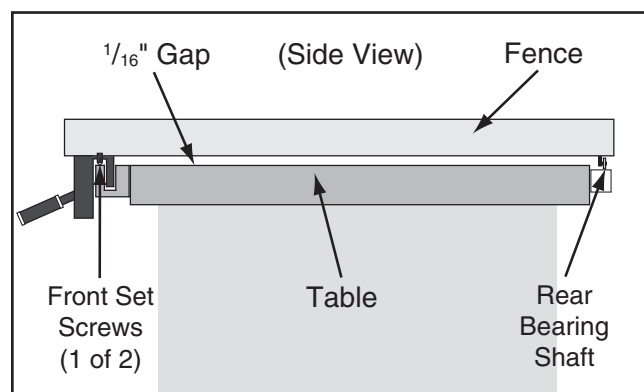


Figure 117. Fence height is adjusted by two front set screws and rear bearing shaft.



To check/adjust fence squareness and height to table:

1. DISCONNECT MACHINE FROM POWER!
2. Place square on table against face of fence (see **Figure 118**) to check if fence is square to table.
 - If fence *is not* square to table, proceed to **Step 3**.
 - If fence *is* square to table, skip to **Step 4**.

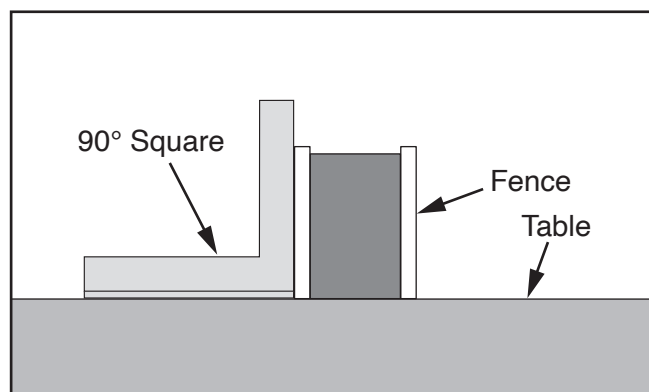


Figure 118. Example of checking fence squareness to table.

3. Loosen knurled lock nuts and adjust set screws (see **Figure 119**) on top of fence bracket to ensure fence face is 90° to table. Tighten lock nuts when fence is square to table.

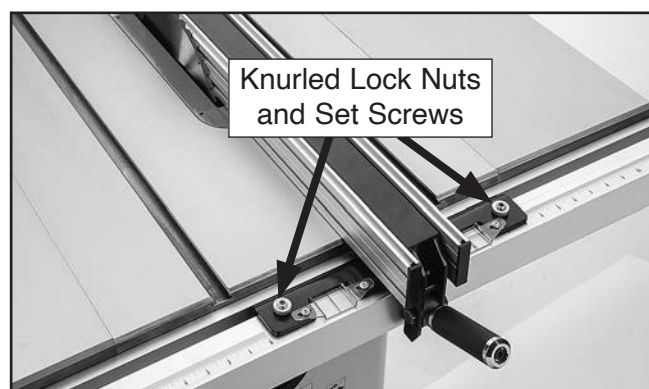


Figure 119. Location of lock nuts and set screws for adjusting fence squareness and height.

4. Measure gap between fence and table top at front and rear of fence.
 - If gap is approximately $\frac{1}{16}$ " and even from front of table to back (see **Figure 120**), then no additional adjustments are necessary. Proceed to **Fence Handle Clamping Pressure** below.
 - If gap is uneven, or if fence height is not approximately $\frac{1}{16}$ " above table, then continue with **Step 5**.

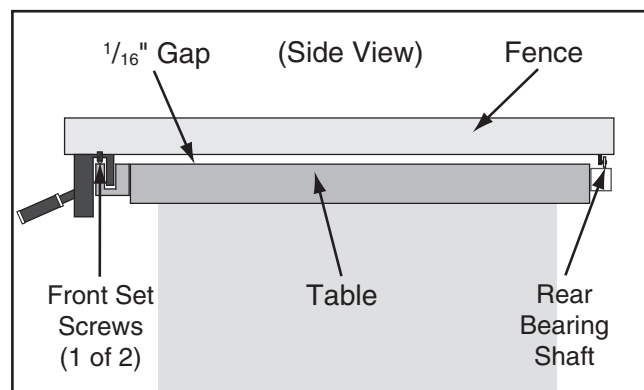


Figure 120. Example of even gap between fence and table approximately $\frac{1}{16}$ " front to back.

5. Remove fence assembly and lay it upside down.
6. Remove fence assembly cap, as shown in **Figure 121**, then loosen inner and outer jam nuts that secure bearing shaft.

Note: Wrench clearance for inner jam nut is tight inside fence assembly. If necessary, hold inner jam nut with wrench and twist bearing shaft to loosen.

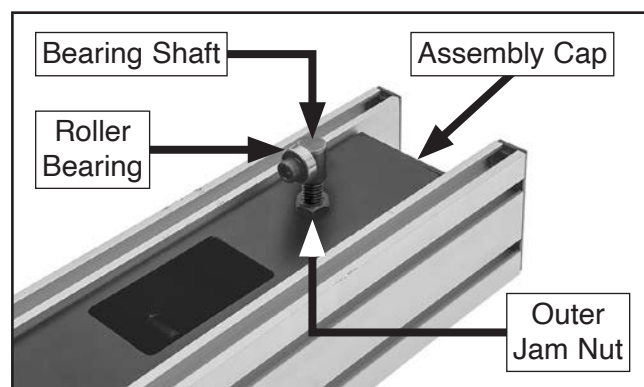


Figure 121. Rear adjustment area for leveling fence.



7. Re-install fence assembly.
8. Reach inside fence and adjust height of bearing shaft. Turn shaft clockwise to decrease shaft height; turn shaft counterclockwise to raise shaft height.
9. When satisfied with position of bearing shaft, remove fence and tighten inner and outer jam nuts. Keep roller bearing parallel with rear fence rail.
10. Re-install fence. Repeat **Steps 4–9** until gap between table and fence is approximately $\frac{1}{16}$ " and even from front to back of table.

Fence Handle Clamping Pressure

1. Remove fence and lay it upside down.
2. Loosen knurled lock nut (see **Figure 122**).



Figure 122. Set screw for adjusting fence handle clamping pressure.

3. Adjust set screw clockwise to increase clamping pressure of lock handle or counterclockwise to decrease clamping pressure.
4. Tighten knurled lock nut.
5. Re-install fence and check clamping pressure of lock handle.
6. Repeat **Steps 1–5** as necessary to achieve desired results.

Calibrating Fence to Blade

Two set screws at the front of the fence position it parallel with the blade (see **Figure 123**). Follow the procedures below to check the fence/blade parallelism and adjust the fence if necessary. Perform this step only after **Adjusting Fence** on **Page 65**.



Figure 123. Location of set screws to adjust fence parallelism (shown upside down).

Tools Needed	Qty
Hex Wrench 4mm.....	1
Framing Square.....	1

To check and adjust fence parallelism:

1. DISCONNECT MACHINE FROM POWER!
2. Slide fence against right edge of miter slot, lock it in place, then raise blade fully. Using a ruler, examine how fence lines up with miter slot and blade (see **Figure 124**).

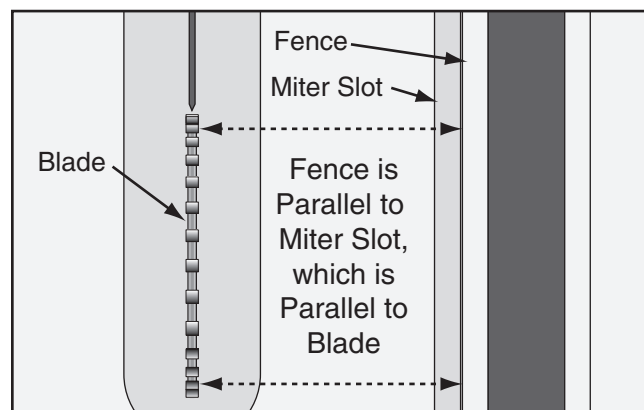


Figure 124. Checking fence parallelism with blade.



- If fence *is* parallel with blade, no further adjustments need to be made.
- If fence *is not* parallel with blade, proceed to **Step 3**.

3. Remove fence assembly from front rail.
4. Adjust two set screws on front of fence, as shown in **Figure 123** on **Page 67**. Each set screw adjustment affects opposite side of fence.
5. Re-install fence assembly and measure parallelism with blade. Repeat **Step 4** as needed.

Offsetting Fence

Some woodworkers prefer to offset the rear of the fence $\frac{1}{64}$ " from the blade, as shown in **Figure 125**.

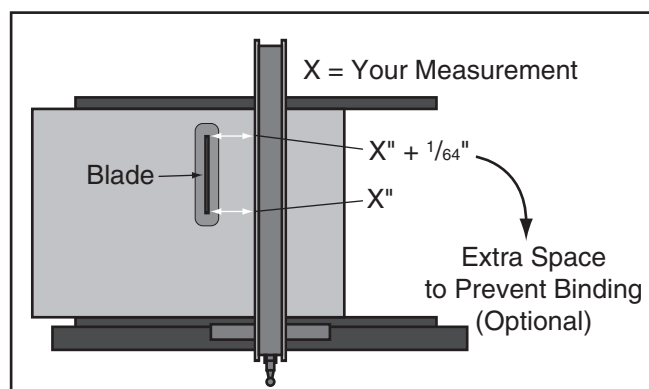


Figure 125. Adjusting fence with a $\frac{1}{64}$ " offset.

The reason for a wider gap at the back of the blade is to help prevent kickback and the blade burning the workpiece because a workpiece may be inconsistent. However, the trade-off is less accurate cuts, and if the fence is placed on the other side of blade for other table saw operations, the potential of workpiece burning and kickback can be increased. Whenever using a fence, make sure that if an offset has been adjusted in the fence alignment, you use the fence on the side of the blade where the offset creates the wide gap.

Fence Scale Calibration

The fence scale windows, shown in **Figure 126**, can be calibrated with the fence scale by loosening the mounting screws and sliding them in the desired direction.

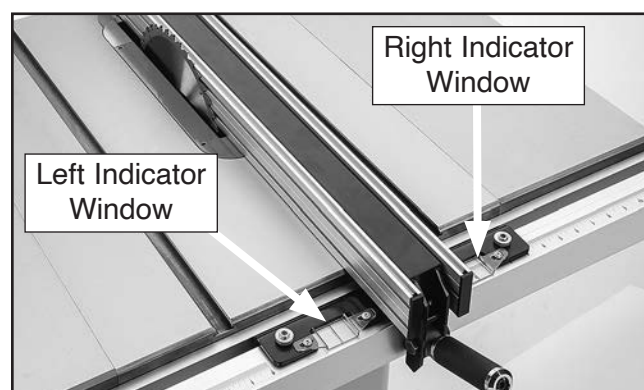


Figure 126. Fence indicator windows.

The right indicator window is used when the fence is positioned to the right side of the blade. The left indicator window is used when the fence is positioned on the left side of the blade.

IMPORTANT: Do not use the fence on the left side of the blade if it has been purposely offset, and is not adjusted parallel with blade.

Items Needed	Qty
Phillips Head Screwdriver #2	1
Scrap Piece of Wood.....	1

To calibrate fence scale indicator windows:

1. Lock fence at 13" and cut your scrap piece of wood.
2. Reposition and lock fence at 12", as indicated by the scale.
3. Flip over your scrap piece of wood, placing side that was cut in **Step 1** against fence, then make your cut.
4. Measure width of freshly cut workpiece at both ends with a tape measure. Workpiece width should be exactly 12" at front and back. If it is not, then adjust indicator window to match width of workpiece.



Table/Dado Insert Adjustment

The table/dado insert must sit perfectly flush with the table to provide a smooth, continuous surface for the workpiece to slide over. The insert is held in place by a magnet and sits on top of five adjustment screws (see **Figure 127**).

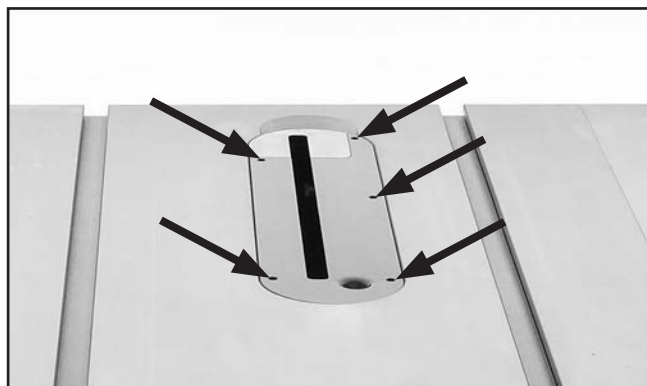


Figure 127. Location of table/dado insert holes with adjustment screws.

The insert should be checked and adjusted any time it is removed and replaced, after prolonged use, or any time you notice the workpiece or fence does not slide smoothly over the insert.

Tools Needed	Qty
Phillips Head Screwdriver #2	1
Straightedge	1

To check and adjust insert:

1. DISCONNECT MACHINE FROM POWER!
2. Place straight edge across insert and check to make sure insert is flush with table at front and back of throat.
 - If insert is flush with table, no adjustments are necessary.
 - If insert is not flush with table, proceed to **Step 3**.
3. Insert screwdriver through holes shown in **Figure 127** and either loosen screws to raise insert, or tighten screws to lower it. Repeat **Steps 2–3** until insert is perfectly flush with surface of table.

Calibrating Miter Gauge

The miter gauge adjusts between 60° left and 60° right. The angle indicator should indicate the angle of the miter body in relation to the blade, but it can be calibrated if these values do not match.

Tools Needed	Qty
Phillips Head Screwdriver.....	1
90° Square	1

To calibrate miter gauge:

1. DISCONNECT MACHINE FROM POWER!
2. Slide miter gauge into T-slot on table.
3. Loosen miter handle and pull stop pin knob (see **Figure 128**).

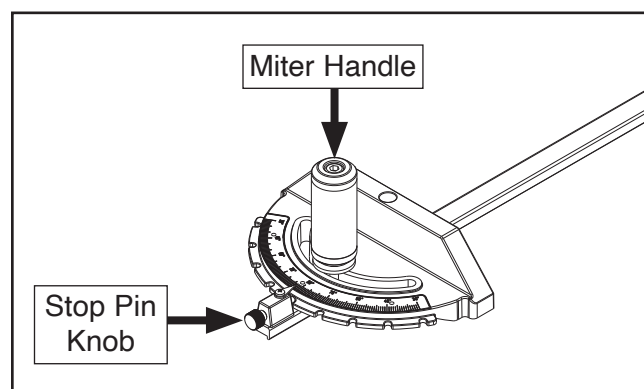


Figure 128. Miter gauge adjustment components.

4. Place square evenly against miter body and blade, as shown in **Figure 129**.

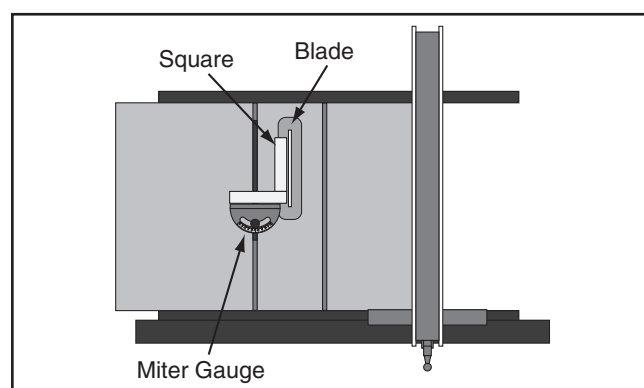


Figure 129. Miter body square to blade.



- If angle indicator does point to 90° when miter body is square to blade, no adjustment is necessary.
- If angle indicator *does not* point to 90° when miter body is square to blade, proceed to **Step 5**.

5. Loosen Phillips head screw shown in **Figure 130**, adjust indicator so it points to 90°, then tighten screw to secure.

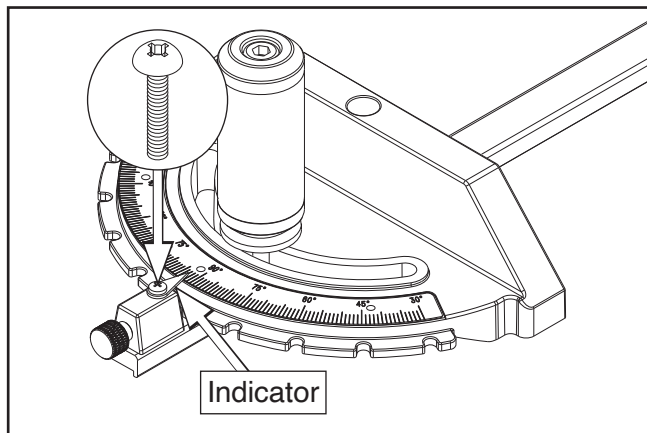


Figure 130. Location of angle indicator and Phillips head screw.

Tensioning & Replacing Belt

The drive belt stretches slightly as the saw is used. Most of the belt stretching will happen during the first 16 hours of use, but it may continue with further use. If you notice that the saw is losing power in the middle of a cut, the belt may be slipping, and will need to be tensioned. If, upon inspection, you find that the belt is cracked, frayed, or shows other signs of excessive wear, replace it.

Tool Needed	Qty
Open-End or Socket Wrench 13mm	1

Tensioning Belt

1. DISCONNECT MACHINE FROM POWER!
2. Remove motor cover from side of machine.

3. Set blade to 0° on tilt scale, then raise or lower blade to approximately 2" above table.
4. Loosen blade tension hex bolt shown in **Figure 131**.

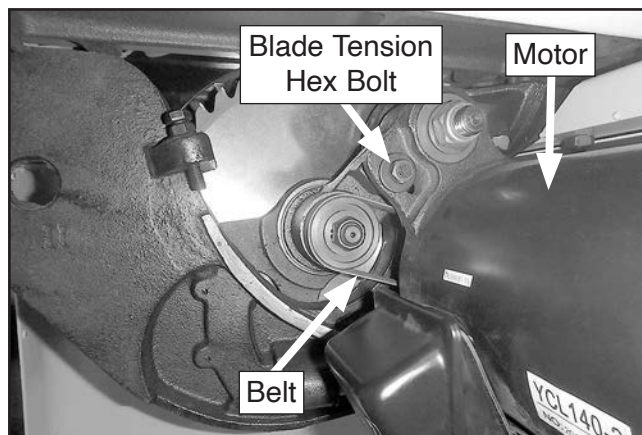


Figure 131. Components used to tension or remove belt.

5. Use blade height handwheel to lower motor. When motor starts to pull blade down with it, belt is tensioned.
6. Retighten blade tension hex bolt, then re-install motor cover.

Replacing Belt

1. DISCONNECT MACHINE FROM POWER!
2. Remove motor cover from side of machine.
3. Set blade to 0° on tilt scale, then raise or lower blade to approximately 2" above table.
4. Loosen blade tension hex bolt, shown in **Figure 131**.
5. Use blade height handwheel to raise motor and loosen belt, then remove belt.
6. Install new belt onto pulleys. Lower motor until it begins to pull blade down with it, then retighten blade tension hex bolt.
7. Re-install motor cover.



SECTION 9: WIRING

These pages are current at the time of printing. However, in the spirit of improvement, we may make changes to the electrical systems of future machines. Compare the manufacture date of your machine to the one stated in this manual, and study this section carefully.

If there are differences between your machine and what is shown in this section, call Technical Support at (570) 546-9663 for assistance BEFORE making any changes to the wiring on your machine. An updated wiring diagram may be available. **Note:** Please gather the serial number and manufacture date of your machine before calling. This information can be found on the main machine label.

WARNING

Wiring Safety Instructions

SHOCK HAZARD. Working on wiring that is connected to a power source is extremely dangerous. Touching electrified parts will result in personal injury including but not limited to severe burns, electrocution, or death. Disconnect the power from the machine before servicing electrical components!

MODIFICATIONS. Modifying the wiring beyond what is shown in the diagram may lead to unpredictable results, including serious injury or fire. This includes the installation of unapproved after-market parts.

WIRE CONNECTIONS. All connections must be tight to prevent wires from loosening during machine operation. Double-check all wires disconnected or connected during any wiring task to ensure tight connections.

CIRCUIT REQUIREMENTS. You MUST follow the requirements at the beginning of this manual when connecting your machine to a power source.

WIRE/COMPONENT DAMAGE. Damaged wires or components increase the risk of serious personal injury, fire, or machine damage. If you notice that any wires or components are damaged while performing a wiring task, replace those wires or components.

MOTOR WIRING. The motor wiring shown in these diagrams is current at the time of printing but may not match your machine. If you find this to be the case, use the wiring diagram inside the motor junction box.














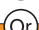

CAPACITORS/INVERTERS. Some capacitors and power inverters store an electrical charge for up to 10 minutes after being disconnected from the power source. To reduce the risk of being shocked, wait at least this long before working on capacitors.

EXPERIENCING DIFFICULTIES. If you are experiencing difficulties understanding the information included in this section, contact our Technical Support at (570) 546-9663.

NOTICE


The photos and diagrams included in this section are best viewed in color. You can view these pages in color at www.grizzly.com.

COLOR KEY

BLACK		BLUE		YELLOW		LIGHT BLUE	
WHITE		BROWN		YELLOW GREEN		BLUE WHITE	
GREEN		GRAY		PURPLE		TURQUOISE	
RED		ORANGE		PINK			



Wiring Diagram

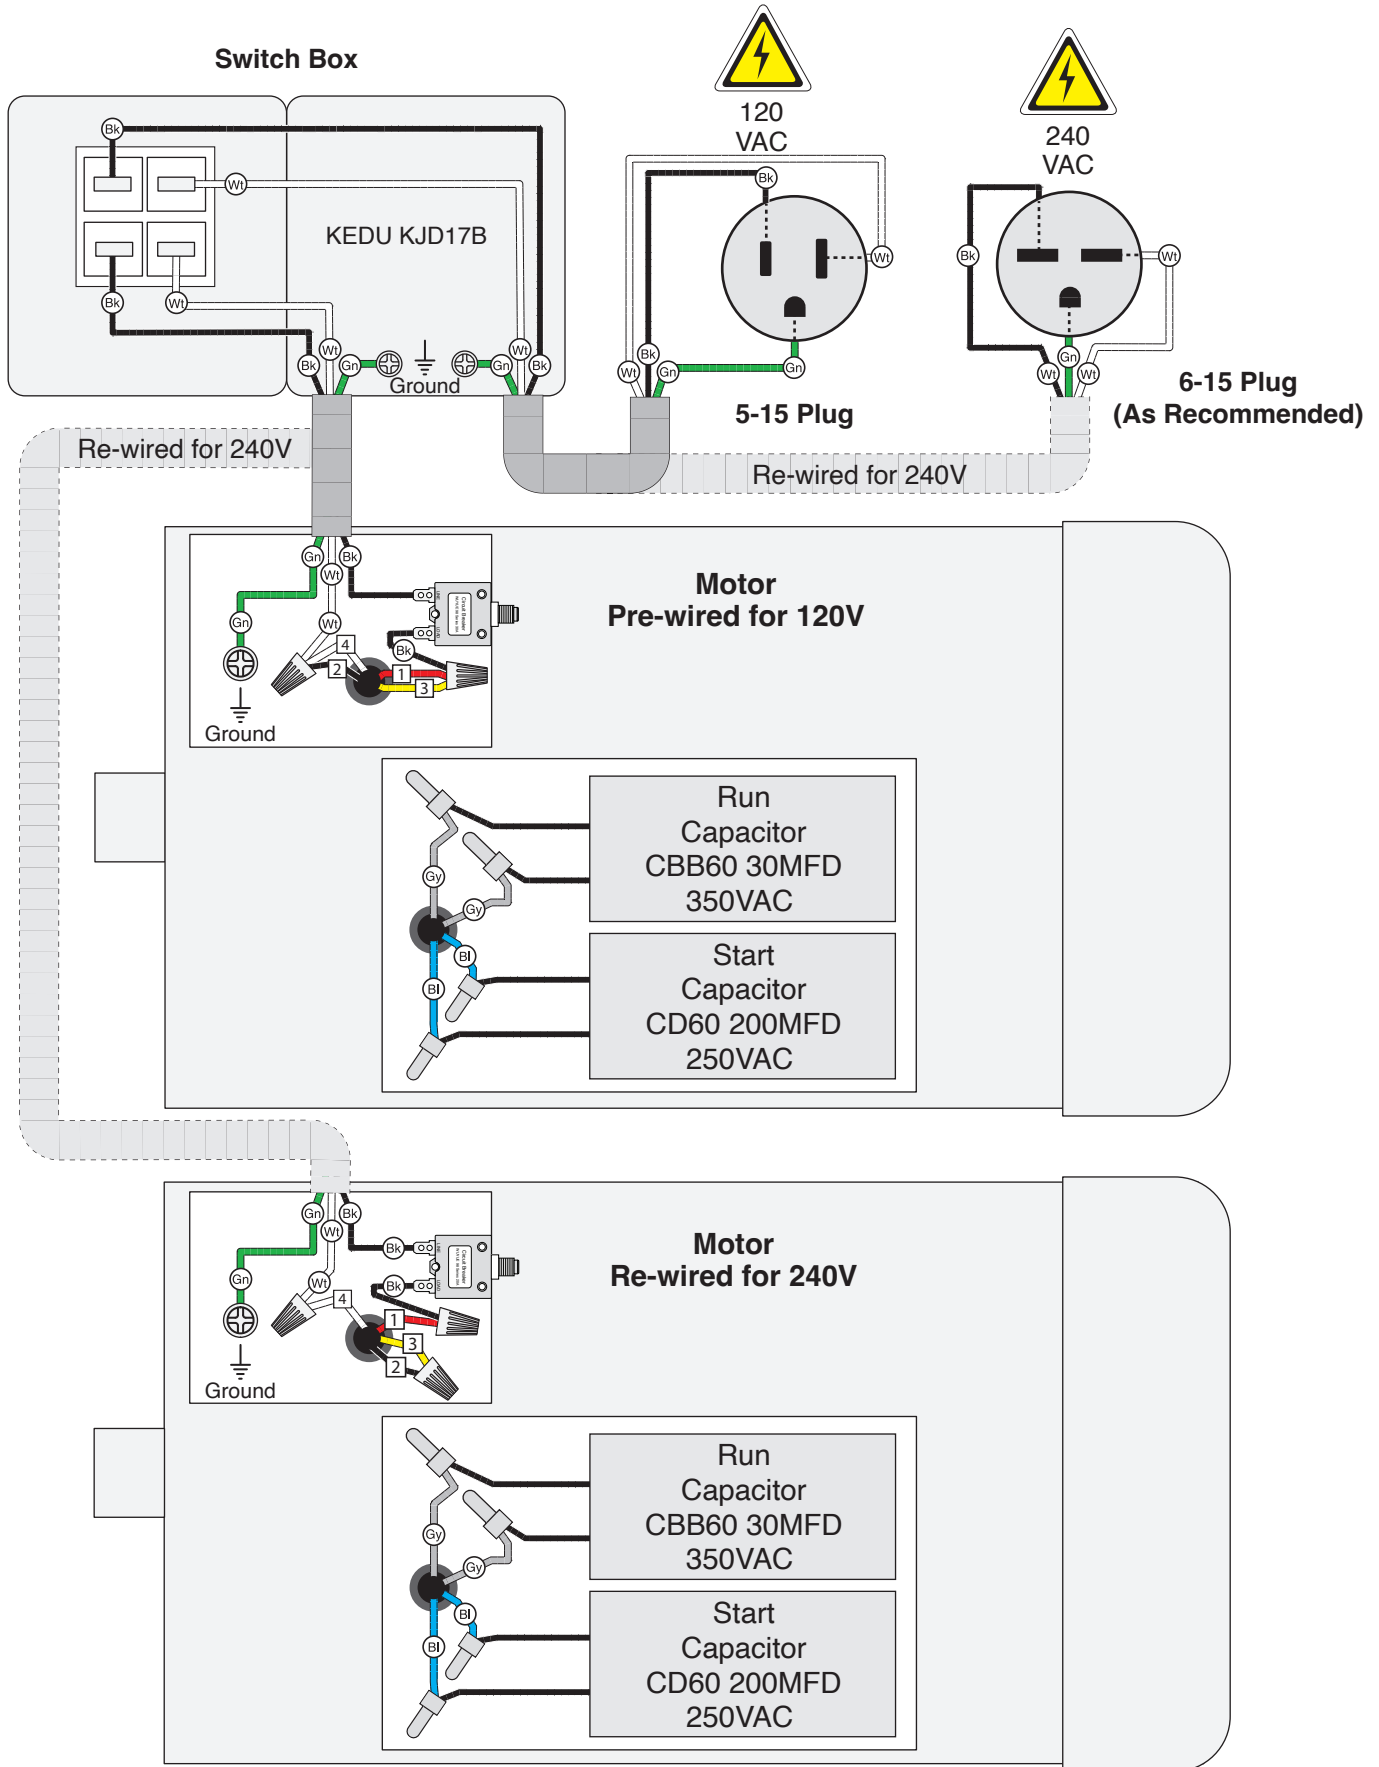

Electrical Components

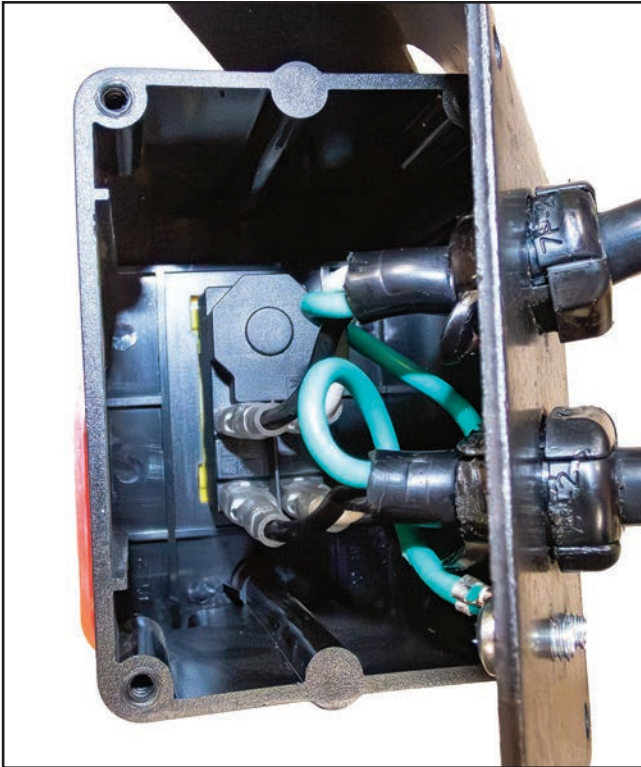


Figure 132. Switch wiring.



Figure 133. Capacitors.

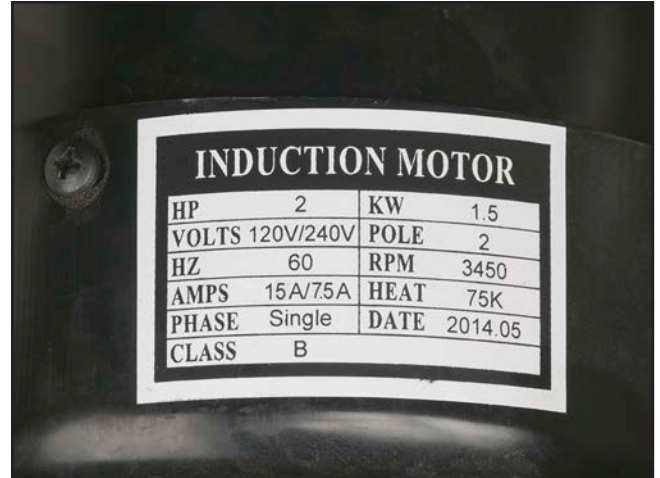


Figure 134. Motor label.

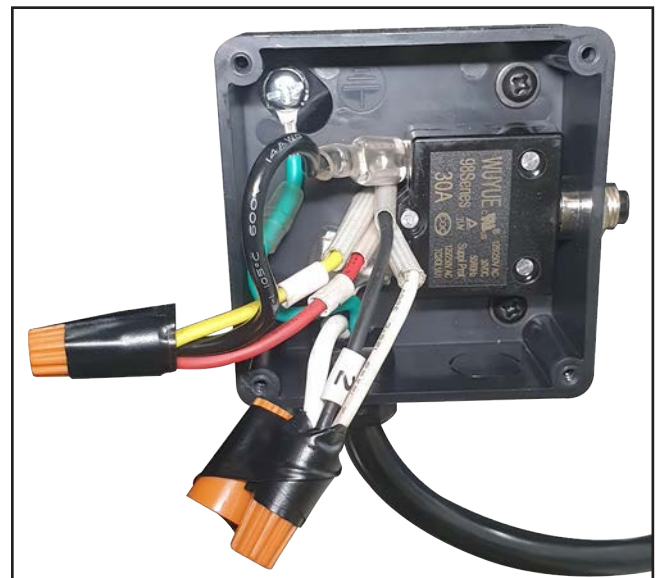


Figure 135. Motor wiring at 120V.


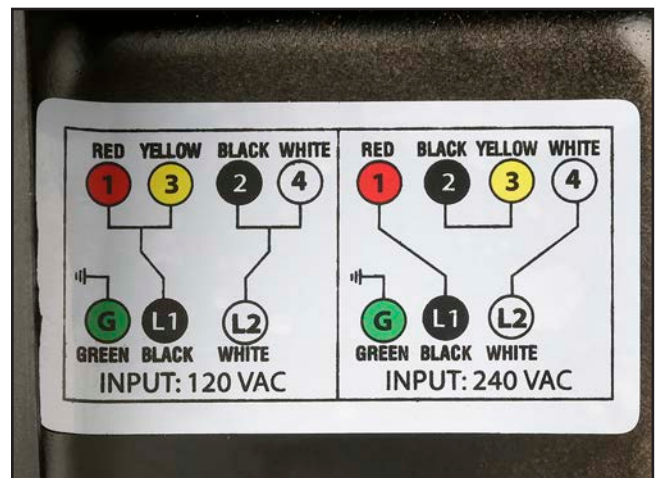


Figure 136. Motor wiring label inside junction box.

SECTION 10: PARTS

We do our best to stock replacement parts when possible, but we cannot guarantee that all parts shown are available for purchase. Call (800) 523-4777 or visit www.grizzly.com/parts to check for availability.

Main

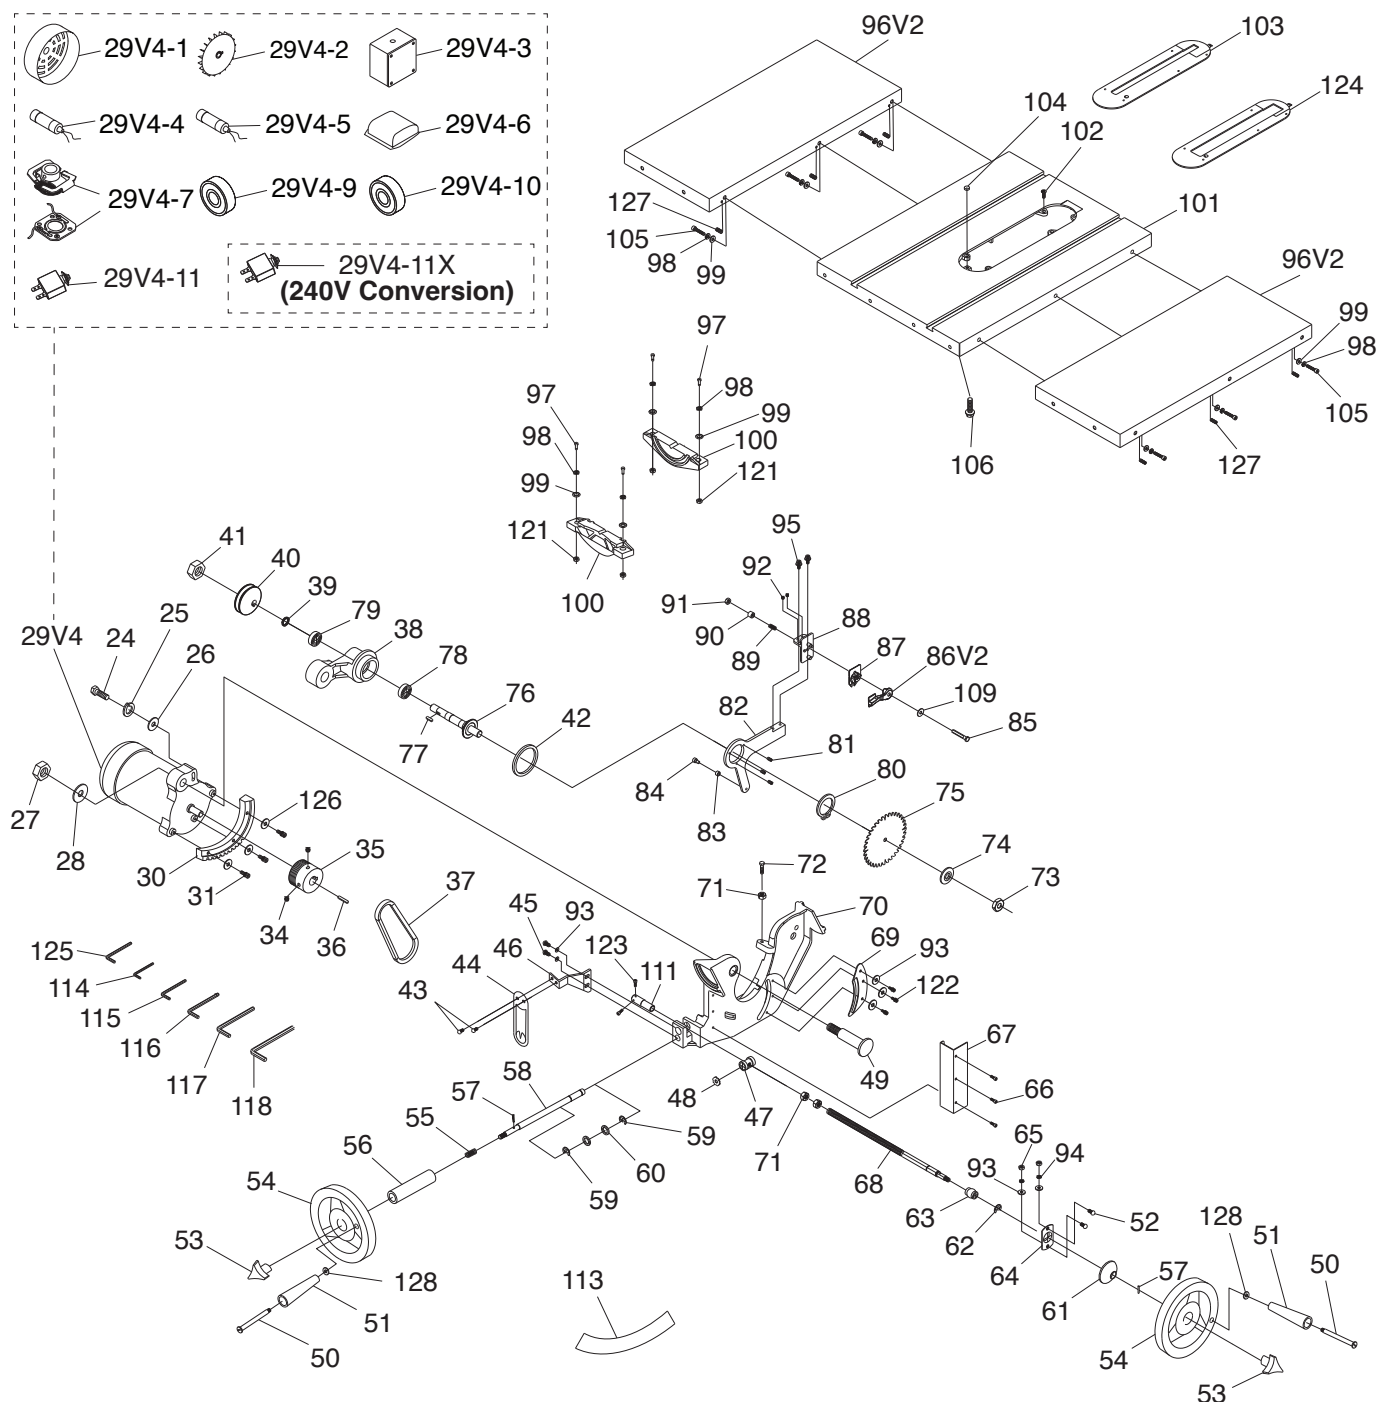


G0771Z Main Parts List

REF	PART #	DESCRIPTION
24	P0771Z024	HEX BOLT M8-1.25 X 30
25	P0771Z025	LOCK WASHER 8MM
26	P0771Z026	FLAT WASHER 8MM
27	P0771Z027	LOCK NUT M16-2
28	P0771Z028	FLAT WASHER 16MM
29V4	P0771Z029V4	MOTOR 2HP 120V/240V 1-PH V4.10.23
29V4-1	P0771Z029V4-1	MOTOR FAN COVER
29V4-2	P0771Z029V4-2	MOTOR FAN
29V4-3	P0771Z029V4-3	MOTOR JUNCTION BOX
29V4-4	P0771Z029V4-4	R CAPACITOR 30M 350V 1-5/8 X 3-1/8
29V4-5	P0771Z029V4-5	S CAPACITOR 200M 250V 1-3/8 X 2-11/16
29V4-6	P0771Z029V4-6	CAPACITOR COVER
29V4-7	P0771Z029V4-7	CENTRIFUGAL SWITCH W/CONTACT PLATE
29V4-9	P0771Z029V4-9	BALL BEARING 6203-2RS
29V4-10	P0771Z029V4-10	BALL BEARING 6202-2RS
29V4-11	P0771Z029V4-11	CIRCUIT BREAKER WUYUE 98 SERIES 30A
29V4-11X	P0771Z029V4-11X	CIRCUIT BREAKER WUYUE 98 SERIES 20A
30	P0771Z030	BULL GEAR
31	P0771Z031	CAP SCREW M6-1 X 25
34	P0771Z034	SET SCREW M5-.8 X 8
35	P0771Z035	MOTOR PULLEY J6 X 5/8" BORE
36	P0771Z036	KEY 5 X 5 X 30
37	P0771Z037	POLY-V BELT 355J6
38	P0771Z038	BLADE BRACKET
39	P0771Z039	ARBOR BUSHING
40	P0771Z040	ARBOR PULLEY
41	P0771Z041	LOCK NUT M12-1.5
42	P0771Z042	THRUST WASHER 52MM BLACK
43	P0771Z043	PHLP HD SCR M4-.7 X 6
44	P0771Z044	BEVEL INDICATOR
45	P0771Z045	CAP SCREW M5-.8 X 8
46	P0771Z046	POINTER SEAT
47	P0771Z047	BEVEL NUT
48	P0771Z048	FLAT WASHER 4MM
49	P0771Z049	MAIN TRUNNION SHAFT
50	P0771Z050	HANDLE BOLT M8-1.25 X 120
51	P0771Z051	HANDWHEEL HANDLE 106MM SS
52	P0771Z052	CAP SCREW M5-.8 X 16
53	P0771Z053	LOCK HANDLE M8-1.25
54	P0771Z054	HANDWHEEL 11 X M8-1.25
55	P0771Z055	COMPRESSION SPRING
56	P0771Z056	ELEVATION BUSHING
57	P0771Z057	ROLL PIN 3 X 20
58	P0771Z058	ELEVATION SHAFT
59	P0771Z059	E-CLIP 14MM
60	P0771Z060	SPACER
61	P0771Z061	BEVEL PLATE
62	P0771Z062	E-CLIP 9MM
63	P0771Z063	SWIVEL BEARING
64	P0771Z064	BEARING SEAT
65	P0771Z065	HEX NUT M5-.8
66	P0771Z066	CAP SCREW M5-.8 X 10
67	P0771Z067	BLADE GUARD
68	P0771Z068	TILT SHAFT

REF	PART #	DESCRIPTION
69	P0771Z069	RIVING GUIDE
70	P0771Z070	MAIN TRUNNION
71	P0771Z071	HEX NUT M8-1.25
72	P0771Z072	HEX BOLT M8-1.25 X 40
73	P0771Z073	HEX NUT 5/8-18
74	P0771Z074	BLADE FLANGE
75	P0771Z075	BLADE 10" X 5/8" X 40T
76	P0771Z076	ARBOR
77	P0771Z077	KEY 5 X 5 X 12
78	P0771Z078	BALL BEARING 6203-2RS
79	P0771Z079	BALL BEARING 6202-2RS
80	P0771Z080	EXT RETAINING RING 52MM
81	P0771Z081	SET SCREW M5-.8 X 6
82	P0771Z082	MOUNTING PLATE
83	P0771Z083	BUSHING
84	P0771Z084	SHAFT PIN
85	P0771Z085	RIVING CLAMP LOCK BOLT M8-1.25 X 53
86V2	P0771Z086V2	RIVING LOCK LEVER V2.03.24
87	P0771Z087	RIVING CLAMP
88	P0771Z088	RIVING DECK
89	P0771Z089	COMPRESSION SPRING
90	P0771Z090	RIVING SEAT
91	P0771Z091	LOCK NUT M8-1.25
92	P0771Z092	SET SCREW M5-.8 X 10
93	P0771Z093	FLAT WASHER 5MM
94	P0771Z094	LOCK WASHER 5MM
95	P0771Z095	CAP SCREW W/WASHER M5-.8 X 16
96V2	P0771Z096V2	EXTENSION TABLE V2.07.20
97	P0771Z097	CAP SCREW M10-1.5 X 40
98	P0771Z098	LOCK WASHER 10MM
99	P0771Z099	FLAT WASHER 10MM
100	P0771Z100	TRUNNION
101	P0771Z101	MAIN TABLE
102	P0771Z102	FLAT HD SCR 8-32 X 1/2
103	P0771Z103	TABLE INSERT
104	P0771Z104	TABLE INSERT MAGNET
105	P0771Z105	CAP SCREW M10-1.5 X 30
106	P0771Z106	FLANGE BOLT M8-1.25 X 16
109	P0771Z109	FLAT WASHER 8MM
111	P0771Z111	90 DEG LIMITING BLOCK
113	P0771Z113	BEVEL LABEL
114	P0771Z114	HEX WRENCH 3MM
115	P0771Z115	HEX WRENCH 4MM
116	P0771Z116	HEX WRENCH 5MM
117	P0771Z117	HEX WRENCH 6MM
118	P0771Z118	HEX WRENCH 8MM
119	P0771Z119	SET SCR M8-1.25 X 20 CUP-PT NYLOCK
120	P0771Z120	SET SCR M8-1.25 X 25 CUP-PT NYLOCK
121	P0771Z121	HEX NUT M10-1.5
122	P0771Z122	CAP SCREW M5-.8 X 10
123	P0771Z123	CAP SCREW M5-.8 X 10
124	P0771Z124	DADO TABLE INSERT
125	P0771Z125	HEX WRENCH 2.5MM
126	P0771Z126	FLAT WASHER 6MM



Cabinet

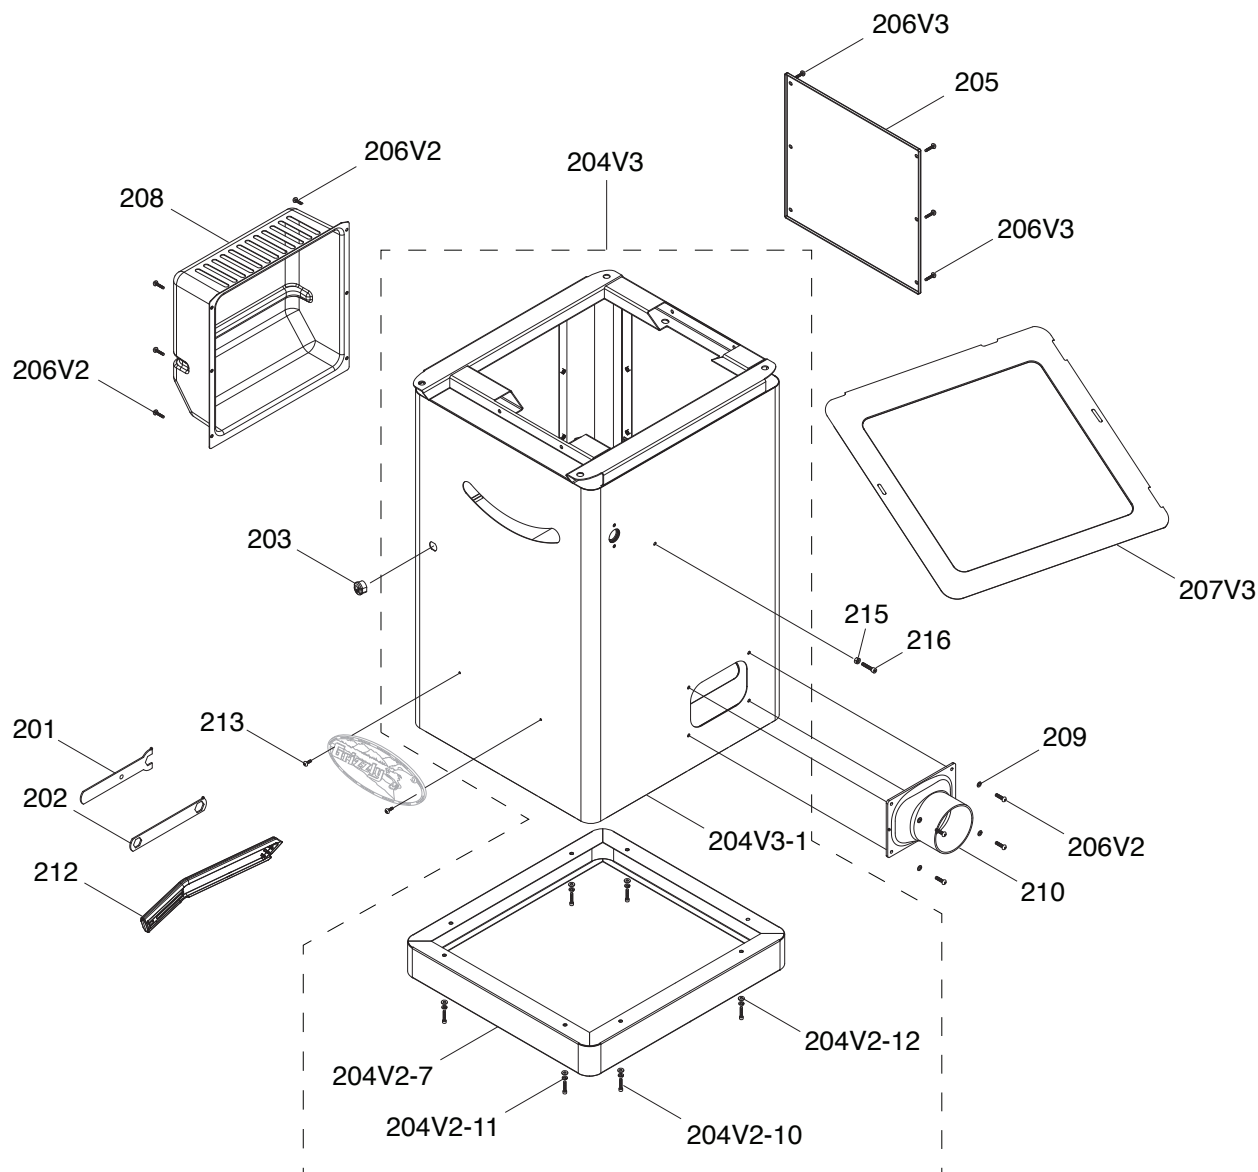


REF	PART #	DESCRIPTION
201	P0771Z201	ARBOR WRENCH 16 X 23MM OPEN-END
202	P0771Z202	ARBOR WRENCH 13 X 22MM CLOSED-ENDS
203	P0771Z203	STRAIN RELIEF 1/2"-3/8" SNAP-IN ST
204V3	P0771Z204V3	CABINET ASSEMBLY V3.03.24
204V3-1	P0771Z204V3-1	CABINET
204V2-7	P0771Z204V2-7	LOWER FRAME
204V2-10	P0771Z204V2-10	CAP SCREW M6-1 X 16
204V2-11	P0771Z204V2-11	LOCK WASHER 6MM
204V2-12	P0771Z204V2-12	FLAT WASHER 6MM
205	P0771Z205	REAR PANEL

REF	PART #	DESCRIPTION
206V2	P0771Z206V2	BUTTON HD CAP SCR M5-.8 X 10 V2.08.23
206V3	P0771Z206V3	BUTTON HD CAP SCR M5-.8 X 16 V3.03.24
207V3	P0771Z207V3	DUST COLLECTION GUIDE PLATE V3.03.24
208	P0771Z208	MOTOR COVER
209	P0771Z209	FLAT WASHER 5MM
210	P0771Z210	DUST PORT
212	P0771Z212	PUSH STICK
213	P0771Z213	PHLP HD SCR M3-.5 X 16
215	P0771Z215	HEX NUT M5-.8
216	P0771Z216	CAP SCREW M5-.8 X 25



Fence & Rails

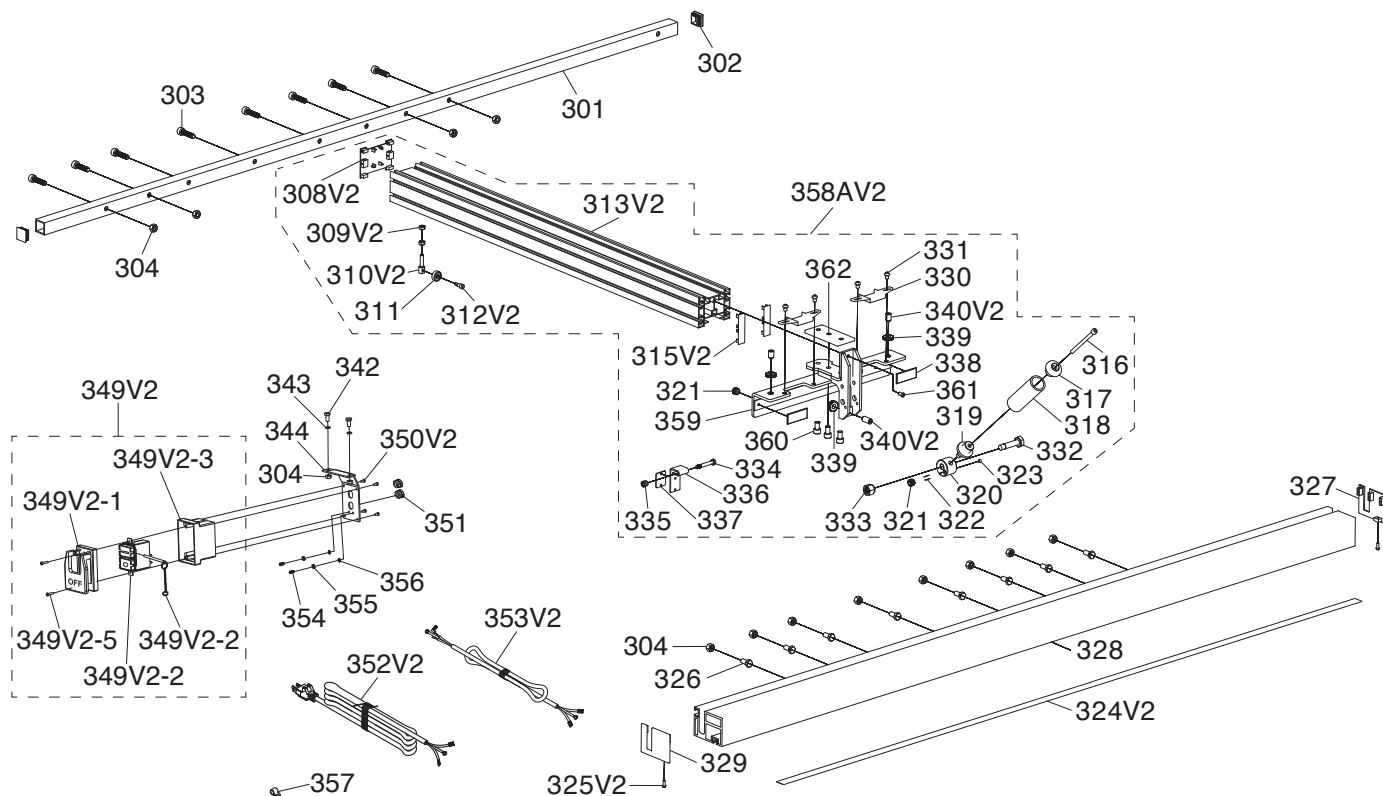


REF	PART #	DESCRIPTION
301	P0771Z301	REAR RAIL
302	P0771Z302	REAR RAIL CAP
303	P0771Z303	CAP SCREW M8-1.25 X 25
304	P0771Z304	HEX NUT M8-1.25
308V2	P0771Z308V2	FENCE ASSEMBLY CAP V2.06.19
309V2	P0771Z309V2	HEX NUT M6-1 V2.06.19
310V2	P0771Z310V2	LIMIT SHAFT M6-1 V2.06.19
311	P0771Z311	BALL BEARING 696-2RS
312V2	P0771Z312V2	CAP SCREW M5-.8 X 12 V2.06.19
313V2	P0771Z313V2	FENCE BASE V2.06.19
315V2	P0771Z315V2	FENCE FACE CAP V2.06.19
316	P0771Z316	CAP SCREW M8-1.25 X 85
317	P0771Z317	FENCE HANDLE END COVER
318	P0771Z318	FENCE HANDLE 19ID X 32OD X 90L
319	P0771Z319	HANDLE BASE SCR M8-1.25 X 8, 11 X 11
320	P0771Z320	FENCE HANDLE CAM
321	P0771Z321	SET SCREW M8-1.25 X 8
322	P0771Z322	COMPRESSION SPRING .8 X 5 X 15
323	P0771Z323	STEEL BALL 6MM
324V2	P0771Z324V2	SCALE LABEL V2.03.18
325V2	P0771Z325V2	TAP SCREW 3.5 X 9.5 V2.06.19
326	P0771Z326	HEX BOLT M8-1.25 X 25
327	P0771Z327	FRONT RAIL CAP RIGHT
328	P0771Z328	FRONT RAIL
329	P0771Z329	FRONT RAIL CAP LEFT
330	P0771Z330	INDICATOR
331	P0771Z331	PHLP HD SCR M6-1 X 8
332	P0771Z332	HEX BOLT M10-1.5 X 45
333	P0771Z333	LOCK NUT M10-1.5
334	P0771Z334	HEX BOLT M6-1 X 40

REF	PART #	DESCRIPTION
335	P0771Z335	LOCK NUT M6-1
336	P0771Z336	SPRING PLATE
337	P0771Z337	SLIDE PLATE 30 X 24 X 2
338	P0771Z338	SLIDE PLATE 50 X 20 X 2
339	P0771Z339	KNURLED NUT M10-1.5
340V2	P0771Z340V2	SET SCREW M10-1.5 X 17, PT V2.05.18
342	P0771Z342	HEX BOLT M8-1.25 X 16
343	P0771Z343	LOCK WASHER 8MM
344	P0771Z344	SWITCH BRACKET
346	P0771Z346	SWITCH PANEL
349V2	P0771Z349V2	SWITCH BOX ASSEMBLY V2.07.24
349V2-1	P0771Z349V2-1	SWITCH PADDLE
349V2-2	P0771Z349V2-2	SWITCH KEDU KJD17B
349V2-3	P0771Z349V2-3	SWITCH BOX
349V2-4	P0771Z349V2-4	LOCKOUT PIN AND CHAIN
349V2-5	P0771Z349V2-5	TAP SCREW M4 X 25
350V2	P0771Z350V2	TAP SCREW M4 X 14 V2.05.17
351	P0771Z351	STRAIN RELIEF 1/2"-3/8" SNAP-IN ST
352	P0771Z352	POWER CORD 14G 3W 78" 5-15P
353	P0771Z353	MOTOR CORD 14G 3W 47"
354	P0771Z354	PHLP HD SCR M5-.8 X 8
355	P0771Z355	LOCK WASHER 5MM
356	P0771Z356	EXT TOOTH WASHER 5MM
357	P0771Z357	ADJUSTABLE CABLE CLAMP
358AV2	P0771Z358AV2	FENCE ASSEMBLY W/O RAILS V2.06.19
359	P0771Z359	FENCE FIXED SEAT
360	P0771Z360	CAP SCREW M8-1.25 X 16
361	P0771Z361	TAP SCREW M4.2 X 13
362	P0771Z362	FENCE PLATE



Blade Guard

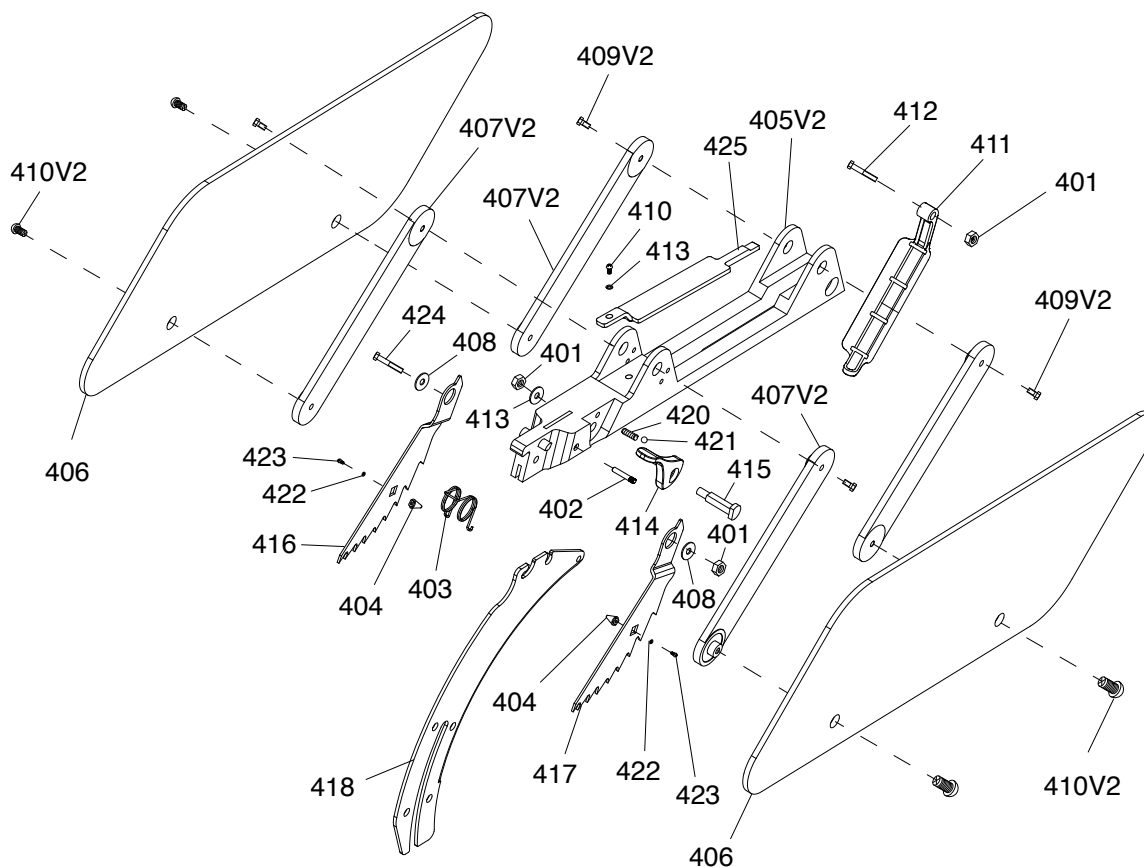


REF	PART #	DESCRIPTION
401	P0771Z401	LOCK NUT M5-.8
402	P0771Z402	SET PIN
403	P0771Z403	TORSION SPRING
404	P0771Z404	SCREW CAP
405V2	P0771Z405V2	BLADE GUARD BODY V2.01.21
406	P0771Z406	BARRIER
407V2	P0771Z407V2	BARRIER CONNECTING BAR V2.01.21
408	P0771Z408	FLAT WASHER 5MM
409V2	P0771Z409V2	SHOULDER SCR M5-.8 X 10, 7 X 5 V2.01.21
410	P0771Z410	PHLP HD SCR M5-.8 X 10 V1
410V2	P0771Z410V2	SHOULDER SCREW M6-1 X 10, 8 X 4 V2.01.21
411	P0771Z411	GUARD RAIL
412	P0771Z412	PHLP HD SCR M5-.8 X 25

REF	PART #	DESCRIPTION
413	P0771Z413	FLAT WASHER 5MM
414	P0771Z414	BLADE GUARD LOCK LEVER
415	P0771Z415	BLADE GUARD LOCK LEVER SCREW
416	P0771Z416	ANTI-KICKBACK PAWL (L)
417	P0771Z417	ANTI-KICKBACK PAWL (R)
418	P0771Z418	SPREADER/RIVING KNIFE
420	P0771Z420	COMPRESSION SPRING
421	P0771Z421	STEEL BALL 4MM
422	P0771Z422	FLAT WASHER 3MM
423	P0771Z423	TAP SCREW M3 X 6
424	P0771Z424	CAP SCREW M5-.8 X 30
425	P0771Z425	BLADE GUARD WINDOW COVER



Miter Gauge

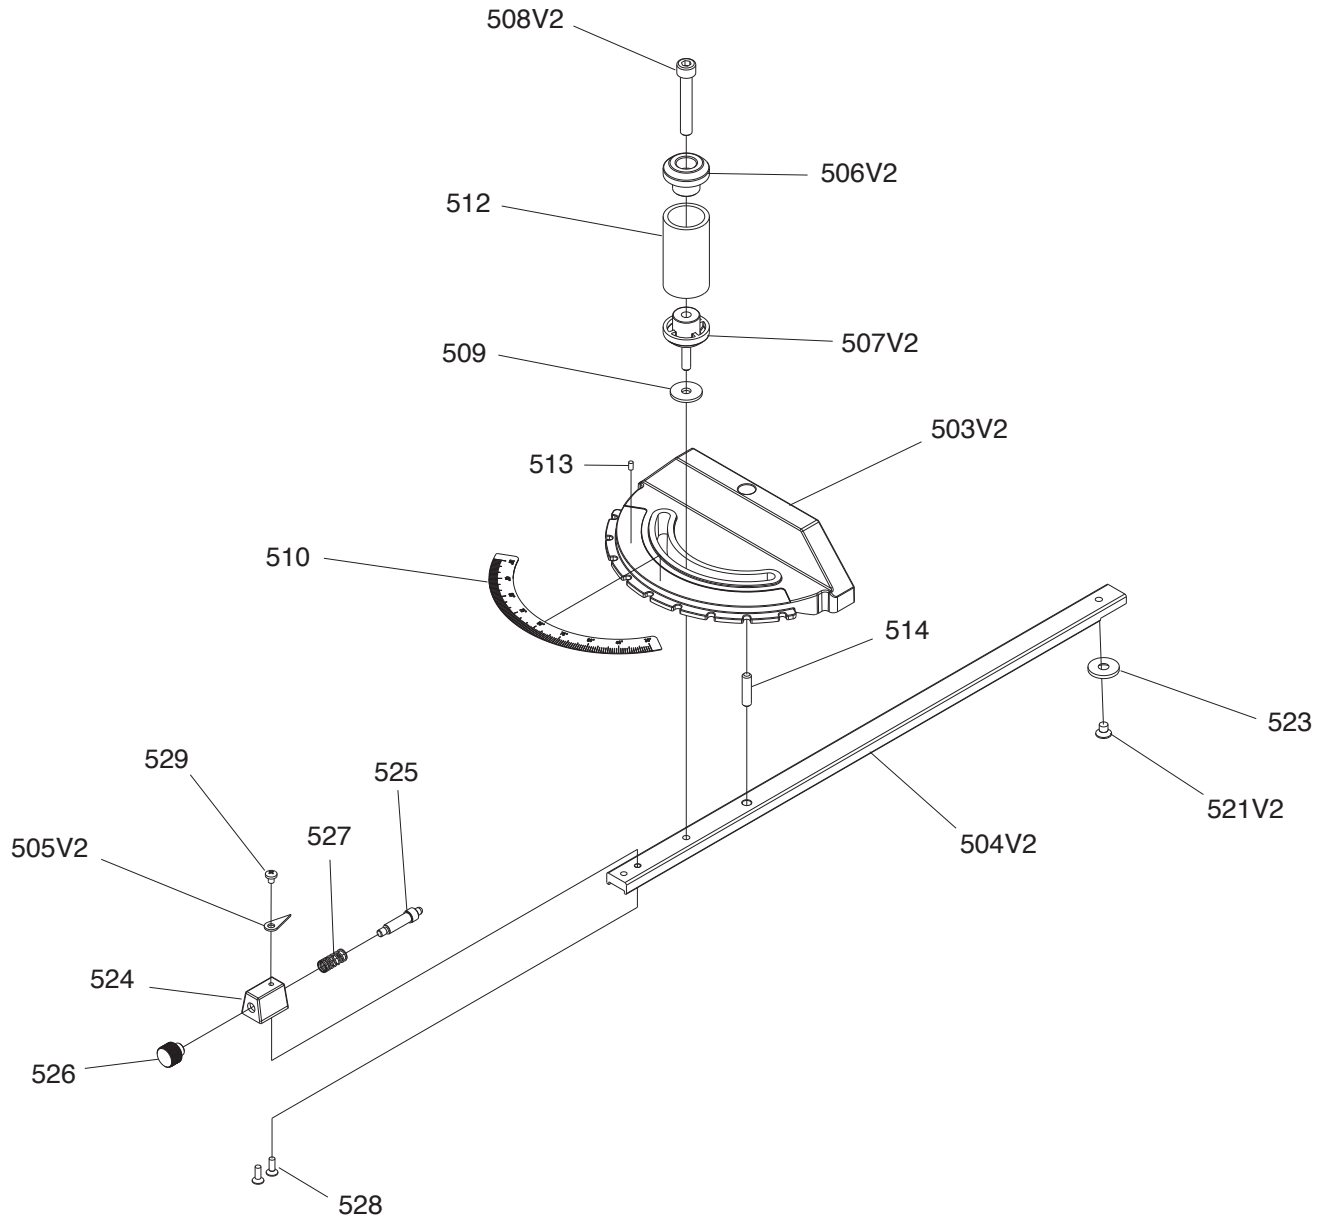


REF	PART #	DESCRIPTION
503V2	P0771Z503V2	MITER GAUGE BODY V2.04.22
504V2	P0771Z504V2	MITER BAR V2.04.22
505V2	P0771Z505V2	ANGLE INDICATOR V2.04.22
506V2	P0771Z506V2	UPPER HANDLE CAP V2.04.22
507V2	P0771Z507V2	LOWER HANDLE CAP V2.04.22
508V2	P0771Z508V2	CAP SCREW M8-1.25 X 55 V2.04.22
509	P0771Z509	HANDLE WASHER 6 X 20
510	P0771Z510	MITER SCALE
512	P0771Z512	MITER HANDLE
513	P0771Z513	RIVET 2 X 5MM

REF	PART #	DESCRIPTION
514	P0771Z514	MITER PIN
521V2	P0771Z521V2	FLAT HD SCR M6-1 X 8 V2.04.22
523	P0771Z523	MITER BAR GUIDE WASHER
524	P0771Z524	ANGLE INDICATOR SEAT
525	P0771Z525	STOP PIN
526	P0771Z526	STOP PIN KNOB
527	P0771Z527	COMPRESSION SPRING 0.5 X 9.5 X 24
528	P0771Z528	PHLP HD SCR M4-.7 X 10
529	P0771Z529	PHLP HD SCR M4-.7 X 6



Labels & Cosmetics

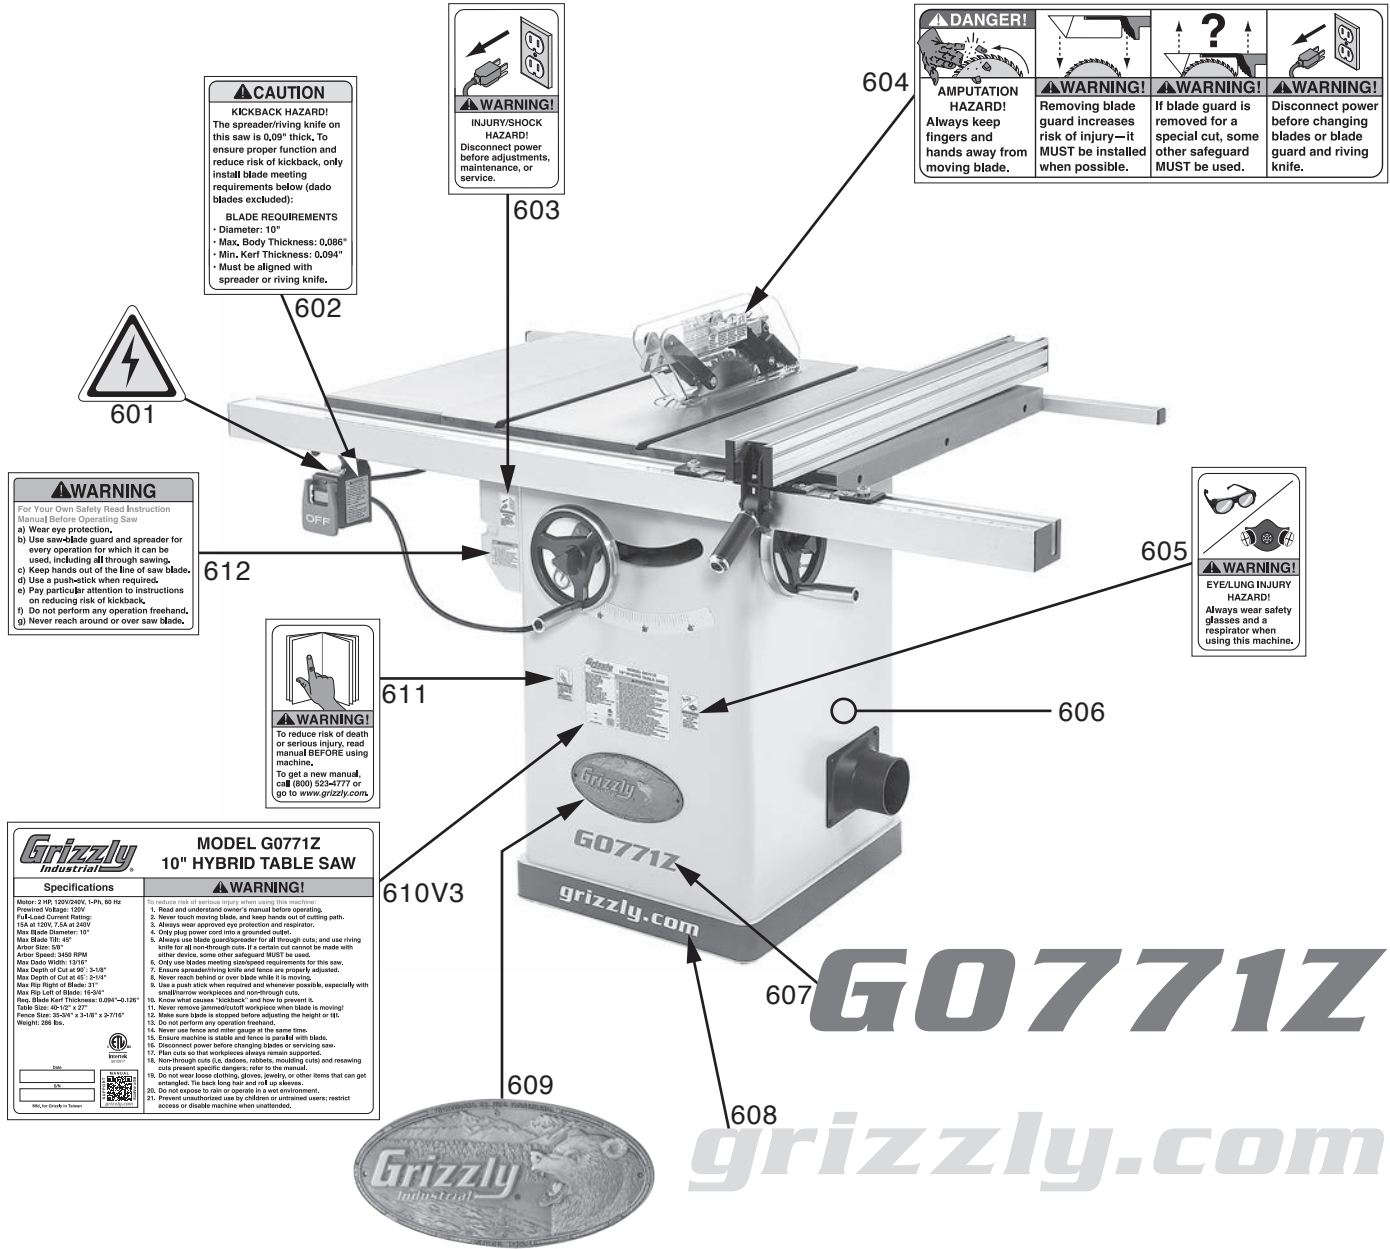

REF	PART #	DESCRIPTION
601	P0771Z601	ELECTRICITY LABEL
602	P0771Z602	SPREADER/RIVING PRECAUTION LABEL
603	P0771Z603	DISCONNECT POWER LABEL
604	P0771Z604	TABLE SAW BLADE GUARD LABEL
605	P0771Z605	GLASSES/RESPIRATOR LABEL
606	P0771Z606	TOUCH-UP PAINT, GRIZZLY BEIGE

REF	PART #	DESCRIPTION
607	P0771Z607	MODEL NUMBER LABEL
608	P0771Z608	GRIZZLY.COM LABEL
609	P0771Z609	GRIZZLY NAMEPLATE - SMALL
610V3	P0771Z610V3	MACHINE ID LABEL V3.02.20
611	P0771Z611	READ MANUAL LABEL
612	P0771Z612	TABLE SAW WARNING LABEL

! WARNING

Safety labels help reduce the risk of serious injury caused by machine hazards. If any label comes off or becomes unreadable, the owner of this machine **MUST** replace it in the original location before resuming operations. For replacements, contact (800) 523-4777 or www.grizzly.com.



WARRANTY & RETURNS

Grizzly Industrial, Inc. warrants every product it sells for a period of **1 year** to the original purchaser from the date of purchase. This warranty does not apply to defects due directly or indirectly to misuse, abuse, negligence, accidents, repairs or alterations or lack of maintenance. This is Grizzly's sole written warranty and any and all warranties that may be implied by law, including any merchantability or fitness, for any particular purpose, are hereby limited to the duration of this written warranty. We do not warrant or represent that the merchandise complies with the provisions of any law or acts unless the manufacturer so warrants. In no event shall Grizzly's liability under this warranty exceed the purchase price paid for the product and any legal actions brought against Grizzly shall be tried in the State of Washington, County of Whatcom.

We shall in no event be liable for death, injuries to persons or property or for incidental, contingent, special, or consequential damages arising from the use of our products.

The manufacturers reserve the right to change specifications at any time because they constantly strive to achieve better quality equipment. We make every effort to ensure that our products meet high quality and durability standards and we hope you never need to use this warranty.

In the event you need to use this warranty, contact us by mail or phone and give us all the details. We will then issue you a "Return Number," which must be clearly posted on the outside as well as the inside of the carton. We will not accept any item back without this number. Proof of purchase must accompany the merchandise.

Please feel free to write or call us if you have any questions about the machine or the manual.

Thank you again for your business and continued support. We hope to serve you again soon.

For further information about the warranty, visit <https://www.grizzly.com/forms/warranty> or scan the QR code below to be automatically directed to our warranty page.





Buy Direct and Save with Grizzly® – Trusted, Proven and a Great Value!
~Since 1983~

*Visit Our Website Today For
Current Specials!*

**ORDER
24 HOURS A DAY!
1-800-523-4777**

