



For questions or help with this product contact Tech Support at (570) 546-9663 or techsupport@grizzly.com

MODEL H8240 120V MAGNETIC ON/OFF SWITCH INSTRUCTIONS

!WARNING

To reduce risk of serious burns, electrocution or death when installing this switch:

- Only use this switch to replace an existing machine switch that has the same physical configuration and equivalent electrical specifications/ratings.
- Installation must only be performed by an electrician or qualified service personnel, and all applicable electrical codes must be adhered to.
- Turn off and completely disconnect all power sources to the machine before installing the switch.
- Do not use this switch in wet or damp locations, or near explosive fumes or flammable liquids. It is not sealed or rated for these environments.
- Make sure there is a verified machine ground on the circuit this switch is installed.

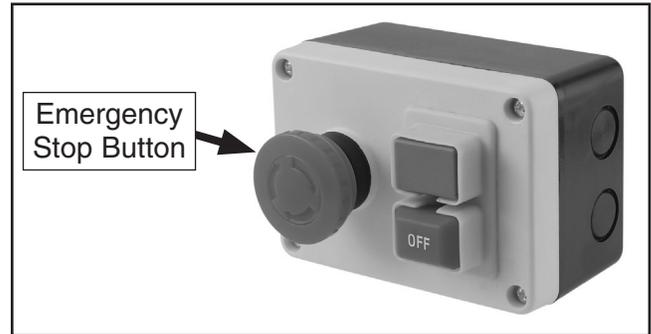


Figure 1. H8240 Magnetic ON/OFF Switch.

Introduction

The Model H8240 features a magnetic ON/OFF switch with a large emergency stop button. The electrical box has four $\frac{5}{8}$ " knockouts for wire access and four $\frac{1}{4}$ " knockouts for mounting the assembly.

Specifications

Rated Horsepower.....	$\frac{1}{2}$ HP
Rated Voltage.....	120V
ON/OFF Switch Rated Current.....	16A
Emergency Switch Rated Current.....	18A
Dimensions.....	$3\frac{1}{8}$ " x $4\frac{1}{2}$ "

COPYRIGHT © APRIL, 2011 BY GRIZZLY INDUSTRIAL, INC., REVISED JUNE, 2014 (TS)
**WARNING: NO PORTION OF THIS INSTRUCTION SHEET MAY BE REPRODUCED IN ANY SHAPE
OR FORM WITHOUT THE WRITTEN APPROVAL OF GRIZZLY INDUSTRIAL, INC.**

#TS13927 PRINTED IN CHINA

Installation

When installing the H8240 switch, use the wiring diagram in **Figure 2** to ensure proper wire connections.

!WARNING

This switch is intended to be connected to stranded wire with insulated crimp-type wire terminals.

The ON/OFF button requires female quick-disconnect wire terminals.



The emergency stop switch requires ring wire terminals.



All crimps must be "pull-checked" to ensure that wires are securely crimped and will not fall out with moderate tension or when exposed to normal machine vibration.

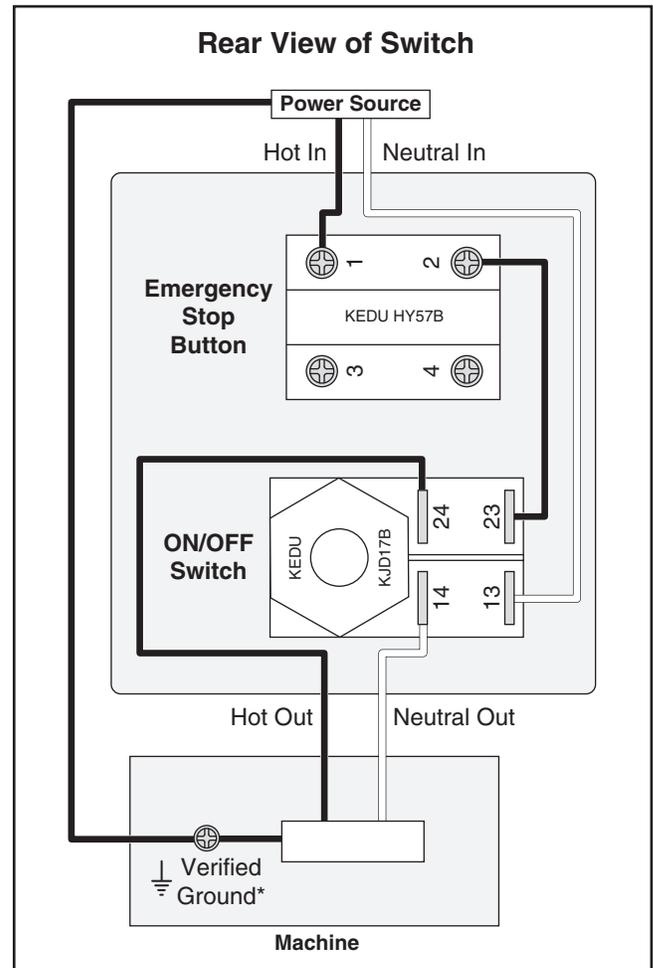


Figure 2. H8240 wiring diagram.

*The machine MUST be connected to a verified ground. In the event of certain malfunctions or breakdowns, grounding reduces the risk of electric shock by providing a path of least resistance for electric current.

NOTICE

To reset the emergency stop button for operation, twist it clockwise until it pops out.

